



# Acer Aspire ES1-111M-C7DE Battery Replacement

Replace the battery pack of the Acer Aspire netbook.

Written By: Reid Becker



# INTRODUCTION

Instructions for taking the laptop apart and removing the battery pack. Be sure to have somewhere to place the screws while working on the device so you do not lose them.

---

## TOOLS:

- [JIS #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



- Unscrew the 13 6.2mm screws located on the bottom of the laptop using the JIS #0 screwdriver.

## Step 2



- Using a plastic opening tool, gently pry the lower case off. Place aside.




## Step 3 — Battery



- Locate the small black button surrounded by a white circle near the battery on the motherboard.
- Press and hold the button for five seconds.

## Step 4

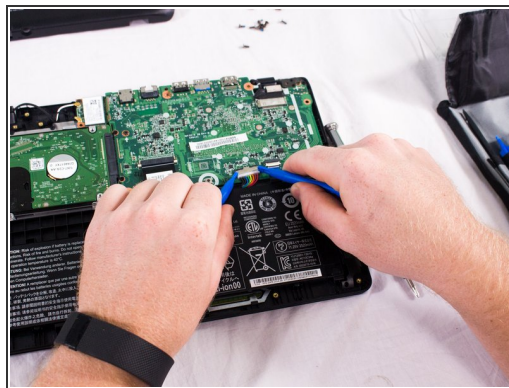

- Using your fingers or the small plastic opening tools, disconnect the battery connection from the motherboard by pinching and pulling back on both sides of the connector.

## Step 5



- Locate the two 6.2mm black screws holding the battery in place and unscrew them.
- Gently lift and remove the battery.

To reassemble your device, follow these instructions in reverse order.