



# Sony Vaio VPCEG37FM RAM Replacement

Written By: Brayelly Servellon






## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [ESD Bracelet](#) (1)
-

## Step 1 — Battery

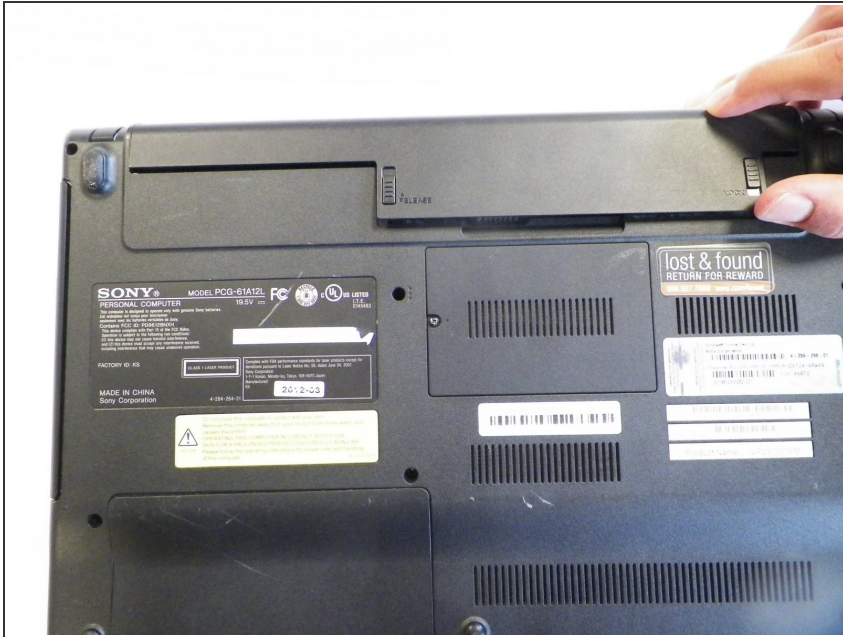


- Unlock the battery by sliding the lock upwards.

## Step 2



- Slide the release upwards and lift out the battery to remove.
- Once battery is removed, long press the Power button for 30-60s and discharge any remaining power inside of the computer.
- Put on the ESD bracelet, making sure the metal circle is touching your skin. Remove the alligator clip from the other end of the bracelet and insert the jack into the ground plug of an active electrical outlet. (the round hole). Do not move forward until you are grounded.

## Step 3 — RAM

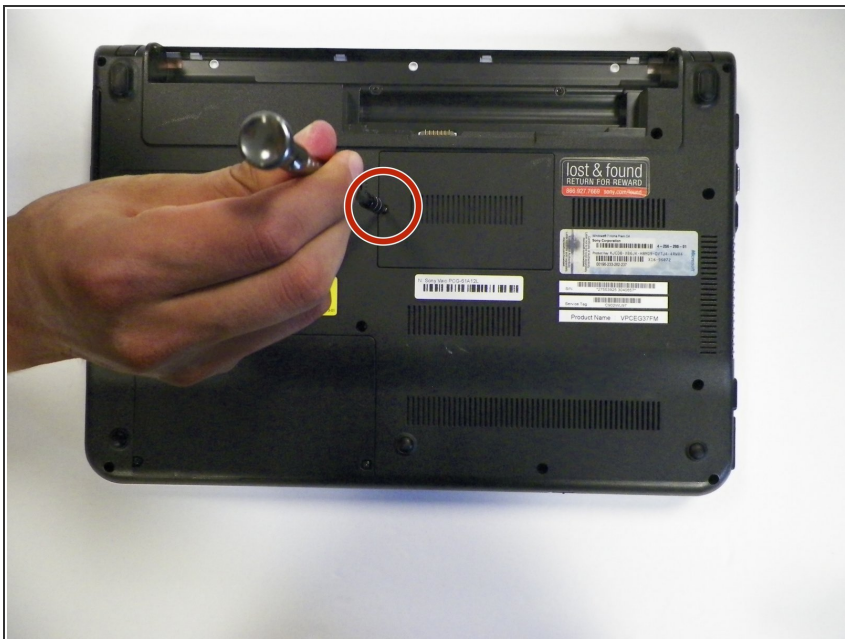


- Use a Phillips #1 screw to unscrew the 6.5 mm screw keeping the cover.

## Step 4



- Gently lift cover up to expose the RAM.
- ① Screw will stay attached to cover when being removed.

## Step 5

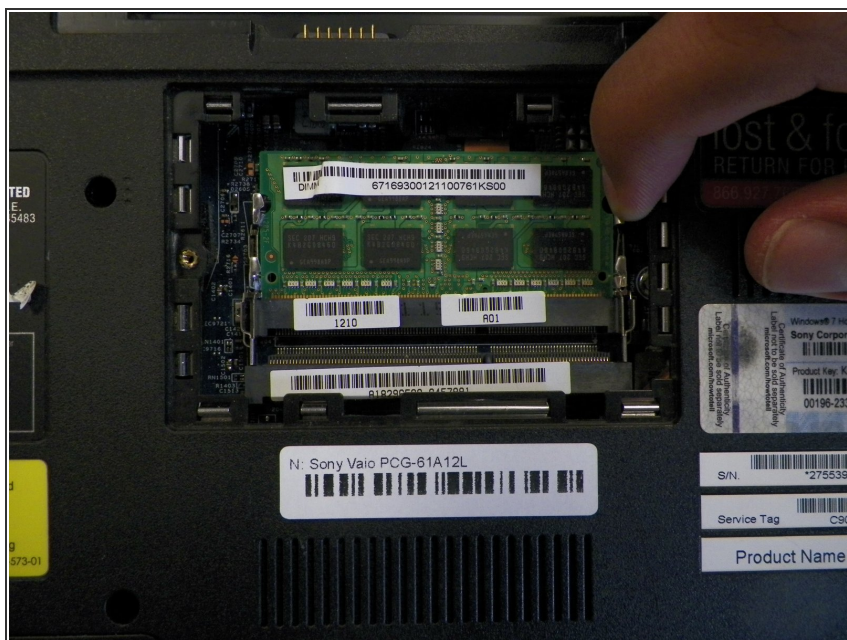

- Pull the clips, holding the RAM in place, to the side to pop the RAM out. Then remove the RAM.

⚠ Avoid contact with black squares. Hand oils may damage memory.

To reassemble your device, follow these instructions in reverse order.