


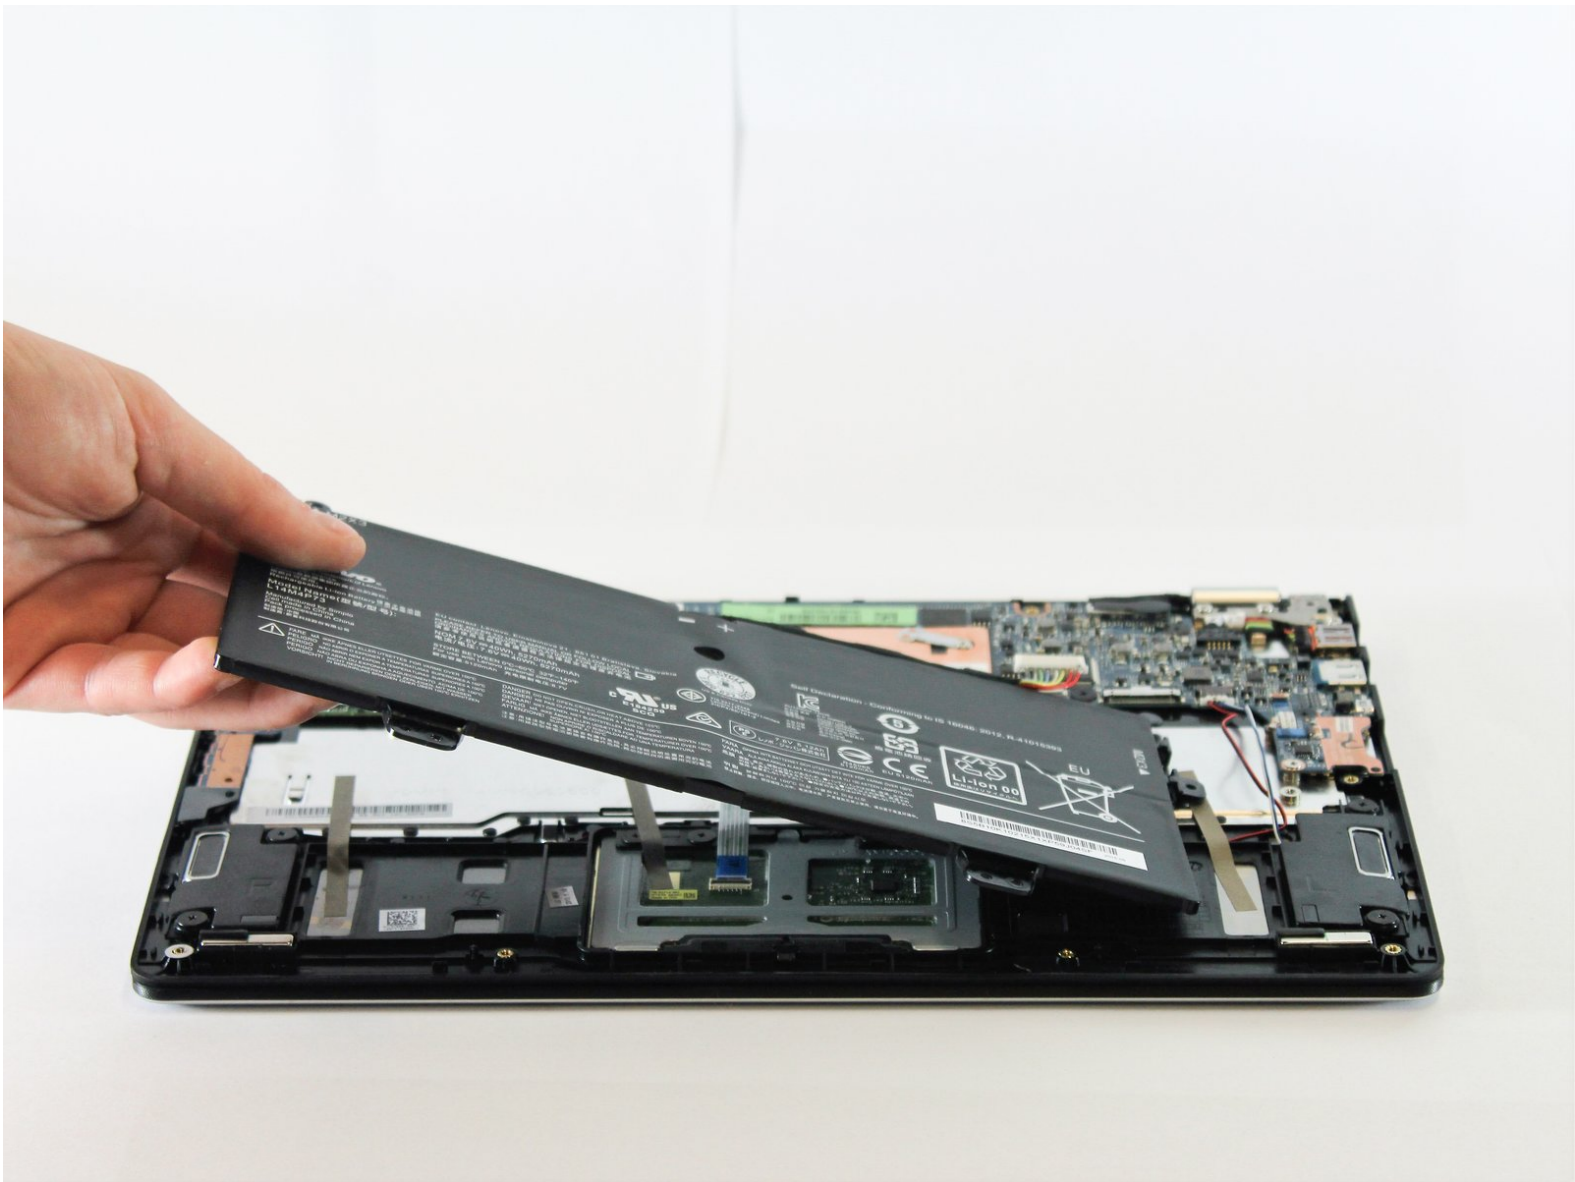

Lenovo Yoga 700-11ISK Battery Replacement

The Lenovo Yoga 700-11ISK is powered by an internal battery located directly under the back panel. This guide walks you through the steps to remove and replace it.

Written By: Sean Wong



INTRODUCTION

Does your Yoga 700 no longer get the battery life that it used to or not turn on without being plugged to an outlet? Your battery may be defective, and this guide will help you remove and replace your battery unit so you'll be able to take your Yoga on the go again.



TOOLS:

- [T7 Torx Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:

- [Lenovo Yoga 700-11ISK Battery](#) (1)

Step 1 — Back Panel



- Flip your device so that the bottom panel is facing up.
- Remove the eleven 5mm Torx T5 screws from the back panel.

Step 2




- Use a spudger to unclip clips on the front and near the USB ports on each side
- Lift the back panel off

Step 3 — Battery



- Remove the two 3mm Phillips #1 screws holding the battery to the laptop chassis.
- Disconnect the battery from the IO board by holding the connector by the sides and gently pulling the connector out.

Step 4

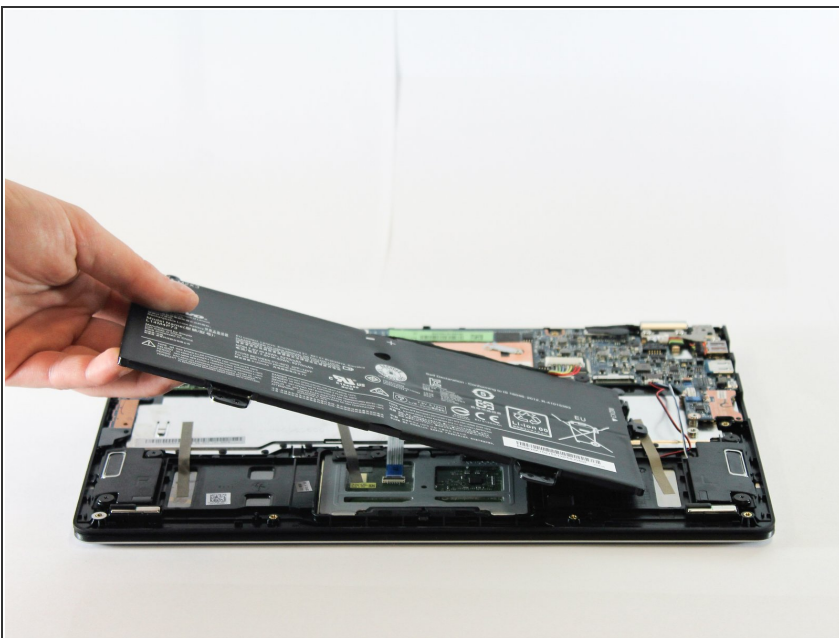

- Carefully remove the battery from the laptop.
- ⚠ Make sure that all wires still connected to the laptop are out of the way and not pulled out with the battery.

To reassemble your device, follow these instructions in reverse order.