



Xbox One Wireless Controller Teardown

if you want to see the inside of your Xbox One Controller follow these steps

Written By: ubaldo gutierrez



 **TOOLS:**


- [iFixit Opening Tool](#) (1)
 - [TR8 Torx Security Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Get an Xbox One Controller



- Start off with having an Xbox One Controller (:

Step 2 — Remove First Screw

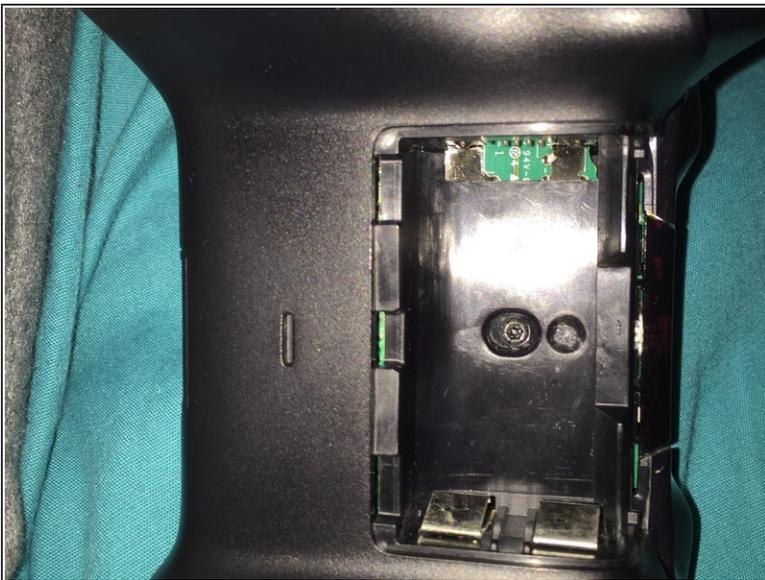

- Start with removing the battery pack and exposing the T8 security screw. The screw should be hidden behind a warranty sticker.

Step 3 — Remove side panels



- Remove the side panels exposing the second T8 security screw using a spudger, an iFixit Opening Tool, or your nails, each choice is fun.

Step 4 — Remove all screws



- By removing all side panels all 5 T8 security screws have appeared!

Step 5 — Remove Faceplate



- Once you removed the T8 security screws remove the front face plate.

Step 6 — Tape down rumble motors



- Tape down the rumbler motors to prevent them from falling out.

Step 7 — Remove T6 screws



- Remove the T6 screws to remove the PCB's.
- It takes a pull to separate the connectors.
- Watch the wires! You can not fully remove the circuit board without removing the wires and it requires soldering.

Step 8



- Remove the top cover, it folds over.
- There are 6 T6 screws to remove.

Step 9



- Remove the circuit board
- Under the rubber is the A B X Y buttons.

Step 10



- Follow the instructions in reverse to get everything together again. :D