



Asus VivoBook X540SA-BPD0602V Keyboard Replacement

In this guide, the Asus VivoBook X540SA-BPD0602V laptop case will be disassembled step by step to remove the keyboard.

Written By: Ziyad Alharbi



INTRODUCTION

In this guide you will learn how to remove the keyboard and expose the inner components of your Asus Vivobook X540SA-BPD0602V. If you need to make any repairs to your laptop, the first step is to safely take it apart.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Keyboard



- Power down the laptop using the device's power button in top right corner of the keyboard. Ensure that the device's power cord is disconnected.

Step 2



- Flip the laptop over so the back panel is displayed.

Step 3



- Using a Phillips #1 screwdriver, remove the ten screws from the back panel.
- Remove the two battery screws (15.6 mm)
- Two top corner screws (12.5 mm)
- Six case screws (9.7mm)

Step 4




- Flip the laptop back over and open it, revealing the screen and keyboard.

Step 5



- Using the blue plastic opening tool, wedge and loosen the seal all the way around the edges. Carefully lift up the keyboard panel.
- ⚠ When lifting the keyboard panel, do not lift it all the way as the two connection ribbons to the motherboard must be disconnected.
- ⓘ It is recommended to break the seal of the case starting at the upper corners closest to the display monitor .

Step 6

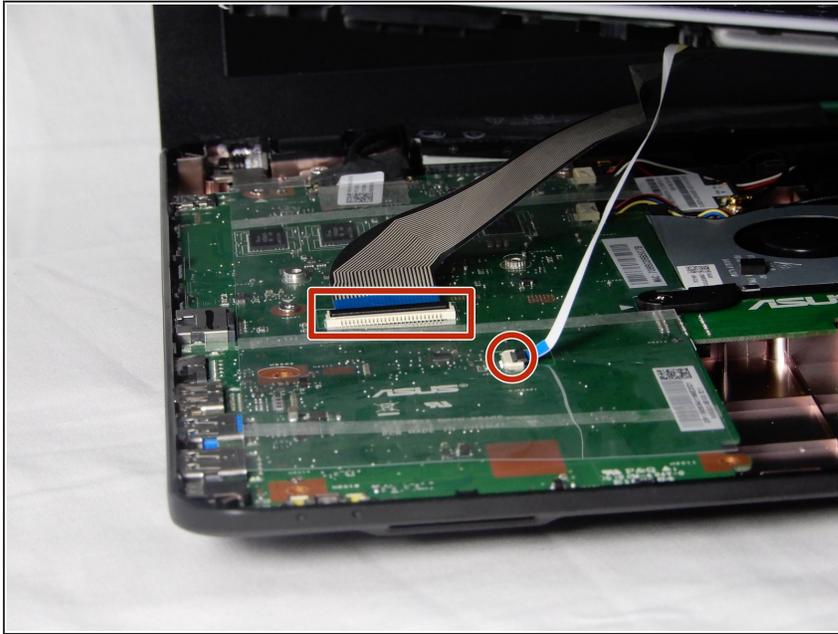

- Observe where the ribbons connect to the motherboard, there are two connections. Each connection has a black clamp. To remove the ribbon, lift the black clamp up to disconnect it.

To reassemble your device, follow these instructions in reverse order.