



Asus Z54C-JS31 HDD/RAM Cover Panel Replacement

This guide will show how to remove the HDD/RAM cover panel of an Asus Z54C-JS31, which is required to be able to replace several major inside components.

Written By: Mark DeSimone




INTRODUCTION

If you need to replace any of the internal components of your laptop, you will first have to remove the HDD/RAM cover panel to gain access. This guide will show you the necessary steps needed to accomplish this.

TOOLS:



- [Phillips #000 Screwdriver](#) (1)

Step 1 — HDD/RAM Cover Panel

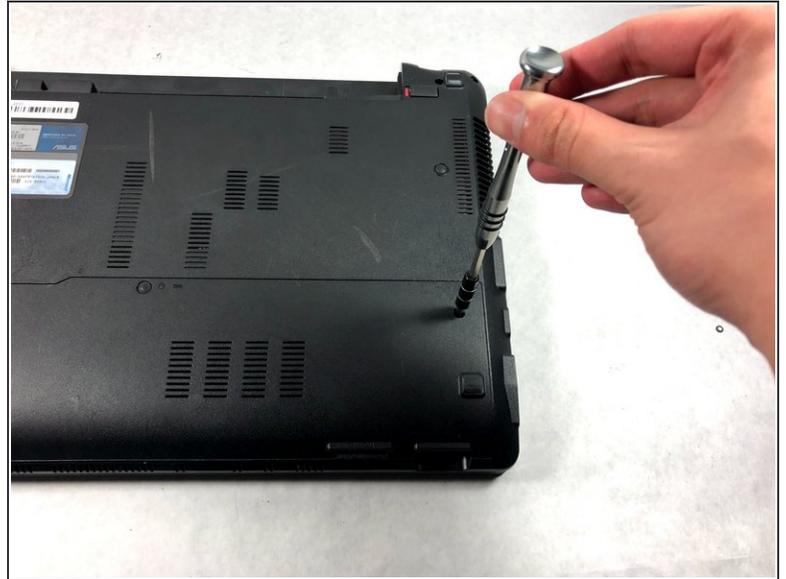

- Use a Phillips #000 screwdriver to remove the two 9mm screws from the HDD/RAM cover panel.

Step 2

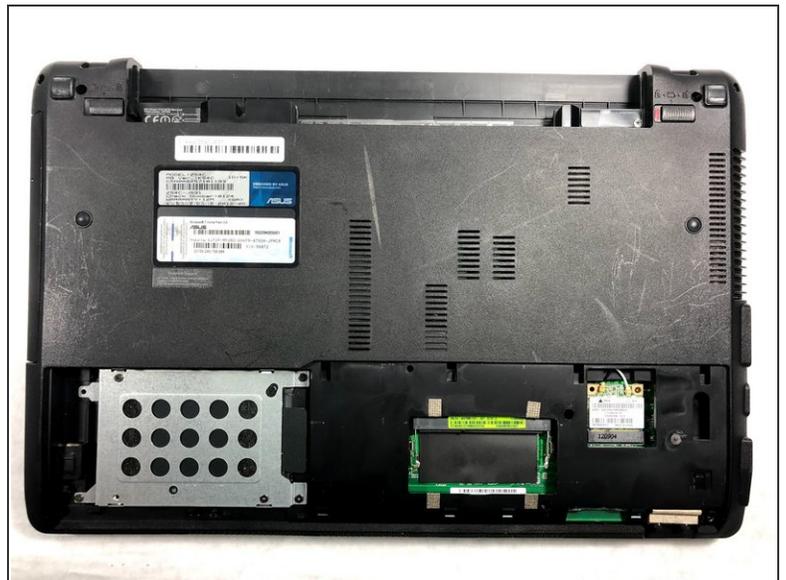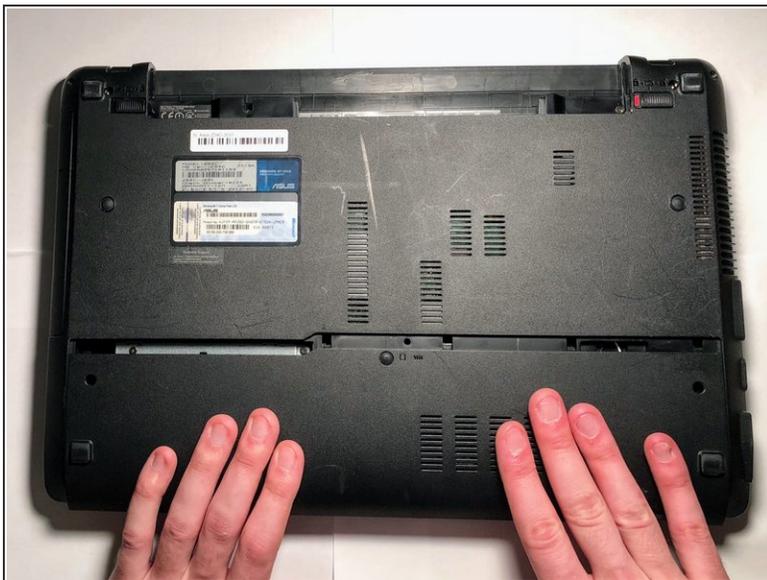

- Slide the back panel off by placing a hand on each corner and pulling the panel towards you.

To reassemble your device, follow these instructions in reverse order.