



# Lenovo G50-80 80E5 Keyboard Replacement

Removing the keyboard for replacement or for further disassembly.

Written By: Victor







## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Keyboard

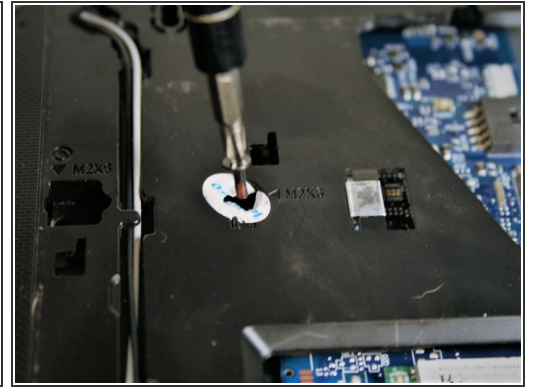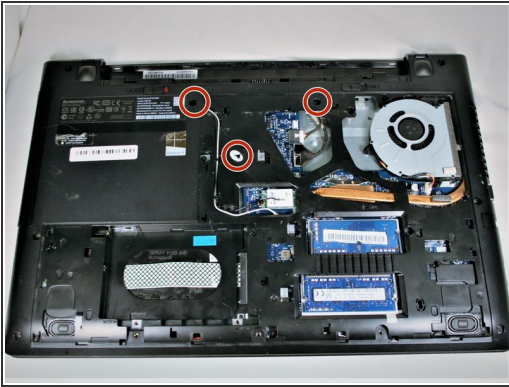



- Locate the 3 screws on the bottom, securing the keyboard.
- One Screw will be located under Lenovo sticker. Break sticker to gain access to screw.

## Step 2

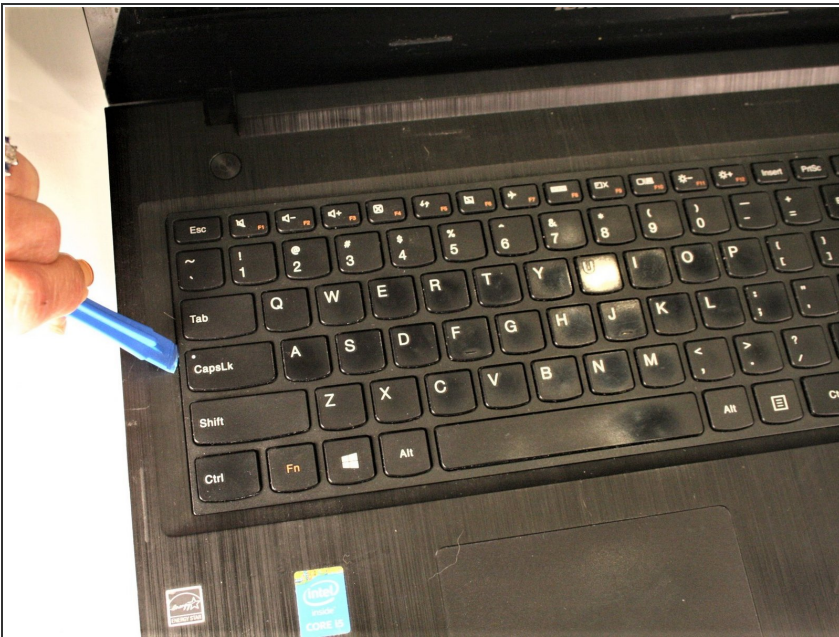


- Starting on side, gently pry up using spudger.

## Step 3

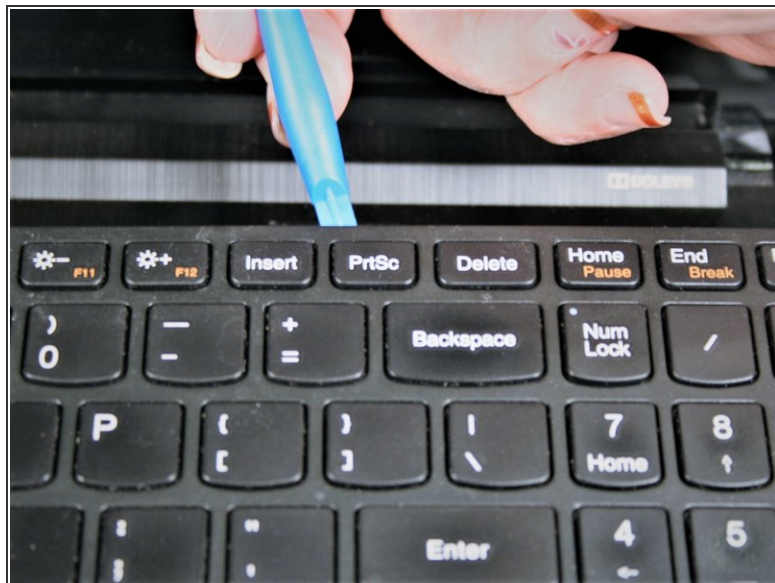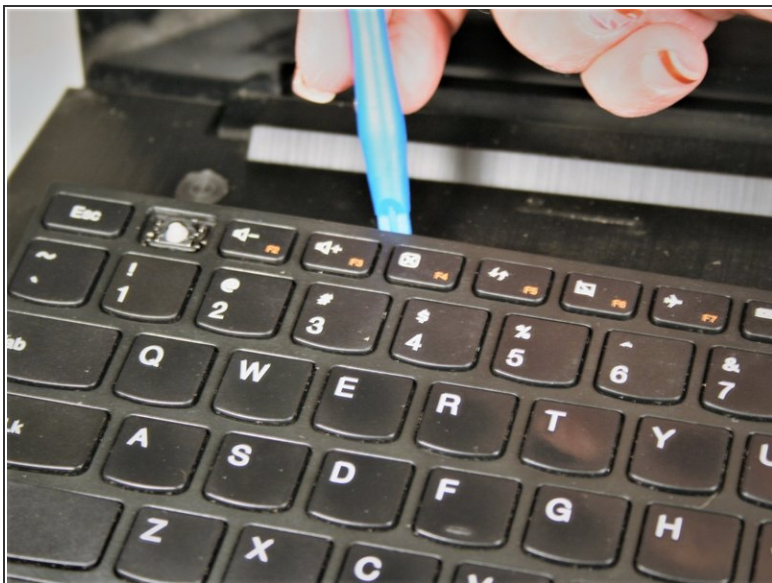


- Continue prying around top of keyboard

## Step 4

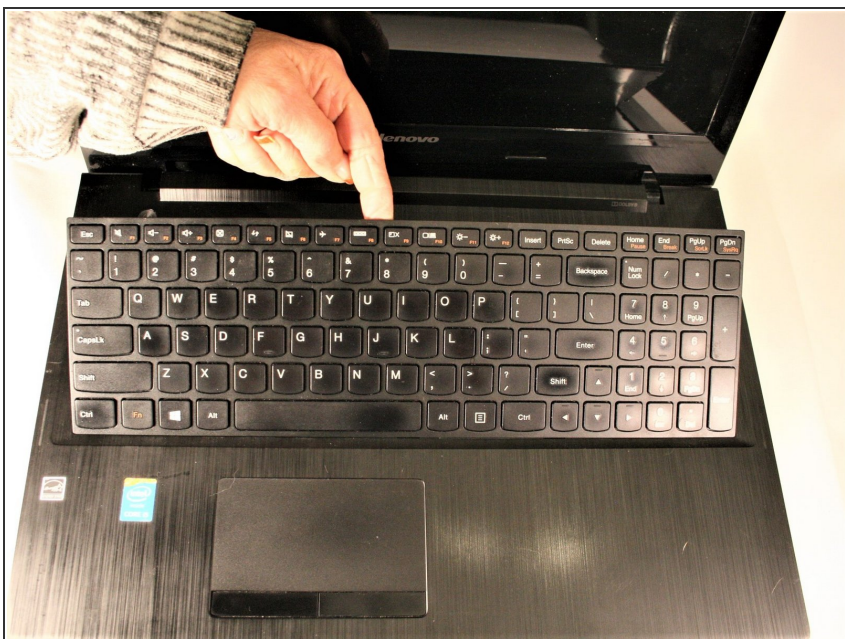


- Once the top of keyboard is loose, gently lift up

## Step 5

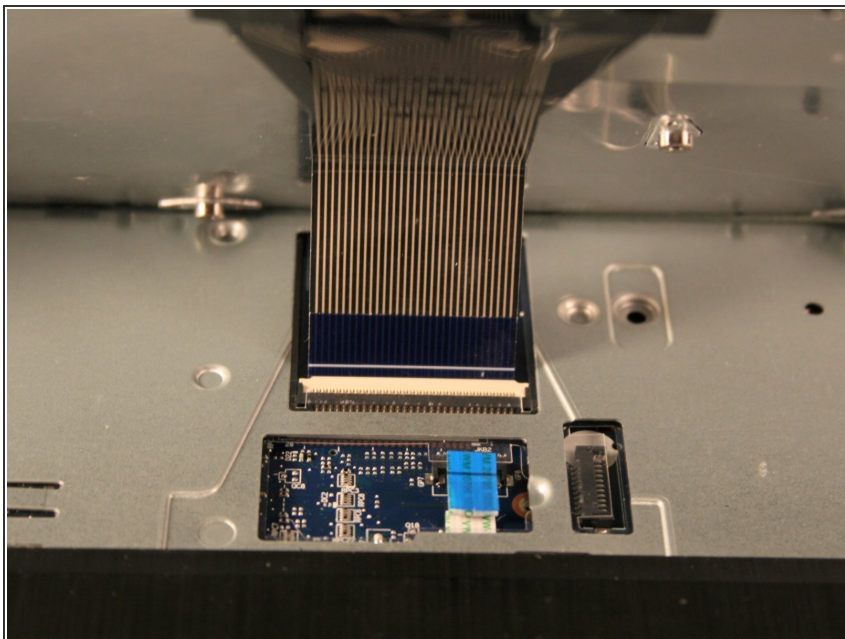


- lift up bottom of keyboard slightly, to access keyboard ribbon

## Step 6

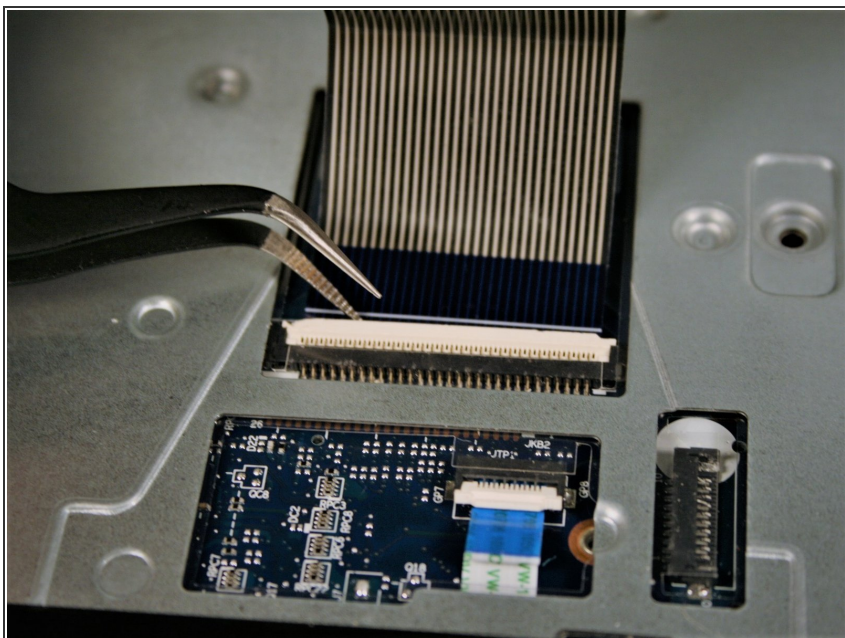

- Using tweezers, lift up clip to remove keyboard ribbon cable.

## Step 7

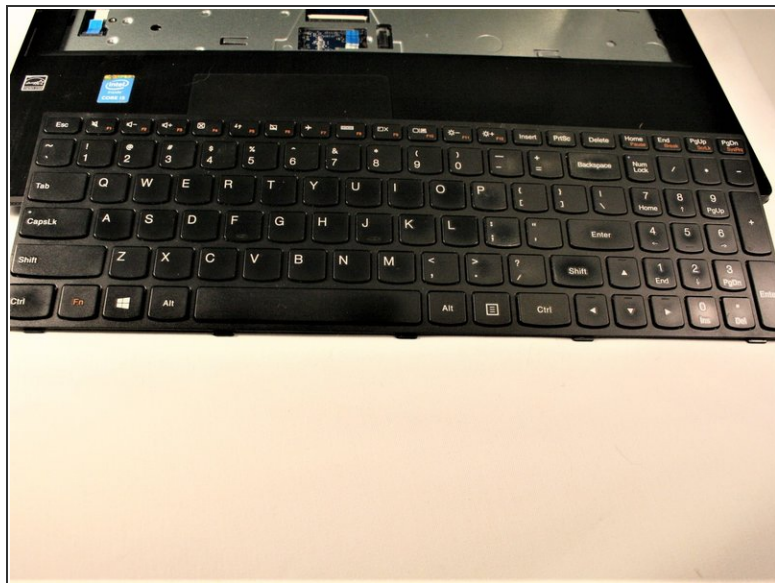

- Keyboard ribbon cable removed
- Once ribbon is removed, keyboard can be lifted out

To reassemble your device, follow these instructions in reverse order.