


# HP Pavilion 14-b015dx Palm Rest Replacement

In this guide, you will learn how to replace the palm rest of the HP Pavilion 14-b015dx Laptop.

Written By: Gregory Bridge

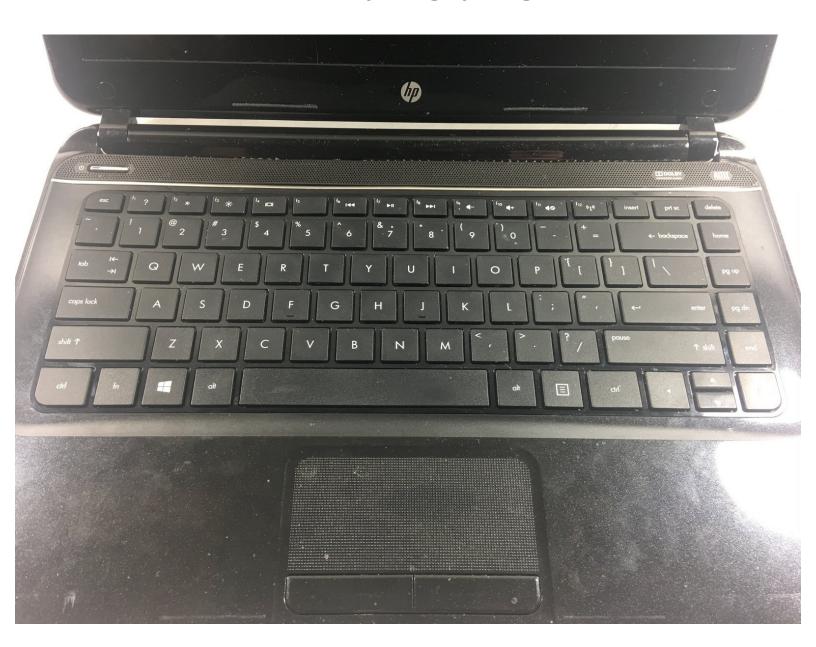

# **INTRODUCTION**

The purpose of this guide is to give the necessary steps to remove your HP Pavilion 14-b015dx palm rest.



# **TOOLS:**

- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)

#### Step 1 — Battery



Make sure the computer is completely powered down and unplug the power cord.

#### Step 2



 Place the device on your work surface with bottom facing up and the battery located at the top.



 Slide the left release tab toward the center of the computer to the unlock position. Next slid the right tab toward the center of the computer and hold it there while completing step 4.

# Step 4




 Remove the battery by sliding it upwards and away from the computer.

## Step 5 — Keyboard



 Unscrew the ten 6.0 mm Philips head screws on the base of the device with a Phillips #0 head screwdriver.

#### Step 6

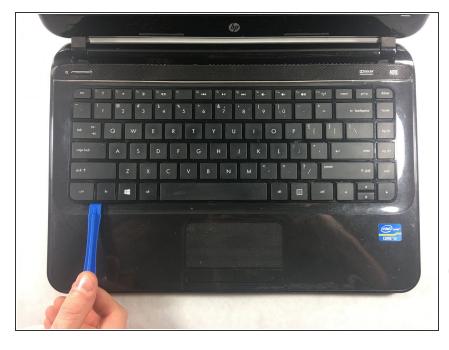


- Insert the plastic opening tool between the keyboard and the plastic housing.
- Pry the keyboard upward away from the device.
- Move the tool around the edge of the entire keyboard while continuing to pry.
- i You will hear the clips pop once you have released them.




- Once you have released all of the clips, slowly lift the keyboard exposing the ribbon cable.
- Lift the tab on the keyboard ZIF connector with a plastic opening tool and gently remove the ribbon cable.

#### Step 8 — Palm Rest

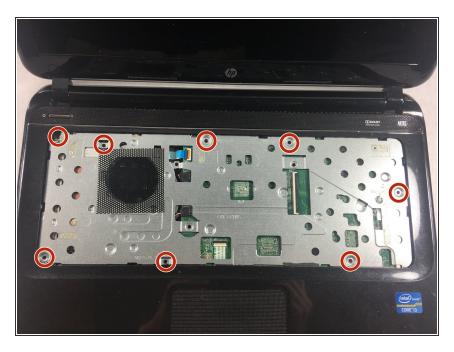


 Remove the eight 6.0 mm screws located under the keyboard with your Philips #0 screwdriver.

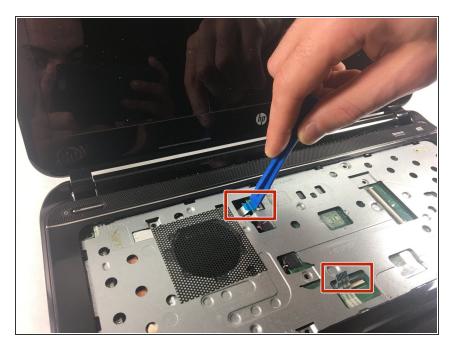

- Remove the track pad and power button ribbon cables.
  - Lift the locking bar on each connector with a plastic opening tool and gently remove the ribbon cables

#### Step 10

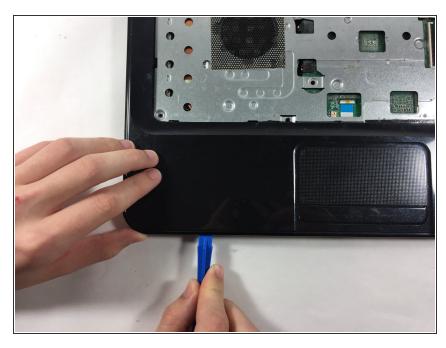

- To remove the palm rest, insert the plastic opening tool in the seam between the palm rest and the base.
- Pry upward to undo each clip.
- (i) Continue this process around the entire palm rest.



 Once all clips have been undone lift the palm rest away from the laptop.

To reassemble your device, follow these instructions in reverse order.