



Filter cleaning

Filter cleaning, for Panasonic ER430K.

Written By: Kyle



INTRODUCTION

This guide will assist in the cleaning of the trimmer filter

Step 1 — Filter cleaning



- Remove protective cover.

Step 2




- Rotate the blade block counter-clockwise and remove.

Step 3



- Remove the filter from Panasonic ER430K.

Step 4

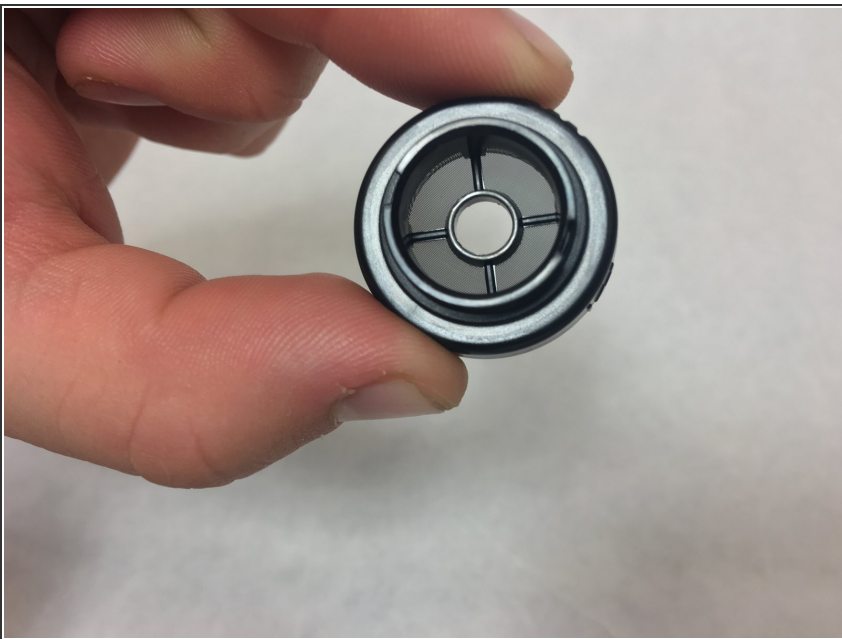

- Take filter, rinse with water, and dry.

To reassemble your device, follow these instructions in reverse order.