




Asus X200CA-HCL 1104G Headphone Jack Replacement

The simplest way to rectify a broken headphone jack is to replace the entire audio board.

Written By: Samantha Wahl

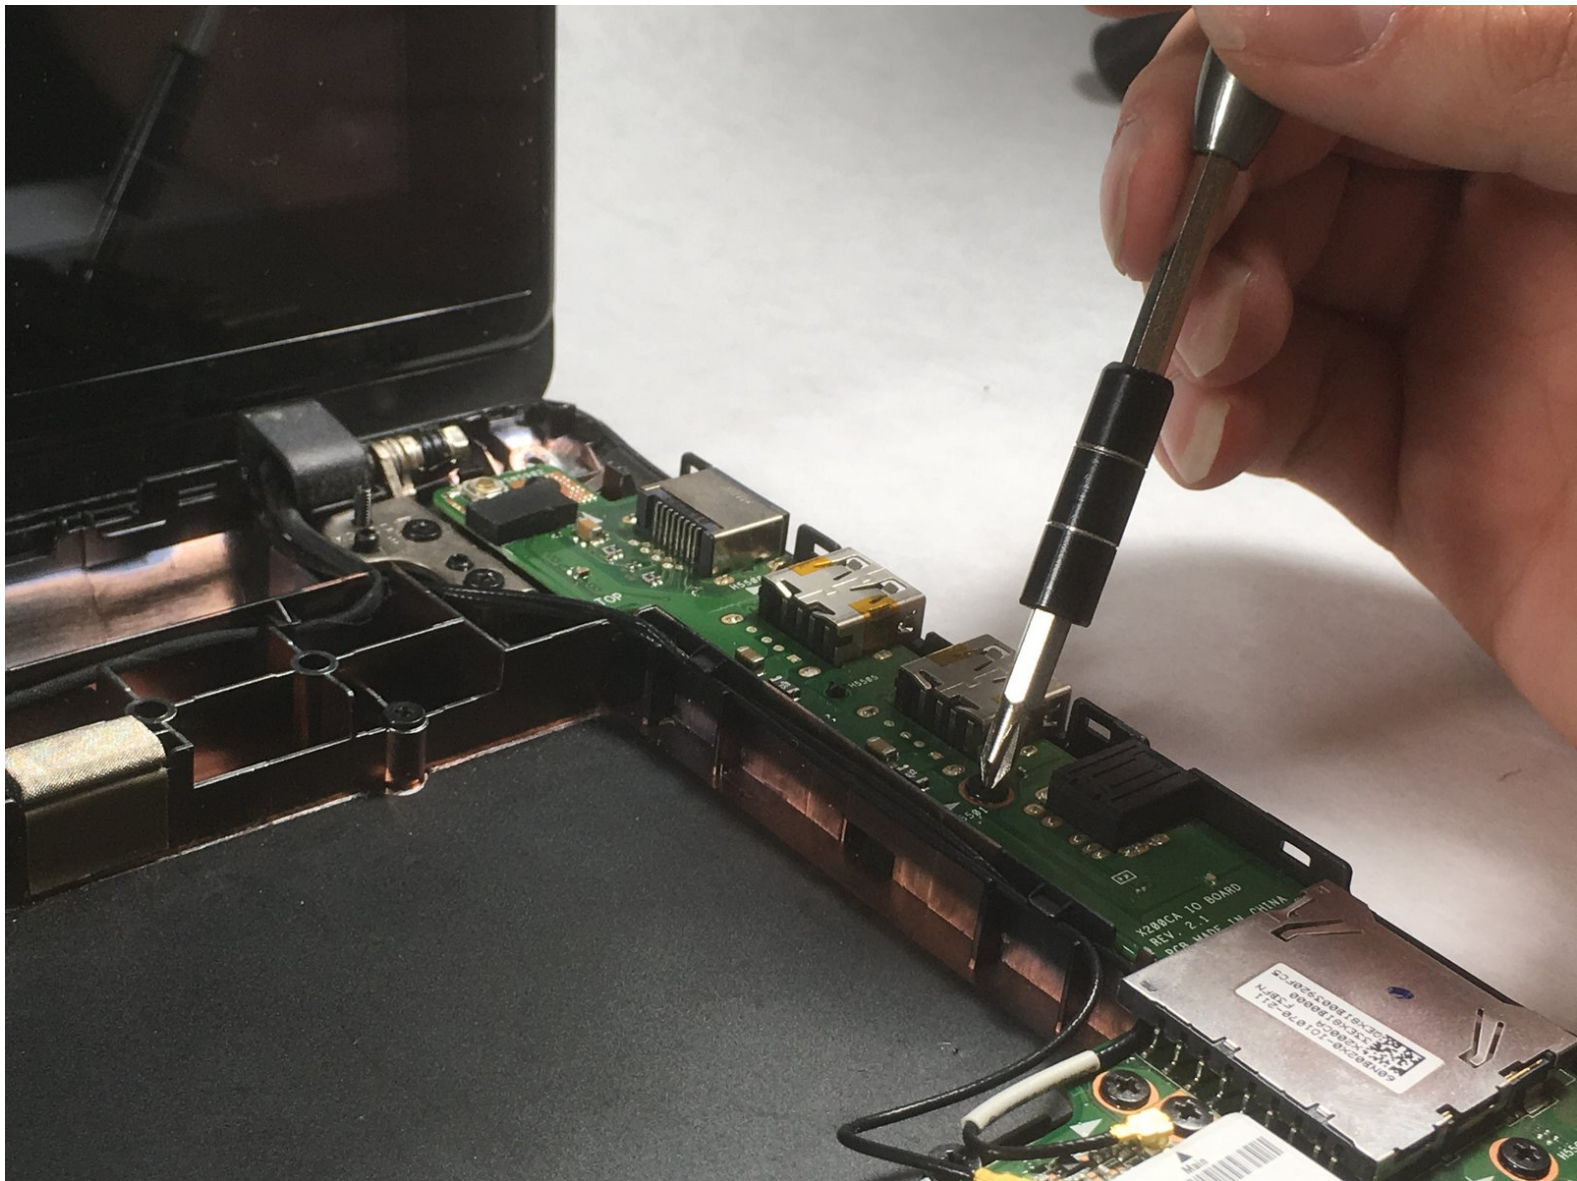



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Headphone Jack



- Using the Phillips 1 screwdriver, remove the laptop's back panel.
- The parts you see underneath that panel are called the laptop's "internals".

Step 2

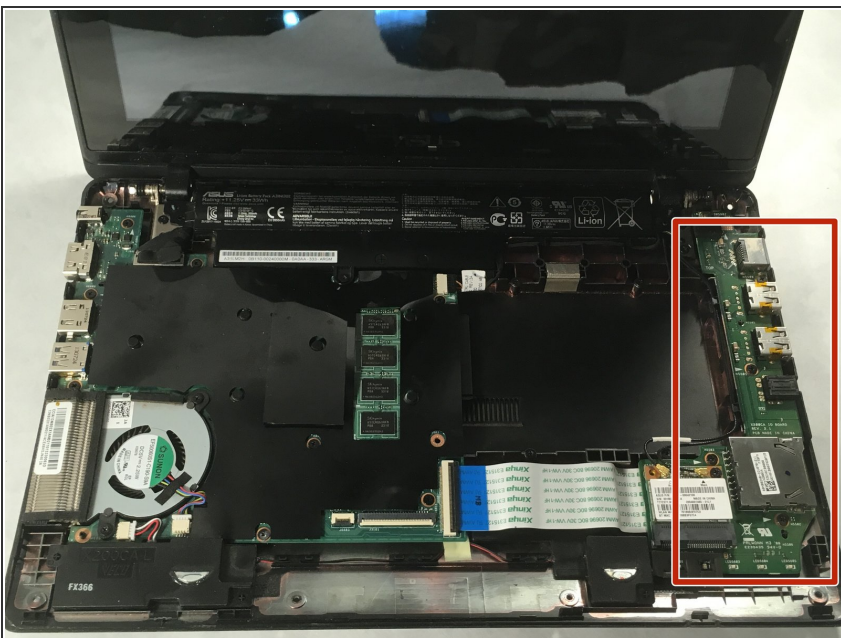



- Now, locate the audio board. This model has an L-shaped board. It can be found in the far left region of the internals.

Step 3



- Firstly, disconnect the two tiny wires that connect the audio board to other components. They can be found on a black square near the green decoder strip. Remember to be gentle with these delicate components.

Step 4

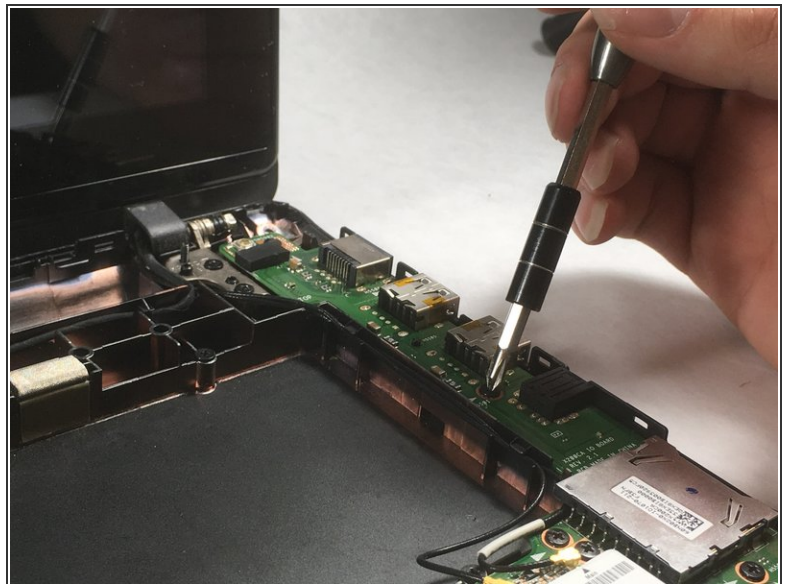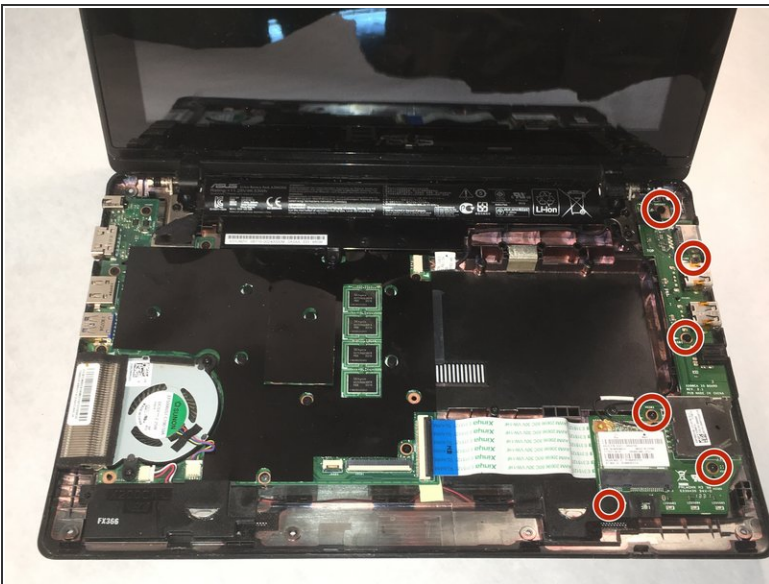

- Using the Phillips 1 screwdriver, remove the six screws that hold the audio board in place.
- Hint: the sixth screw may not be readily visible. It can be found in the bottom left corner of the audio board, under a small black flap.
- With the screws removed, the audio board can be easily lifted out.

This document was generated on 2020-11-28 06:22:22 AM (MST).

To reassemble your device, follow these instructions in reverse order.