



HP 15-ay014dx Hard Drive Disk Replacement

This guide will provide simple, easy to follow...

Written By: Jimmy Huynh



INTRODUCTION

This guide will provide simple, easy to follow instructions for replacing the Hard Drive Disk for HP-15ay014dx

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Spudger](#) (1)

[Tweezers](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Battery



 **Disconnect device from power source and power down.**

Step 2

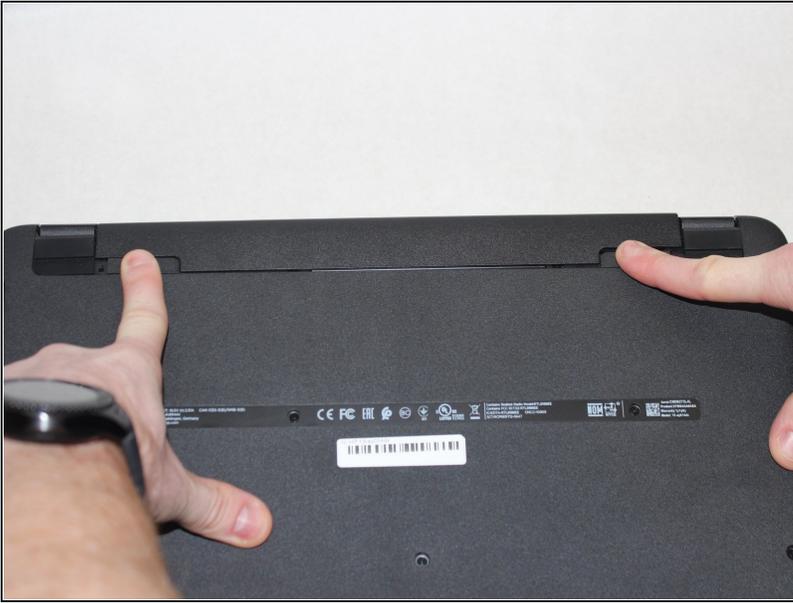

- With the device turned upside down, use your index fingers to push the battery latches in towards each other.

Step 3



- ① The latch on your left will stay at the inward position, while the latch on the right will slide back out.
- Gently grasp the battery and pull it back away from the device and yourself.

Step 4 — Optical Drive




- Close the laptop and lay it down with the bottom facing up.
- Using a size #00 Phillips screw drive remove the screw holding in the optical drive.

Step 5



- Grip the optical drive and gently pull it out.

Step 6 — Hard Drive Disk

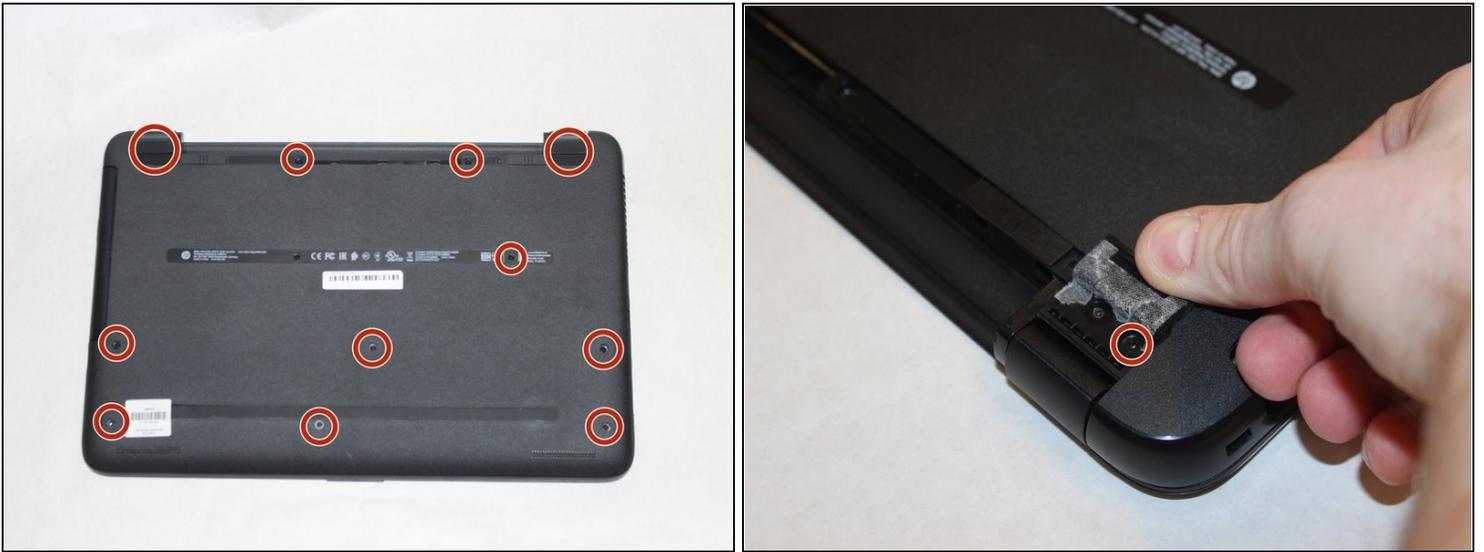


- Remove the highlighted screws holding the body of the laptop together with a size #00 Phillips screwdriver.

Step 7




- Using the spudger, push in the tabs in the back that hold the body together. Carefully pry the body apart by working the spudger around the body.
- Pull the back cover off.

Step 8

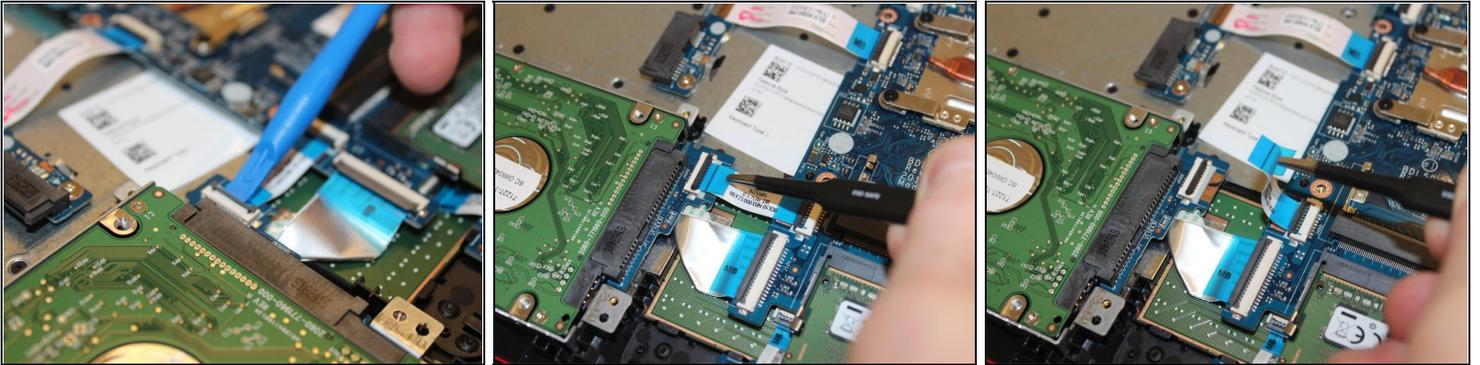


- Pry up on the clamp holding the SATA power ribbon using the plastic opening tool.
- Pull out the SATA power ribbon using the [tweezers](#).

Step 9

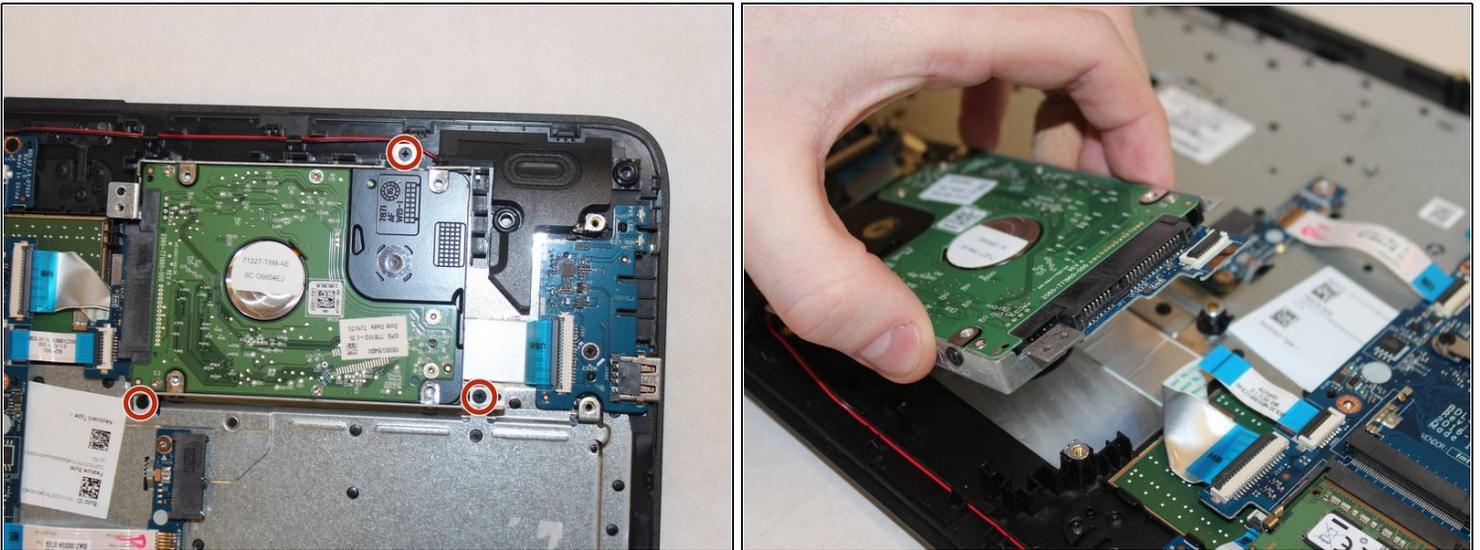

- Remove the highlighted screws holding the hard drive to the body using the Philips #00 screwdriver.
- Remove the hard drive.

Step 10

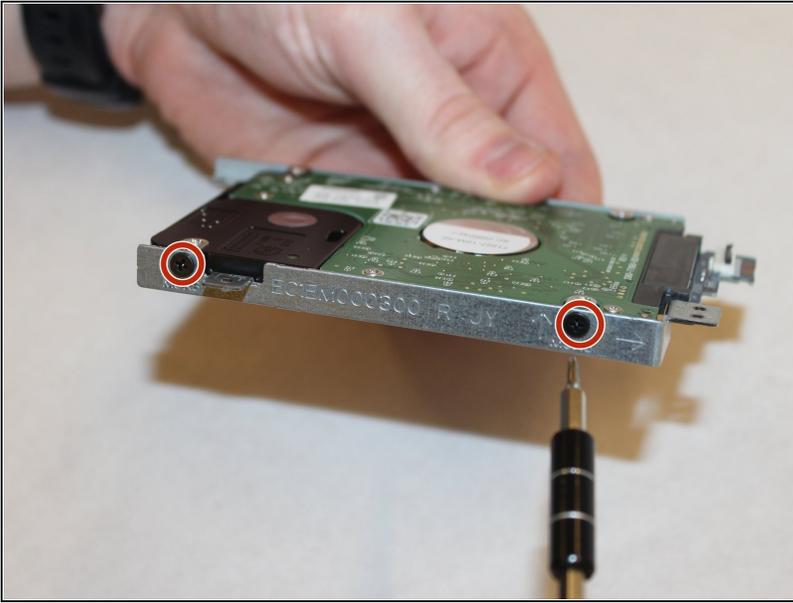

- Remove the 4 screws holding the hard drive to the hard drive cage using the Philips #00 screwdriver.

To reassemble your device, follow these instructions in reverse order.