



Thrustmaster Ferrari 458 Spider Racing Wheel

Bottom Cover Replacement

This guide will show you how to take off the bottom cover of the wheel.

Written By: Mohammed Alsogair



INTRODUCTION

Use this guide to disassemble the wheel and get access to the interior components of your Thustmaster Ferrari 458 Spider Racing Wheel.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [JIS #1](#) (1)
 - [2.5 mm Hex Key](#) (1)
-

Step 1 — Bottom Cover



- Remove the black 10mm using a JIS #1 screw driver.
- ⓘ There are 12 screws.
- ⓘ Two of the screws are deep inside the device you might need to use a slim screwdriver.
- ⓘ In the picture you see a plastic opening tool instead of screw driver because we did not have our screw driver when we were taking the picture.

Step 2

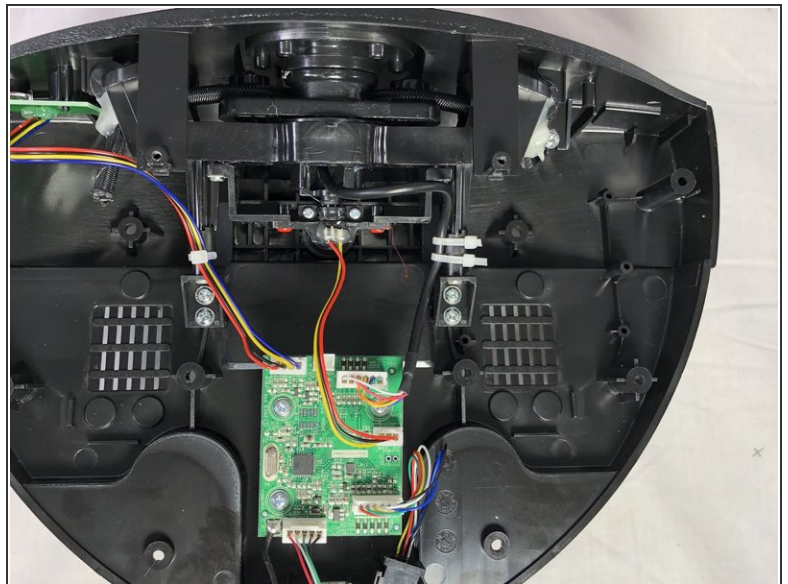

- Remove the two 10mm black screws on the top of device using a Hex 2.5mm Key. Only the two outside screws.
- Gently pull apart both halves of device to access inside.

To reassemble your device, follow these instructions in reverse order.