



Samsung Chromebook Plus Battery Replacement

This guide will show you how to replace the...

Written By: Evan Elm



INTRODUCTION

This guide will show you how to replace the battery for the Samsung Chromebook Plus.

TOOLS:

Long Neck Phillips Size 0 Screwdriver
(1)

PARTS:

Samsung AA-PBTN2TP (1)
Battery

Step 1 — Removing back panel screws




- Remove the 8 PHILIPS#0 screws

Step 2 — Removing back panel




- Stick a [plastic card](#) (or fingernail) into the gap between panel and the body. Then lift the panel up (long side with speakers closest).

Step 3 — Removing battery screws

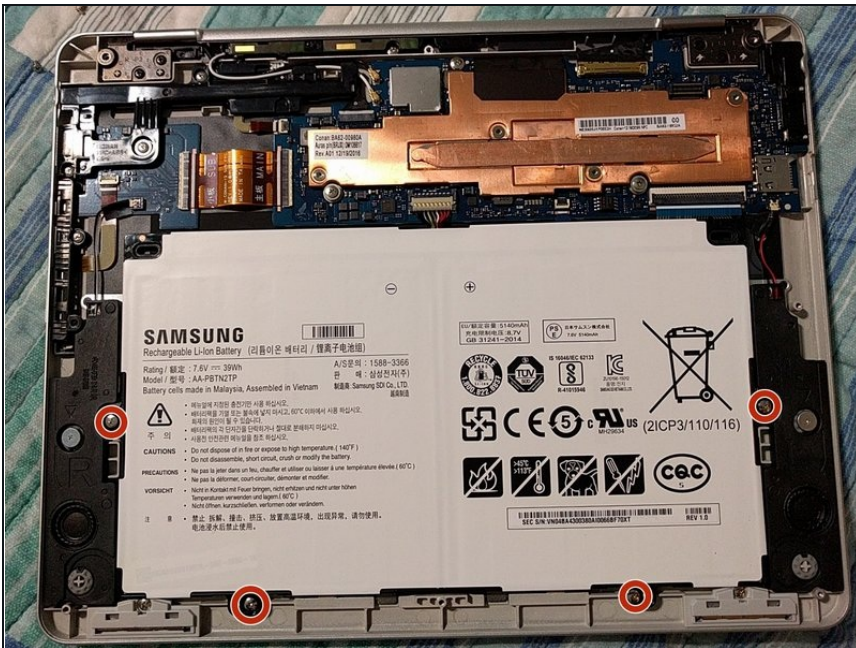


- Use your PHILIPS#0 and remove the 4 screws

Step 4 — Removing the battery

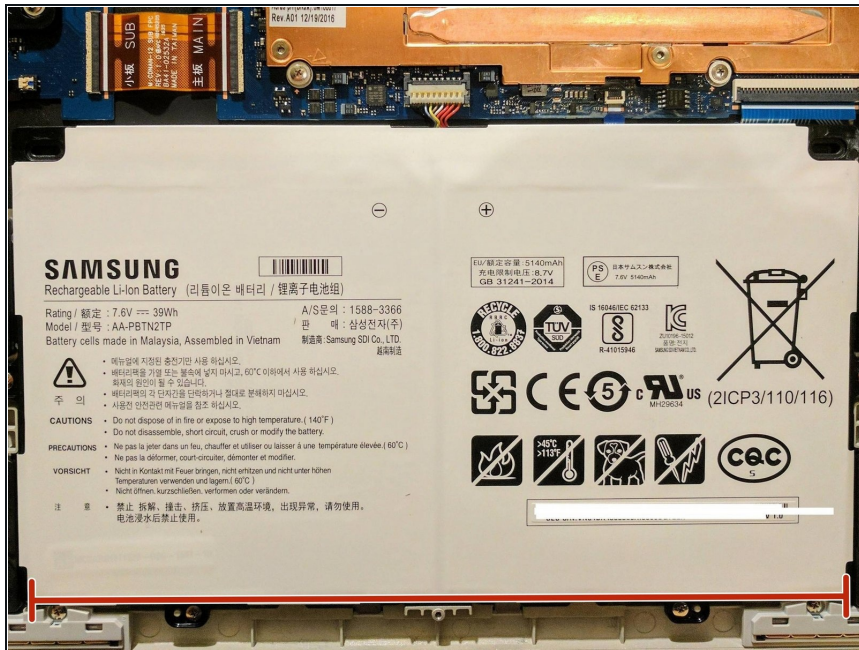


- Lift battery from bottom side first (marked with red line)

Step 5 — Finally detaching the battery

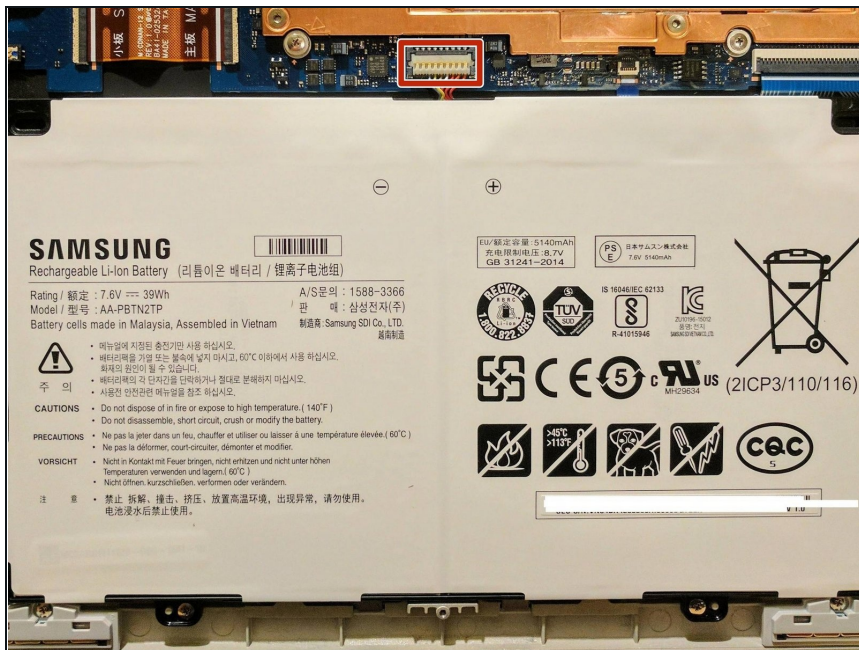


- Detach battery cable grabbing the side and pulling the cable upward.

Step 6 — Inserting the new battery

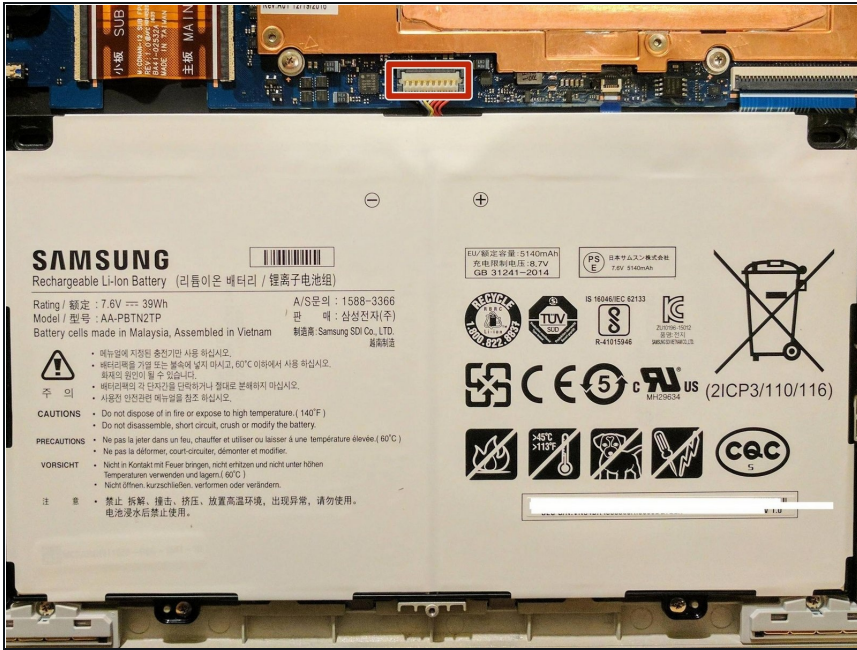

- Insert the battery and push the plug into the socket downward.

Step 7 — Re-inserting the screws

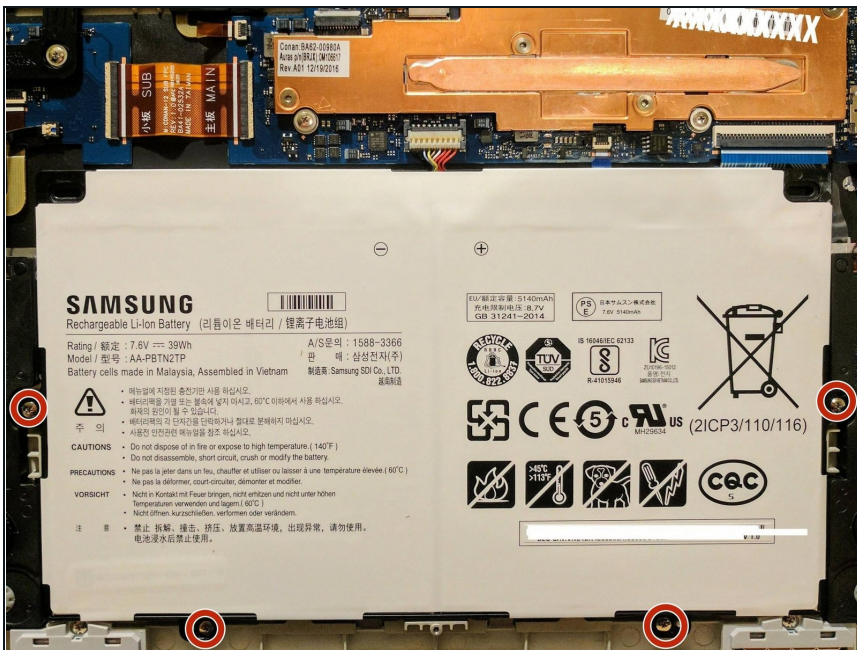

- Re-insert the screws in the holes circled red (on this image), which is where you removed them previously.

Step 8 — The back panel gets re-inserted



- Insert the hinge-side middle screw (must be done first otherwise casing may bulge) and insert rest of panel. On the hinge side, press down on the sides (if there is bulging) until you hear it snap. Insert the two other hinge-side screws (marked with orange on image). After that, insert the other 5 screws (yellow).

To reassemble your device, skip steps 1-5.