




# LG G Vista Motherboard Replacement

This guide will walk you through with replacing...

Written By: Key Baker

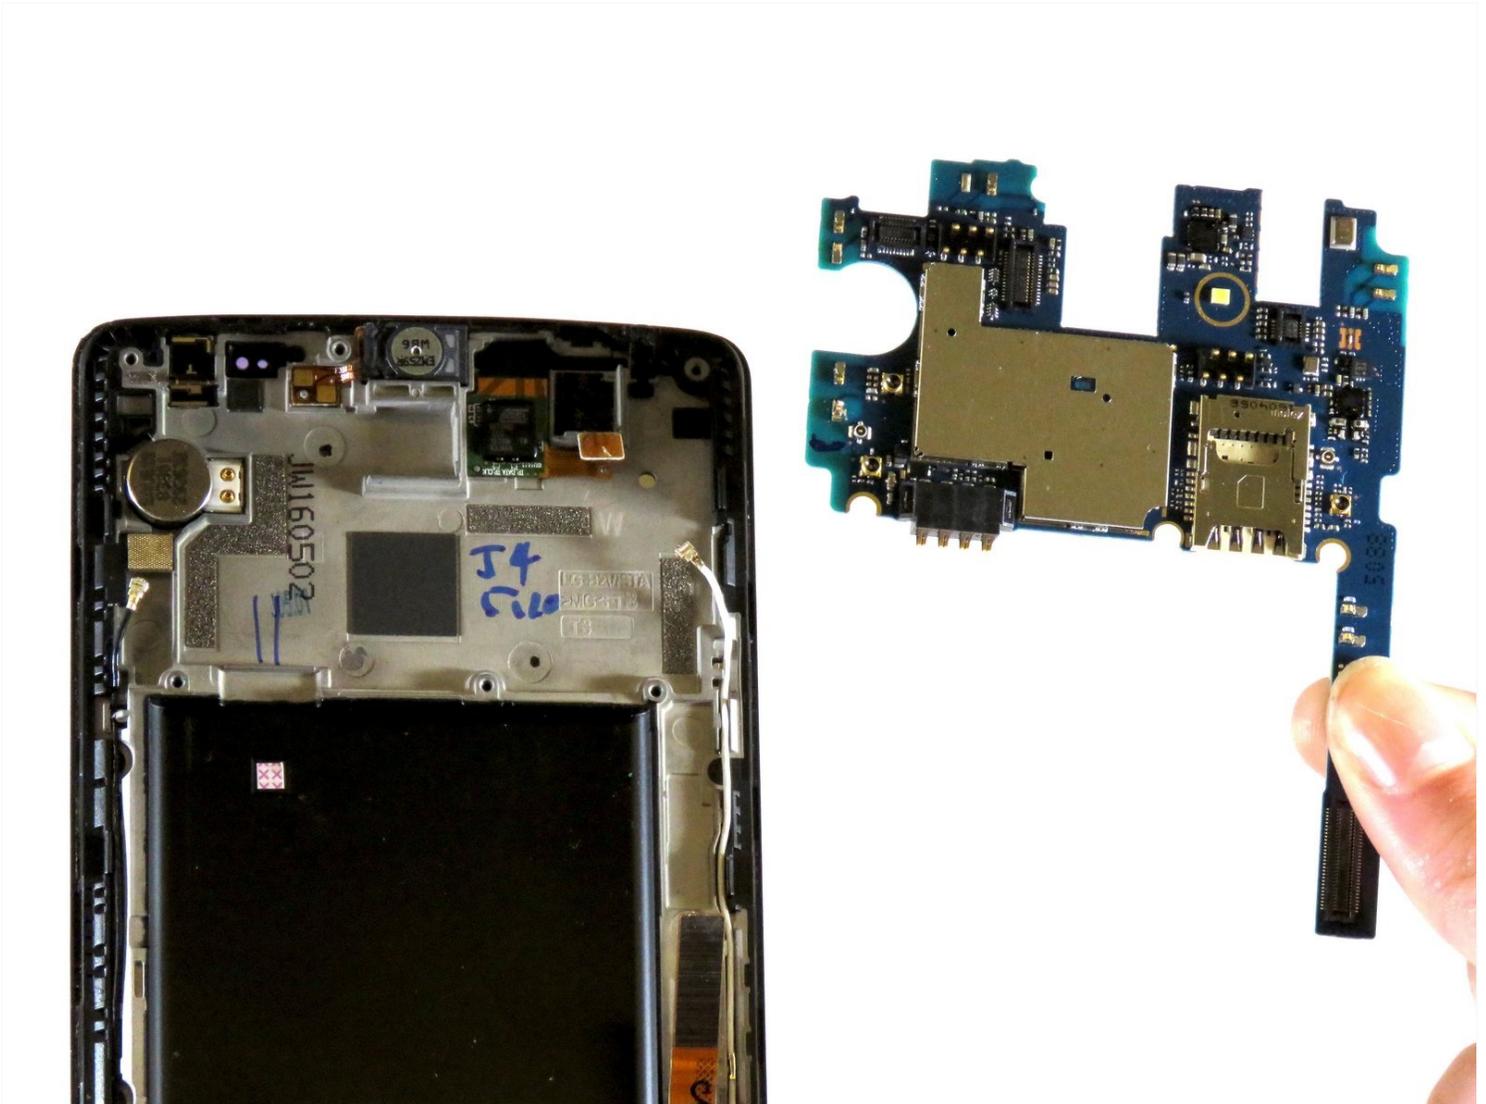

## INTRODUCTION

This guide will walk you through with replacing the motherboard of you LG G Vista. You will need tweezers, a Phillips screwdriver #000, and a small plastic spudger, or your thumb nail.

---

### TOOLS:

[Phillips #000 Screwdriver](#) (1)

[Tweezers](#) (1)

---

## Step 1 — Battery




- Make sure the device is powered off.

## Step 2



- Remove the back cover by gently prying open the case of the device from the charging port.

## Step 3

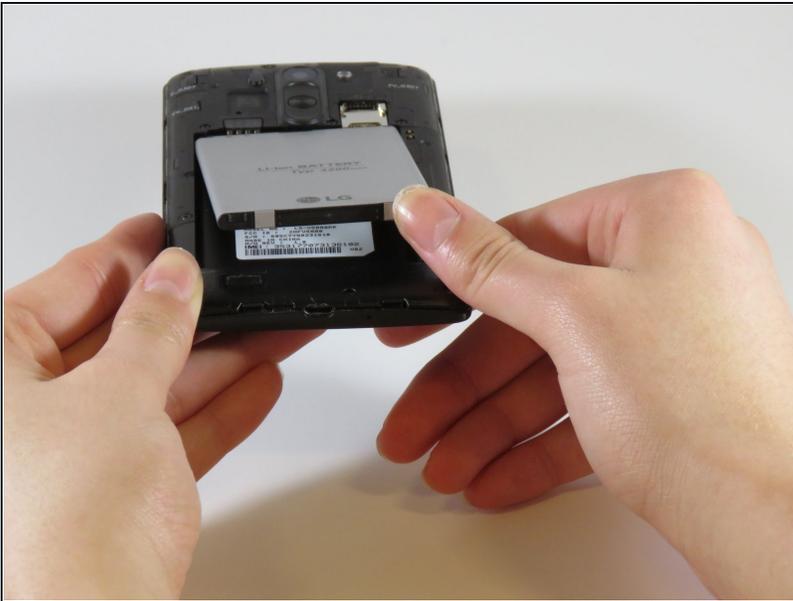


- Lift the battery out of its place by prying up from the small notch at the base of the battery.

## Step 4 — Motherboard




- Remove the eight 3.0 mm screws using the Phillips #000 screwdriver.

## Step 5

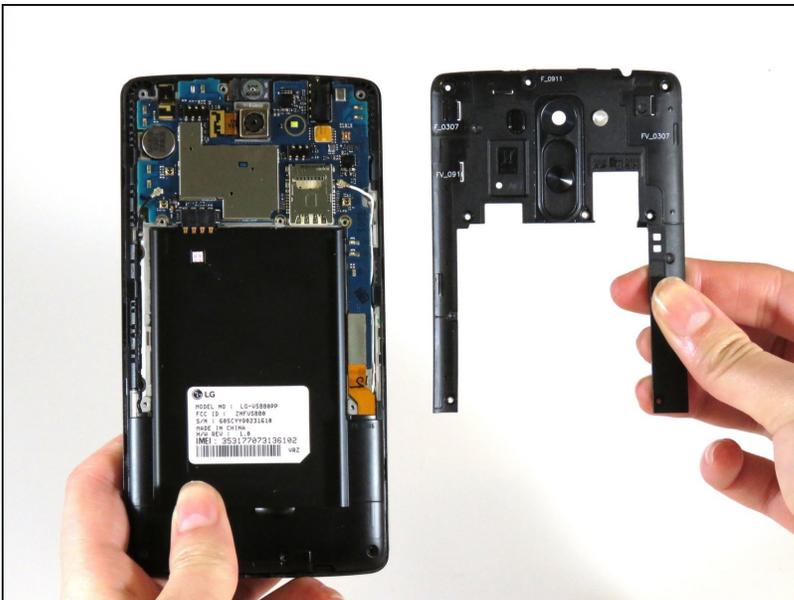



- Remove the hard shell covering the motherboard.

## Step 6

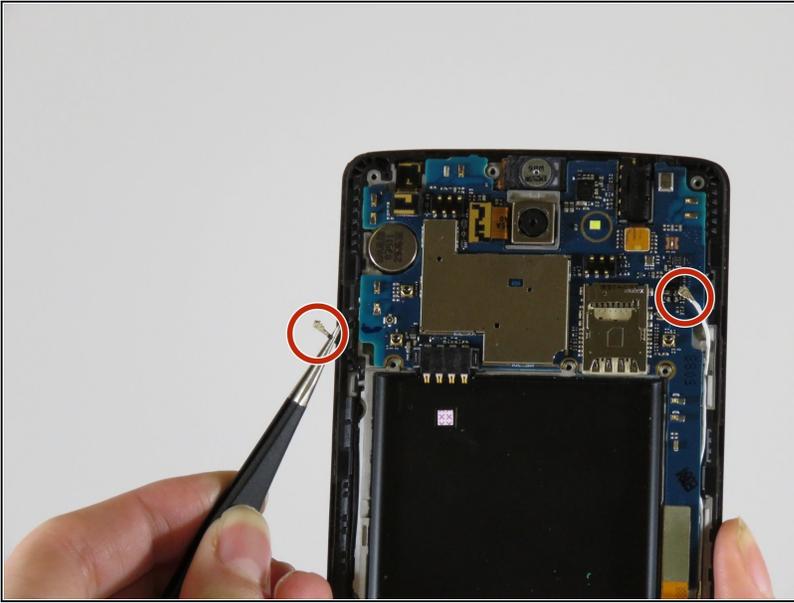

- Use a pair of [tweezers](#) to lift up the white antenna wire. On the other side of the logic board, do the same for the black antenna wire.


## Step 7

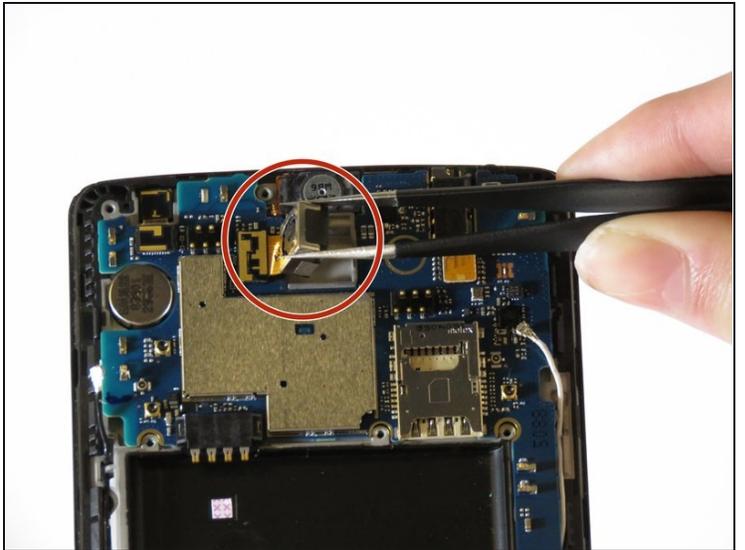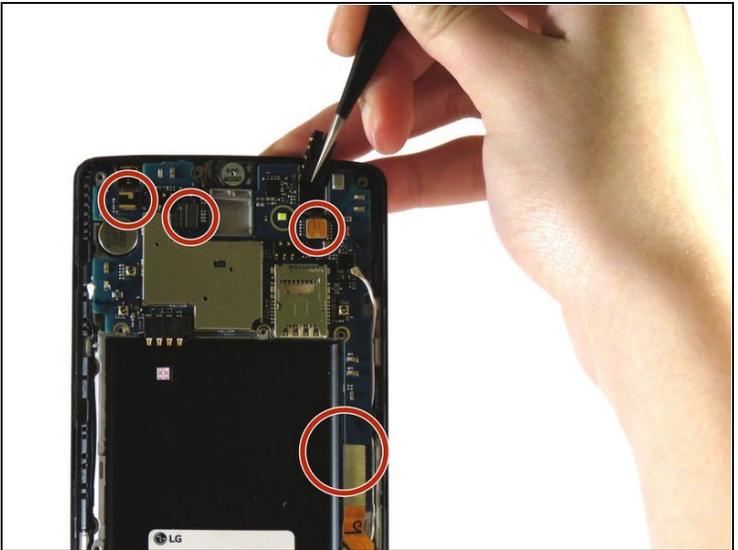

- Use the tweezers to remove the four connectors as well as the back camera.

**⚠ Be careful not to directly touch the camera lenses.**

## Step 8

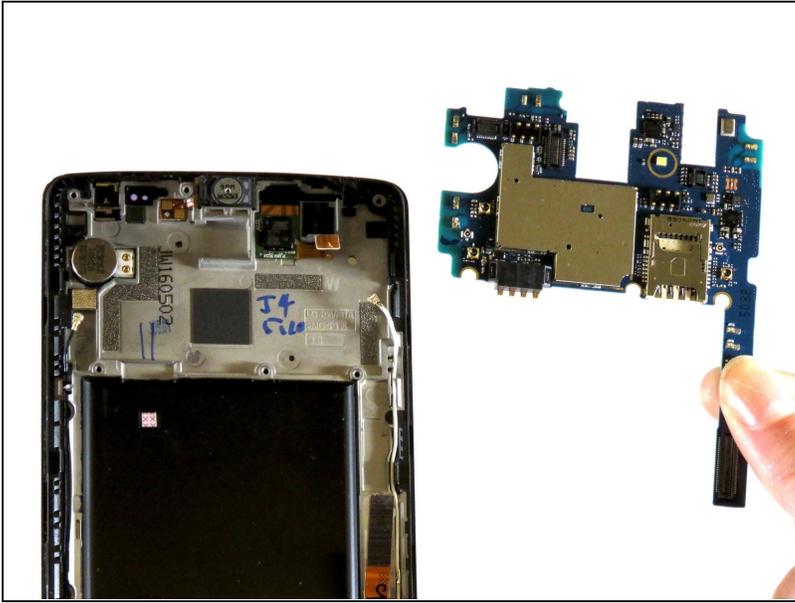

- Lift up and remove the motherboard from the device.

---

To reassemble your device, follow these instructions in reverse order.