



Shark Rocket Powerhead AH401 Brushroll Cap Replacement

Demonstrates how to replace a broken or worn-out Brushroll Cap of Shark Rocket Powerhead AH401.

Written By: Shobhit Dabral




INTRODUCTION

A broken Brushroll Cap can cause your Brushroll to not able to rotate and pick up dirt properly. The Brushroll Cap comes off easily with the press of your thumbs. This guide will demonstrate how to replace the Brushroll Cap if it has become damaged.


Step 1 — Brushroll



 Ensure the device is turned off and unplugged from any power source before beginning work.

- Locate the two tabs with white arrows on them. They are located on either side of the brushroll cover.
- Slide the tabs away from the center of the vacuum to unlock the brushroll cover.
- Lift the brushroll cover upward.

Step 2

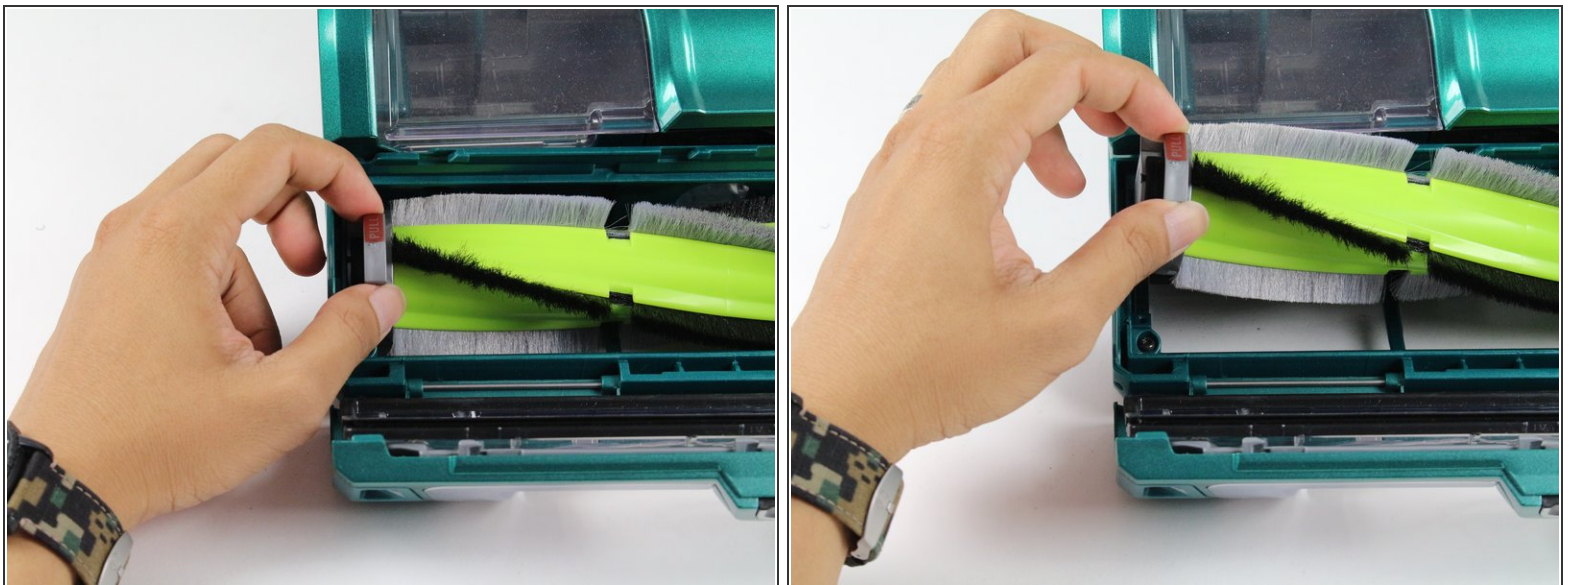

- Lift the brushroll out by pulling the tab labeled "pull".

Step 3 — Brushroll Cap



- Remove the cap by pushing the "pull" tab.

To reassemble your device, follow these instructions in reverse order.