



Shark Navigator Freestyle SV1106 Roller Belt Replacement

This guide will demonstrate how to safely access and replace the Shark Navigator Freestyle SV1106's rubber belt.

Written By: Zachary Liu



INTRODUCTION


When the roller belt has snapped or your vacuum's roller brush is not spinning, you should look into replacing your roller belt.



TOOLS:


- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery Pack

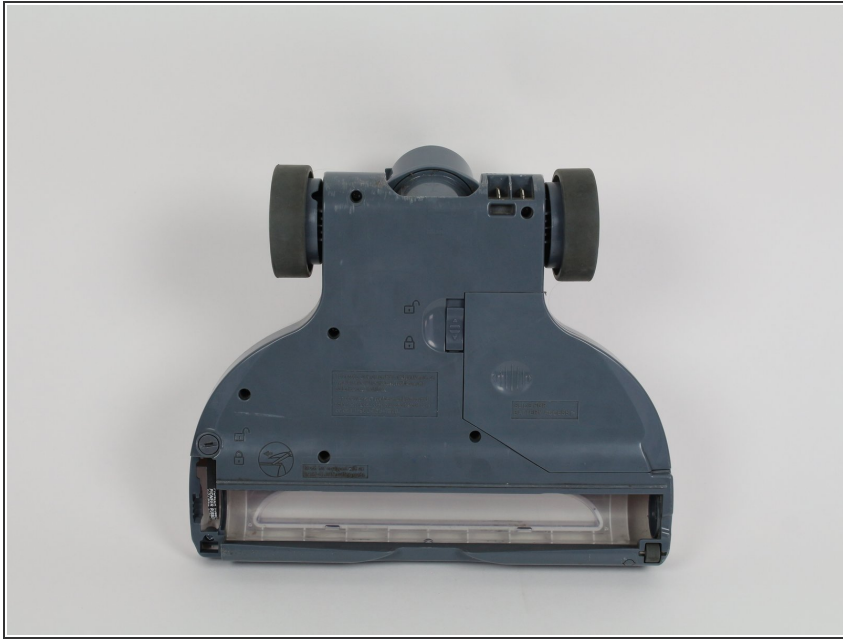


- Turn the device over to reveal the bottom of the motorized brush head.

Step 2

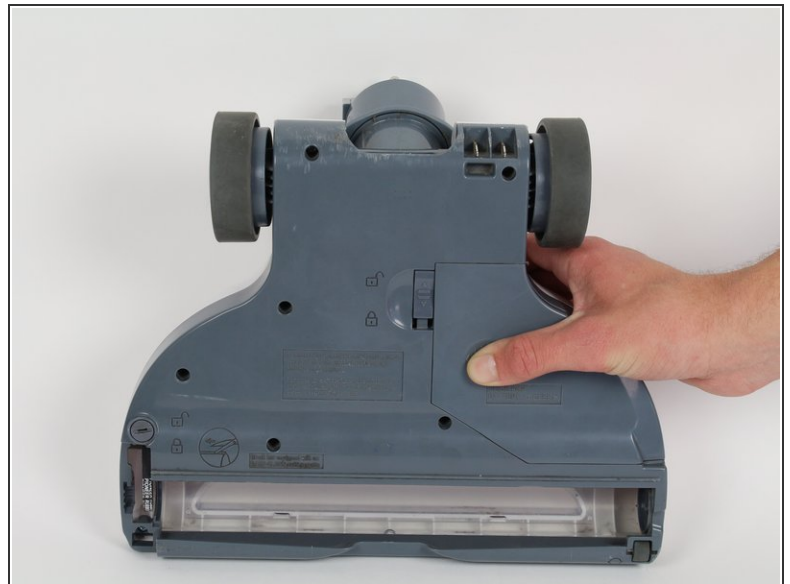



- Slide the latch next to the panel upwards into the unlocked position.

Step 3

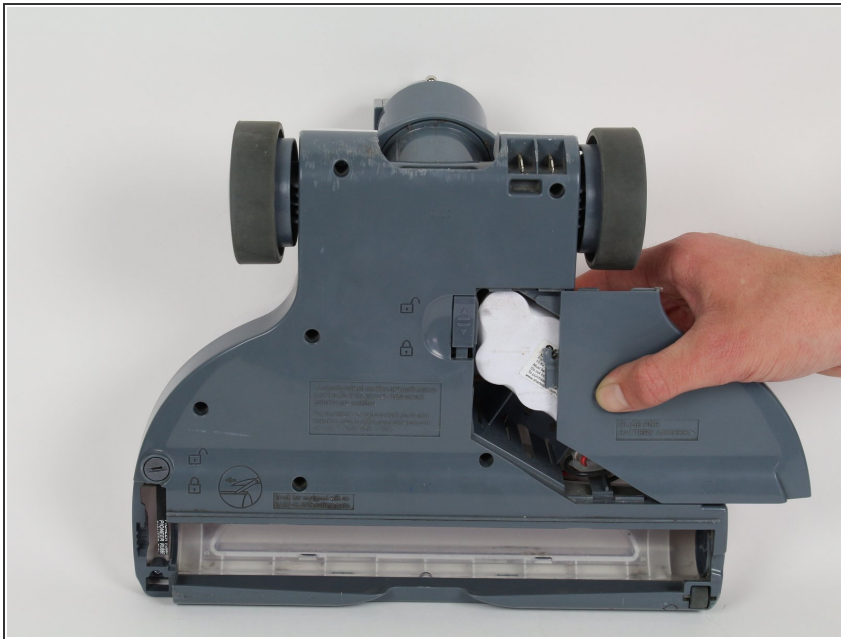



- Slide the panel to the right to reveal the battery.

Step 4

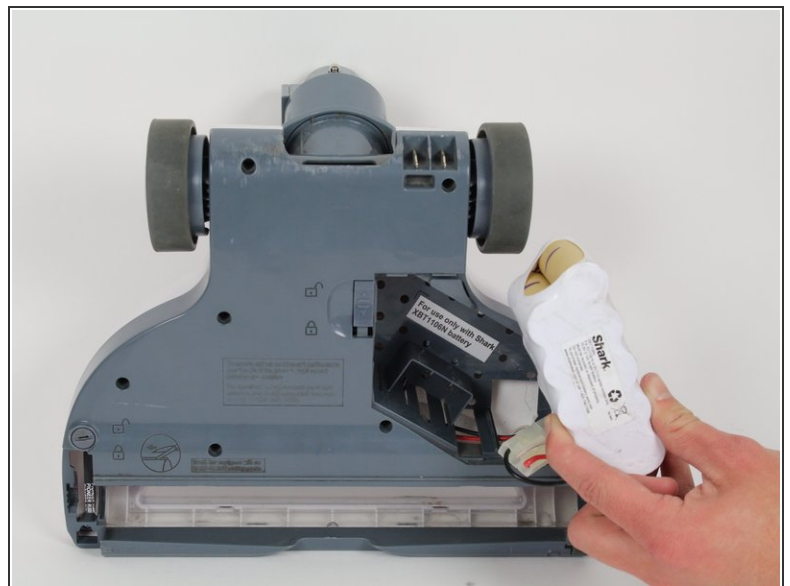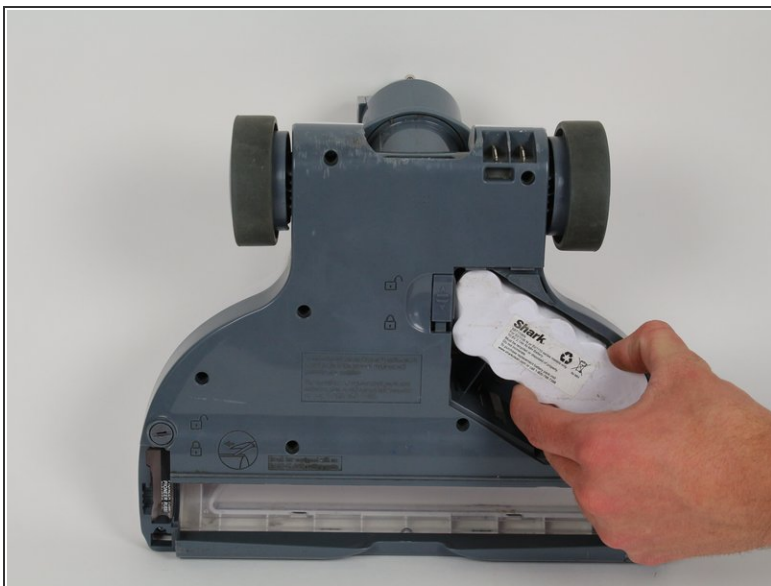


- Pull the battery from the vacuum.

Step 5

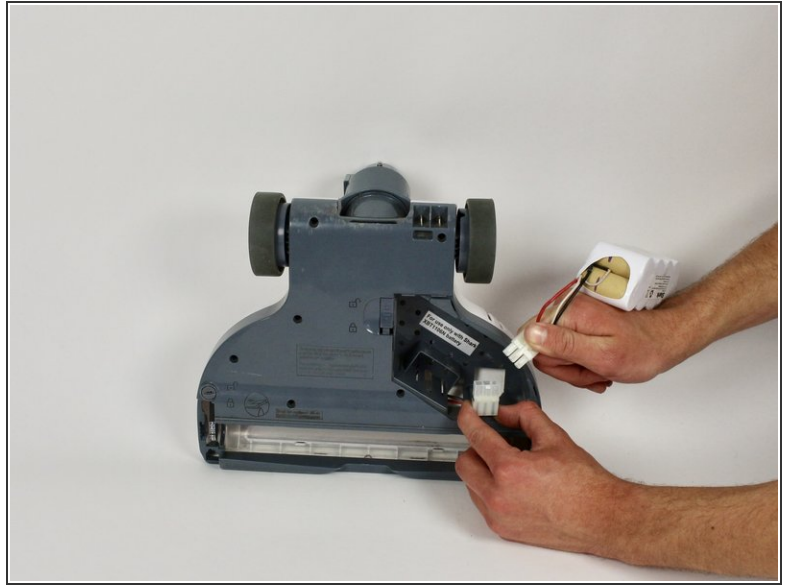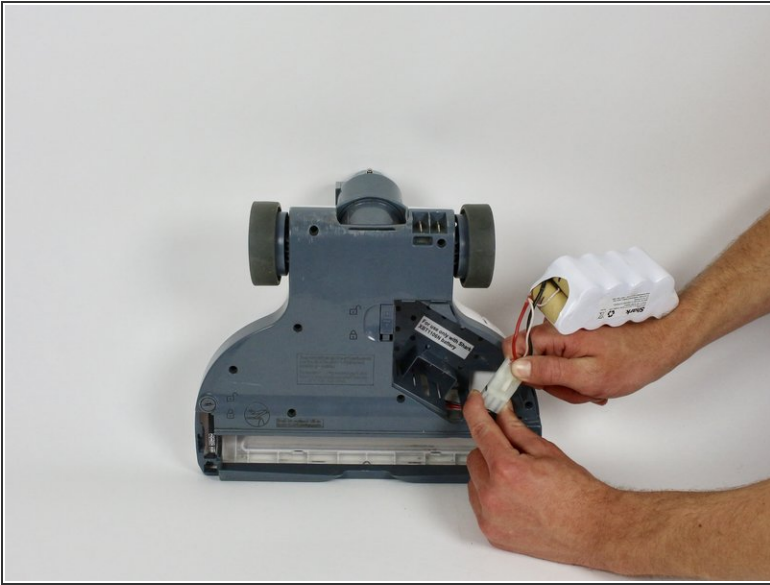

- Disconnect the battery from the vacuum by pinching the white latch and pulling the two pieces apart.

Step 6 — Roller Belt

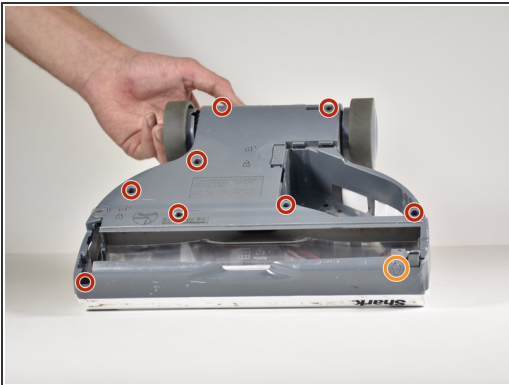



- Remove the eight 25.4 mm Phillips #1 screws holding the bottom panel to the vacuum.
- Use the metal spudger to remove the plastic plug to reveal a 12.4 mm Phillips #1 screw and remove it.

Step 7




- Remove the final 25.4 mm Phillips #1 screw inside the battery compartment.

Step 8

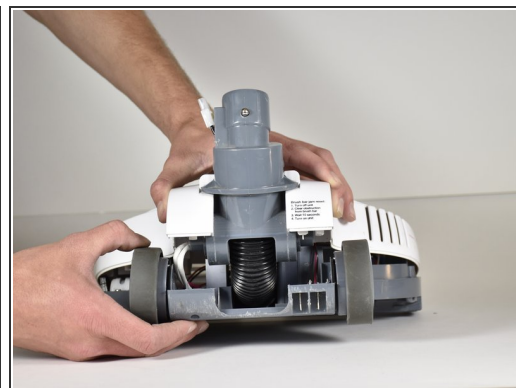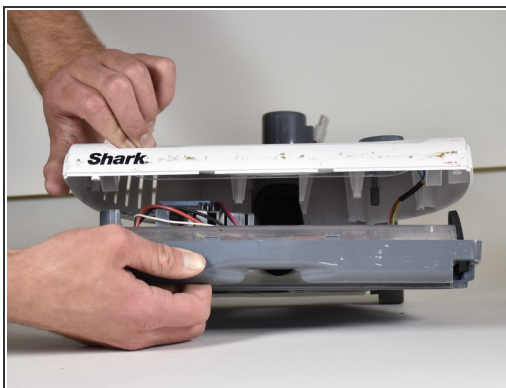


- Remove the bottom panel from the vacuum by pressing to release the latches at the front and pulling the bottom panel away from the vacuum.

Step 9

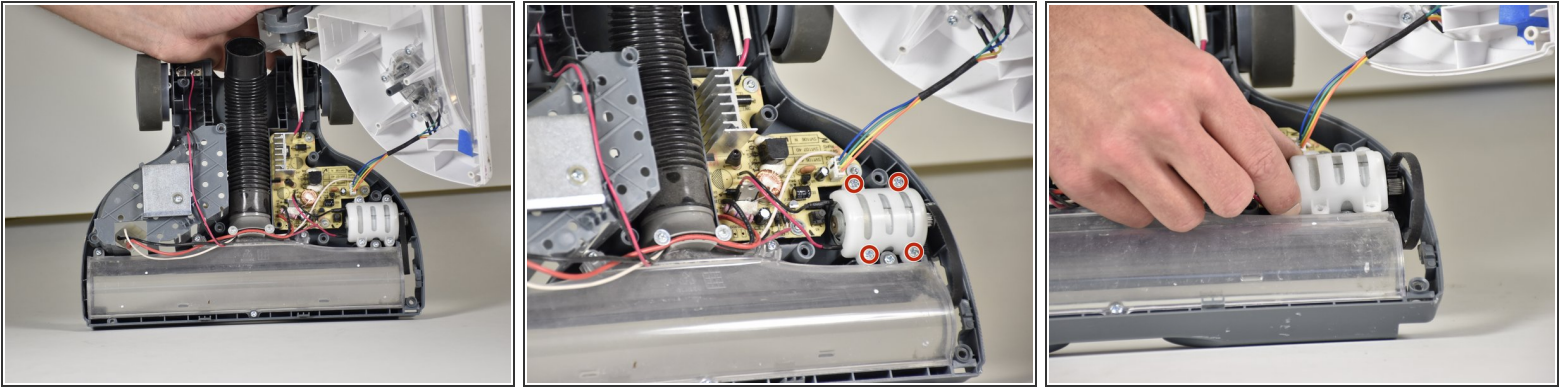

- Remove the 12.2 mm Phillips #1 screws holding the motor in place and remove the motor by pulling directly upwards.

Step 10

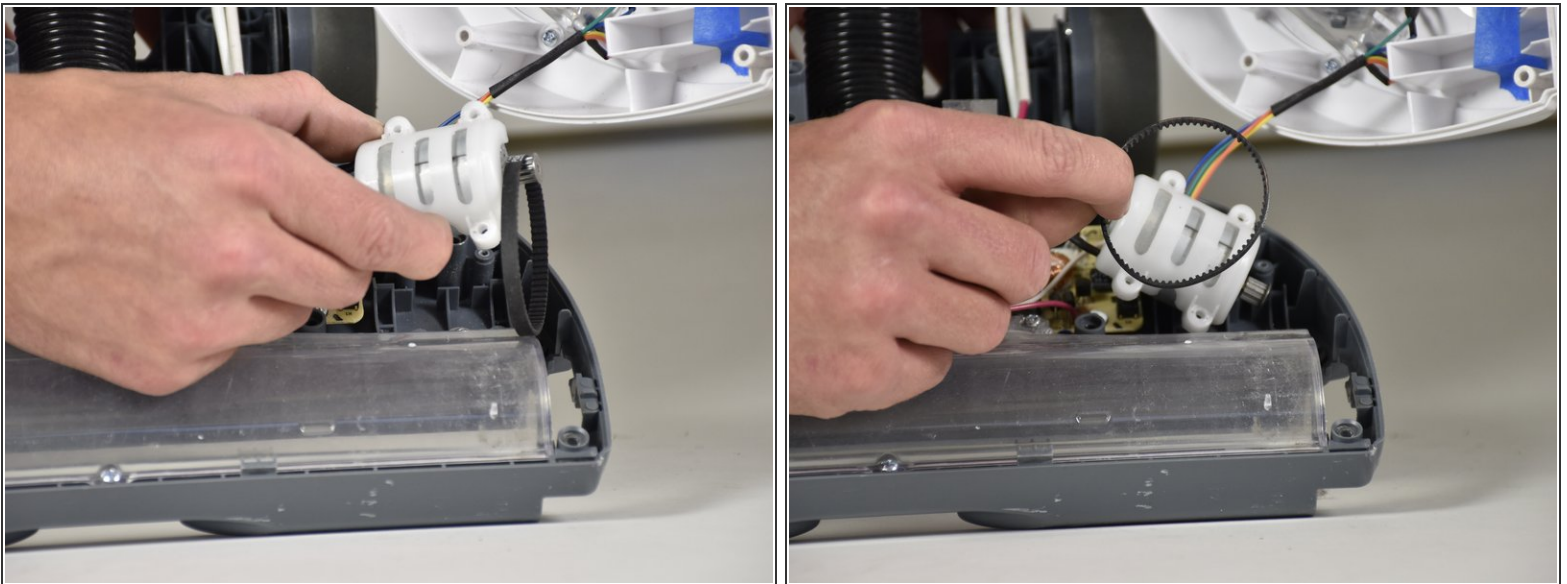

- Remove the belt by sliding it off the end of the motor.

To reassemble your device, follow these instructions in reverse order.