



Asus ROG G751JL-DS71 Hard Drive Replacement

This guide will help you locate and replace your hard drive on your computer.

Written By: Vincent Guarino



INTRODUCTION

This guide will help you locate and replace your hard drive on your computer.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Hard Drive




- Lift the rubber cover found on the bottom of the laptop.
- Remove the 5.2 mm screw with a Phillips 1 Screwdriver.

Step 2

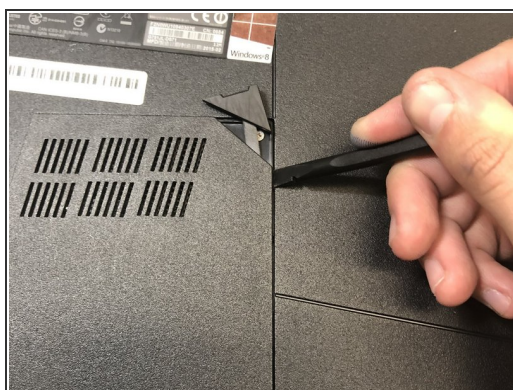

- Use the black nylon spudger to pry the back panel off the laptop.

Step 3

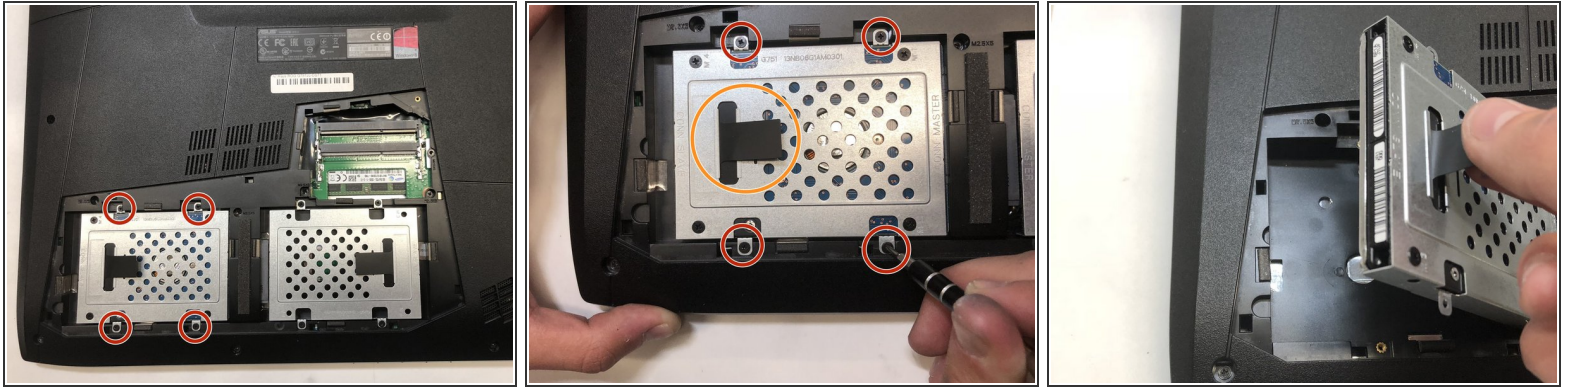

- Use a Phillips 1 Screwdriver to remove the four 2.4 mm screws securing the hard drive.
- Use the black pull-tab located on the shell covering the hard drive, to lift the hard drive housing and pull the hard drive away from the connector.
- ⓘ To access the hard drive on the right side of the laptop, perform the same steps, but on hard drive casing to the right of the previous hard drive.

To reassemble your device, follow these instructions in reverse order.