



HP Officejet 4630 Fax Feeder Replacement

Replace the HP Officejet 4630 fax feeder so that faxes will scan and send properly.

Written By: Isaac Jacobsen



INTRODUCTION

If your device will not fax, one possible solution is to replace the fax feeder. The fax feeder is necessary for sending more than one page of a fax at a time, and if it is malfunctioning, the printer may not fax at all.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T10 Torx Screwdriver](#) (1)
-

Step 1 — Fax Feeder



- Lift the fax feeder cover until it stands on its own.

Step 2

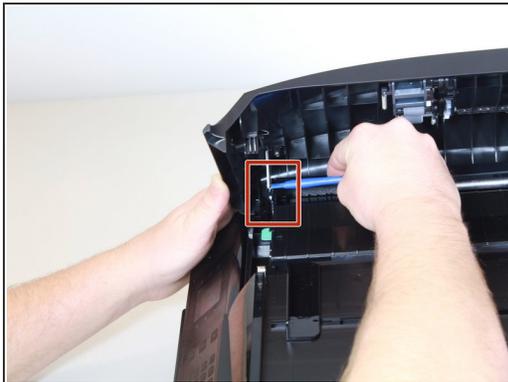

- Use the plastic opening tool to unclasp the hinge that holds the feeder cover.

Step 3





- Lift the green tab to remove the fax feeder from the printer.

Step 4



- Use the plastic opening tool to pry the pivot point apart while lifting the feeder up.
 - ⓘ There is still a cable holding the part to the rest of the printer.

Step 5

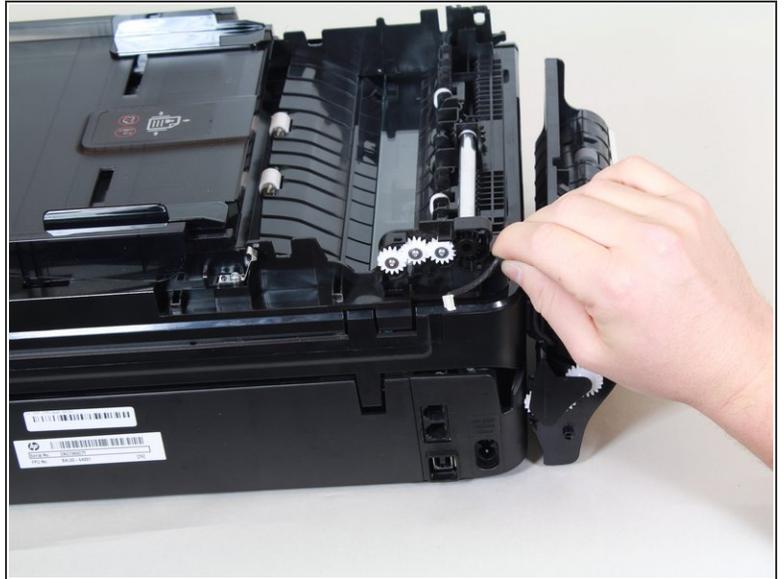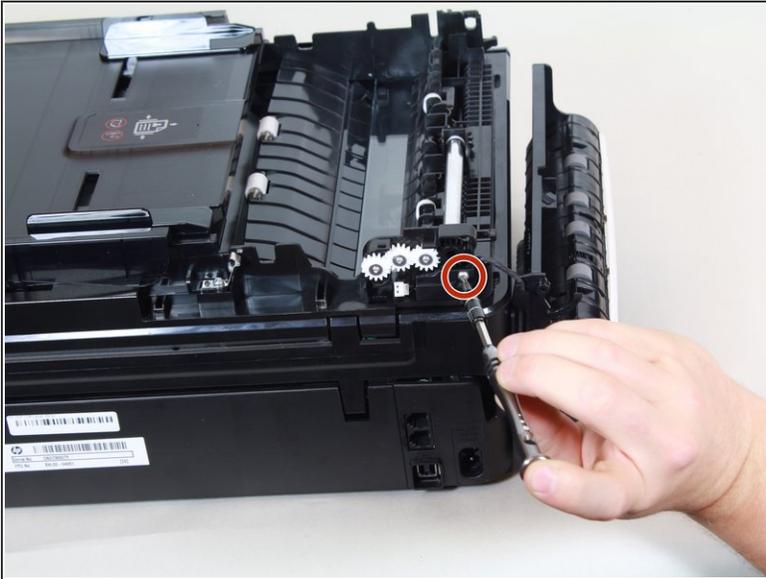

- Use a screwdriver to remove the single 9mm T10 screw.
- Remove the wire cover and pull the wire away from the printer. The fax feeder head is now free to be separated from the printer.

To reassemble your device, follow these instructions in reverse order.