



Insignia 6-Quart Pressure Cooker Anti-Block Shield Replacement

How to remove the anti-block shield.


Written By: Savannah Webb



INTRODUCTION

Anti-block shields may become dirty or wear out over time, requiring replacement. This guide will demonstrate how to replace the anti-block shield.

Step 1 — Anti-Block Shield

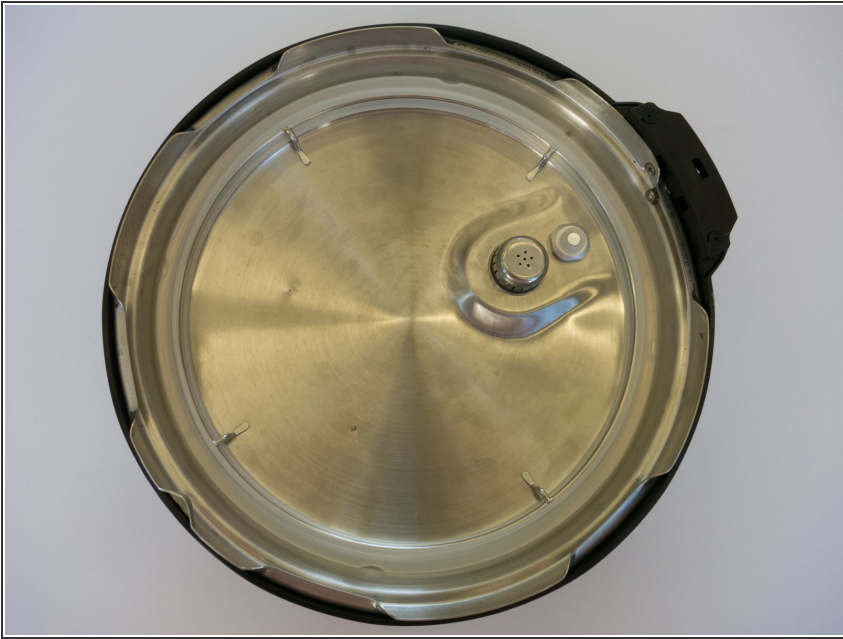

- Remove the lid and place it upside down on a flat surface.

Step 2



- Pinch the anti-block shield and twist counterclockwise while pulling up and out from the lid.

Step 3



- The anti-block shield will pop off.

To reassemble your device, follow these instructions in reverse order.