



LG Optimus Zone 3 Screen Replacement

Use this guide to help you replace the screen on you LG Optimus Zone 3.

Written By: Cooper Parnell



INTRODUCTION

The screen of the LG Optimus Zone 3 is a common part that requires repair. The screen can often crack and instead of discarding the entire device, it is economical and environmentally friendly to just replace the plastic screen overtop of the display.

TOOLS:

- [iFixit Opening Tools](#) (1)

Step 1 — Battery




- Insert fingernail into the slot on the back left side of the phone and pry open.

Step 2



- Remove faulty battery.
- ⓘ The battery is missing from our device, however, it would be located in the section in-between the fingers.

Step 3 — Screen

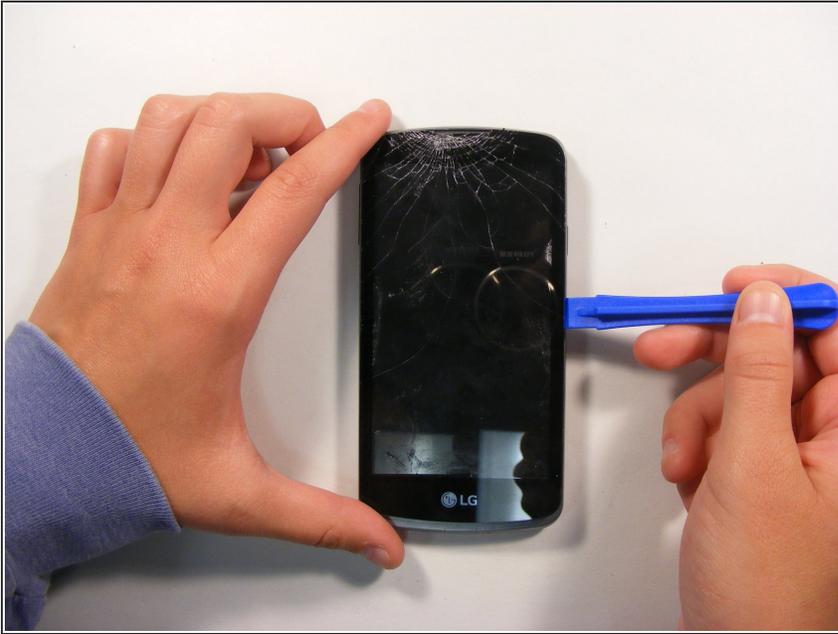

- Insert the plastic opening tool into the groove between the screen and the rest of the device. Work your way around the perimeter by sliding the opening tool around the edge, loosening the screen.

Step 4



- Once the screen is loosened, fully remove it from the device by peeling it away from the base of the phone.

To reassemble your device, follow these instructions in reverse order.