



# Toshiba Satellite C55-A5100 RAM Replacement

This guide will show you how to remove and replace your Toshiba Satellite C55-A5100's RAM.

Written By: Walker Tortorigi



---

## INTRODUCTION

This guide will walk you through the process to replace your RAM.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-



## Step 1 — Battery



- Press down with your fingers while also applying a sliding motion on the latch buttons near the battery on the underside of your laptop.

## Step 2



- Lift the battery upward with your fingers out of the battery compartment.

## Step 3 — RAM



- Place the laptop with the bottom facing up.
- Observe the single 6mm Phillips #1 screw keeping the laptop panels in place.


## Step 4



- Using your Phillips #1 screwdriver, unscrew the 6mm screw on the panel, exposing the hard drive and RAM.



## Step 5

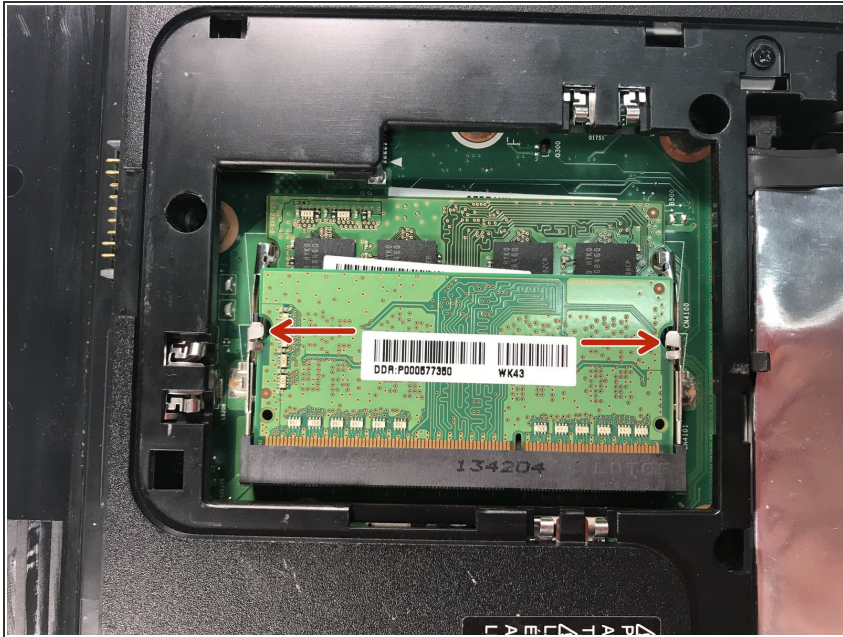

- Once the ram chip is exposed, push the two clips away from the ram chip to release it. (Clips move in direction of arrows.)

## Step 6



- The ram chip will tilt up after the clips are released.
- Using your fingers, pull the ram chip out at a slight angle.

To reassemble your device, follow these instructions in reverse order.