


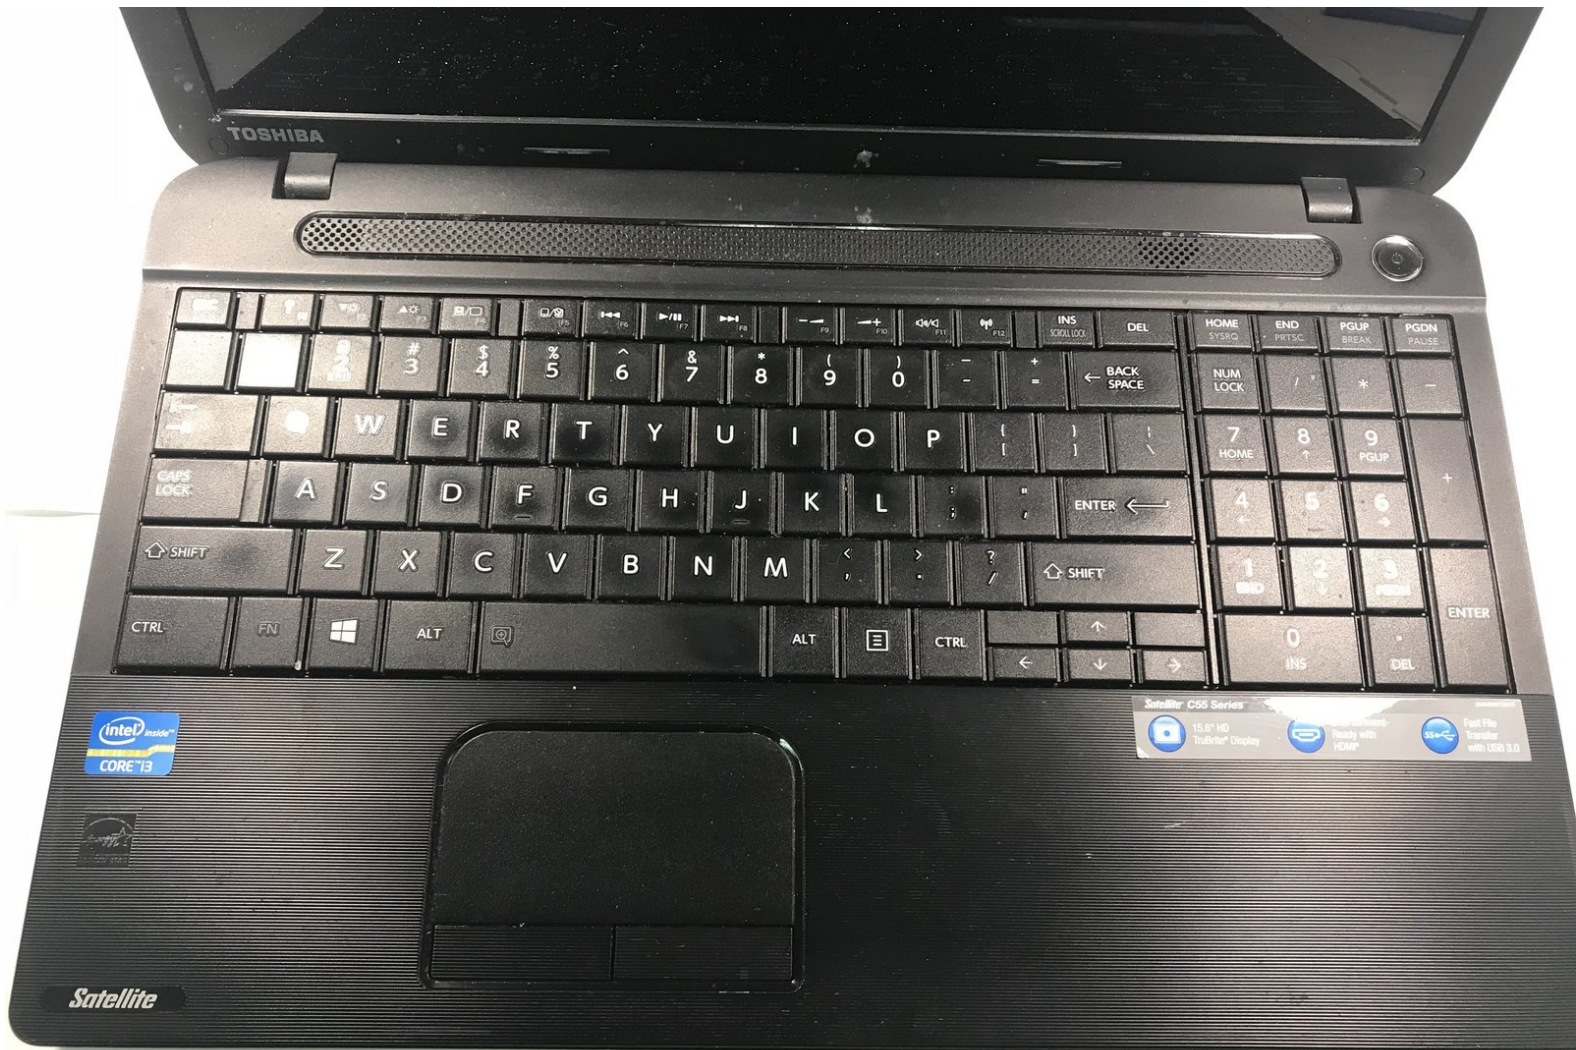

# Toshiba Satellite C55-A5100 Keyboard Replacement

This guide will show you how to replace the keyboard on a Toshiba Satellite C55-A5100 laptop.

Written By: Walker Tortorigi



---

# INTRODUCTION

This guide will show you how to replace the keyboard on your Toshiba Satellite C55-A5100.

---



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Press down with your fingers while also applying a sliding motion on the latch buttons near the battery on the underside of your laptop.

## Step 2



- Lift the battery upward with your fingers out of the battery compartment.




## Step 3 — Keyboard




- On the back of the laptop, remove the 6mm Phillips #1 screw. This screw is attached to the keyboard.

## Step 4

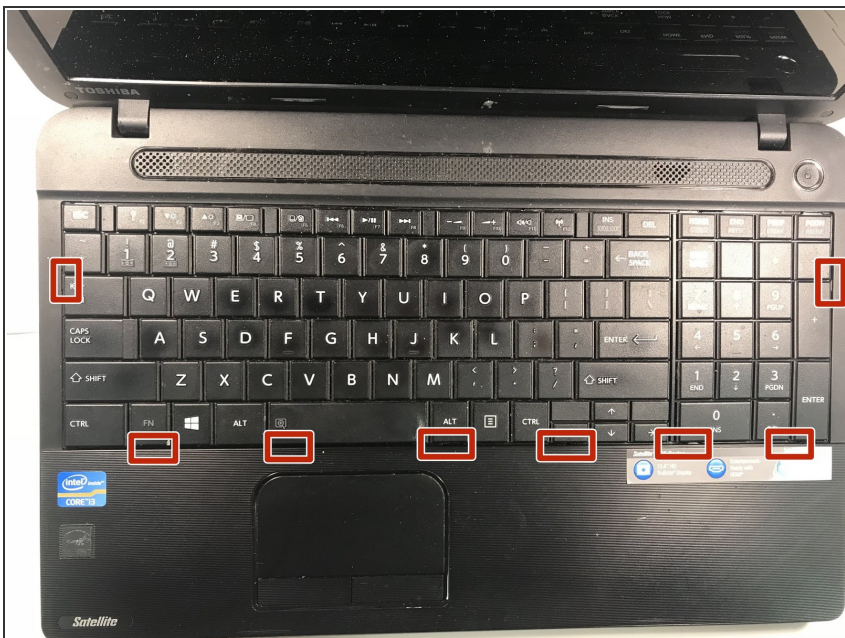

- Looking at the keyboard, locate the eight clips that hold it in place.

## Step 5

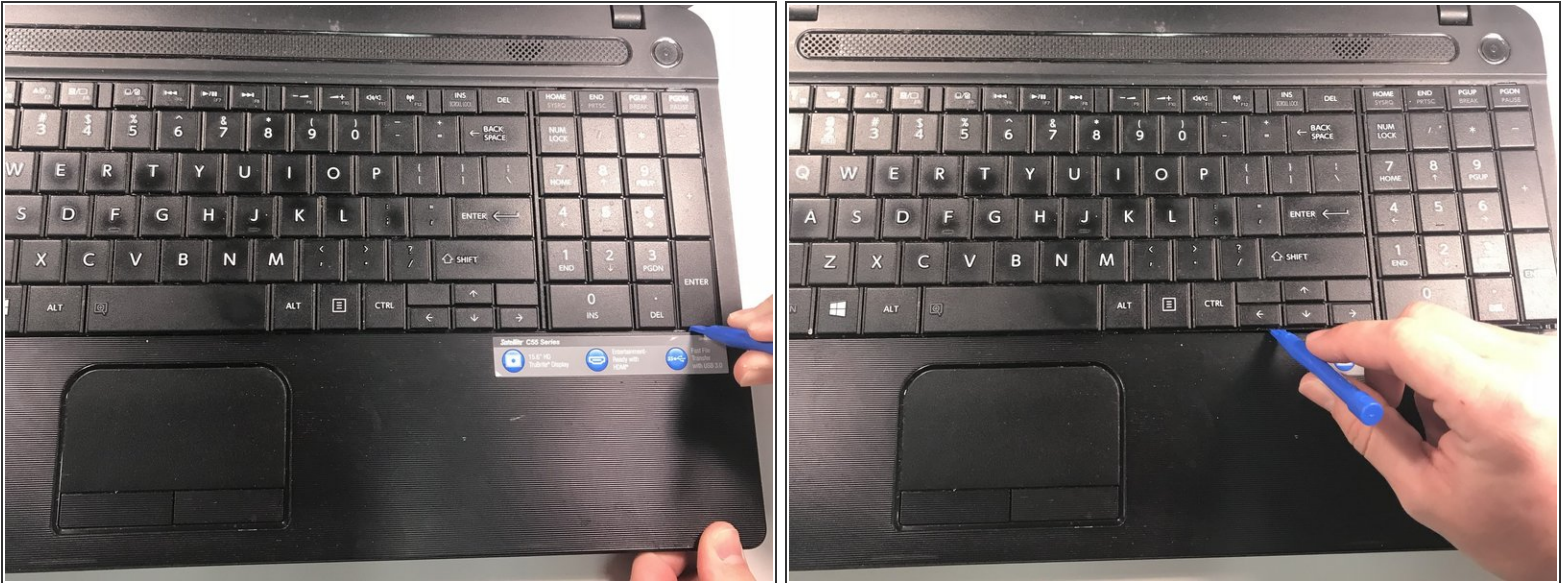


- Use the plastic opening tool to slide the clips back, releasing the keyboard.
- As you release the clips, use the plastic opening tool to lift keyboard above the clips.

## Step 6



- Once the keyboard is released from the clips you should be able to lift it up, exposing the wire connecting it to the laptop.
- The keyboard will slide out of the clips on the top.

## Step 7

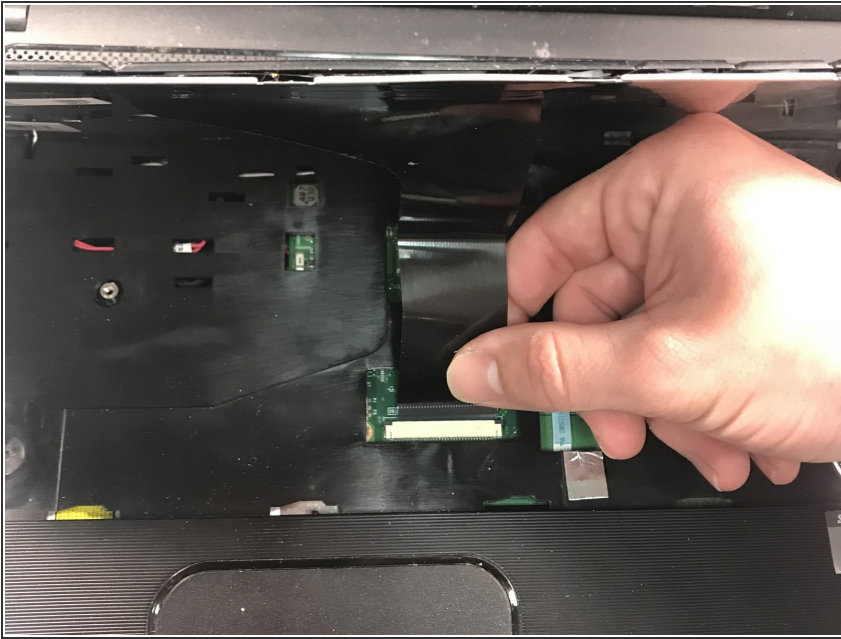

- Using your fingers, slowly pull the wire out of its connection.
- The keyboard is now disconnected.

To reassemble your device, follow these instructions in reverse order.