




Acer Aspire V5-571-6891 Battery Replacement

The battery is clipped into the back of the computer.

Written By: Lakkira Sheffield

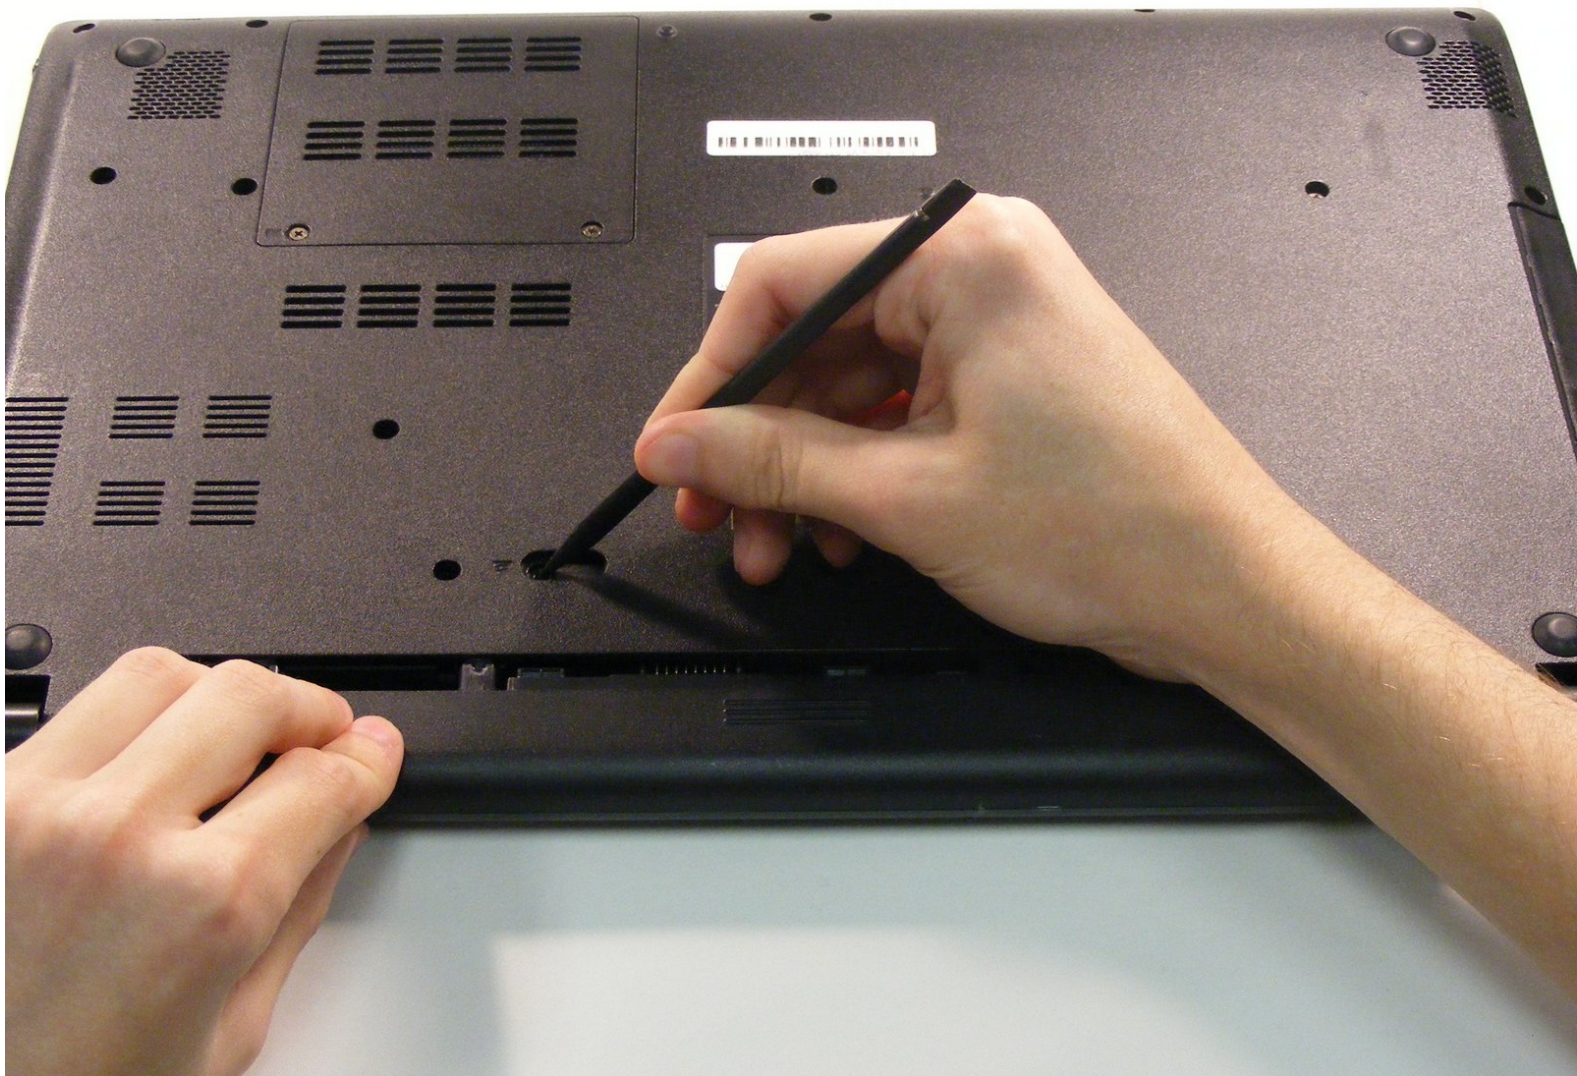

INTRODUCTION


This guide shows how to un-clip and remove the battery form the computer.



TOOLS:


- [Spudger](#) (1)
-

Step 1 — Battery

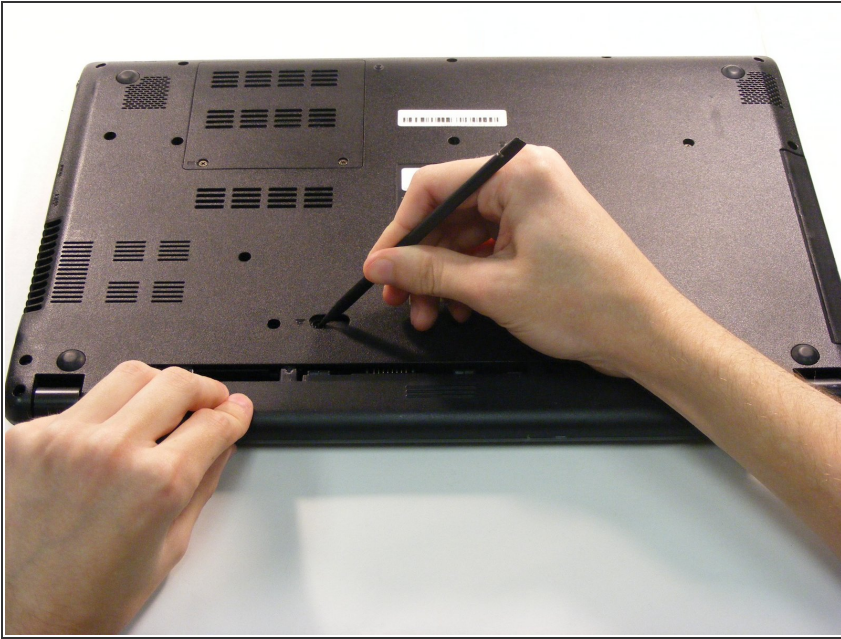

- Use the pointed end of the spudger to slide the battery lock until the battery pops loose.

Step 2

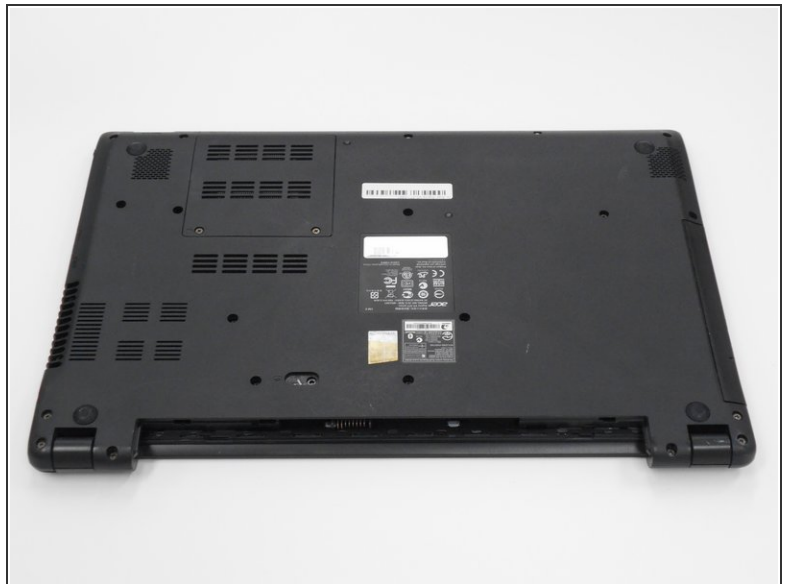

- Slide the battery out of the battery slot.

To reassemble your device, follow these instructions in reverse order.