



HP Deskjet 1000 J110a Parts Replacement

How to remove the panel to replace a part in the HP Deskjet 1000 J110a.

Written By: Colin Tourjee



INTRODUCTION


These steps must be followed before replacing any internal parts in the HP Deskjet 1000 J110a. Don't forget to keep track of the screws.



TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Cover Removal

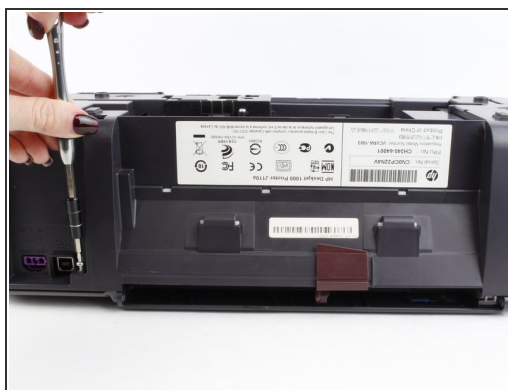

- Remove the two 13 mm screws located on the back of the printer using a screwdriver with the T10 torx bit (star-shaped).

Step 2



- In the front of the printer, open the tray where the paper comes out and remove the two 13 mm screws located under the top of the printer.

Step 3



- With the front of the printer facing you, lift and raise the left side of the panel (like opening a book in reverse) until it disconnects from the clip on the right side of the panel.

To reassemble your device, follow these instructions in reverse order.