



Asus Transformer Flip Book TP200S Battery Replacement

Are you experiencing issues powering on your...

Written By: Alejandro Lopez



INTRODUCTION

Are you experiencing issues powering on your flip book? Is it losing it's charge very quickly? If so, this guide will help you replace a faulty battery in a few easy steps.



TOOLS:

- [JIS #000 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery




- Remove the back 6mm and 8mm screws with a J000 screwdriver.

Step 2




- Remove the back cover of the flip book by gently using a metal spudger.

Step 3

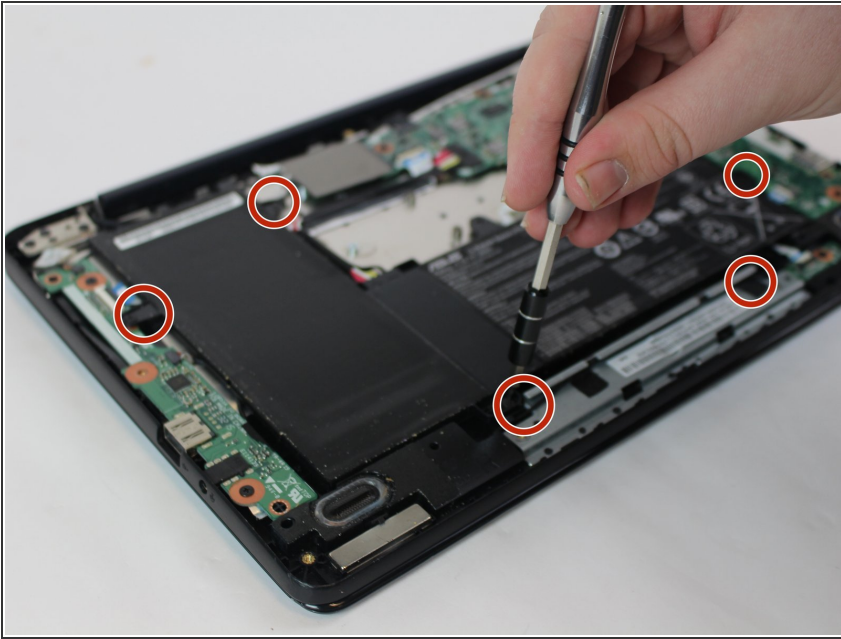

- Unscrew the battery from the motherboard using a J000 screwdriver on the 3mm screws.

Step 4

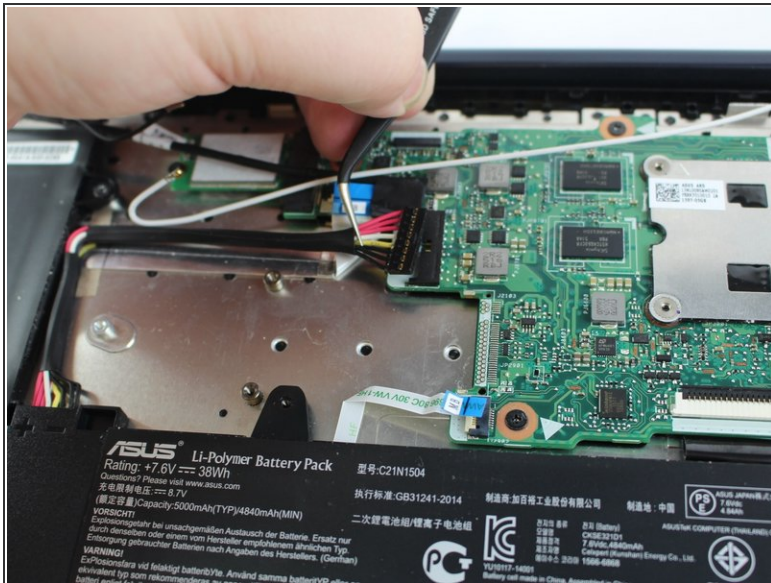

- The battery comes attached to the motherboard and needs to be disconnected before you can remove it.
- Disconnect the battery from the motherboard by gently pulling out the connection with tweezers.
- Gently remove the Wifi cables hooked to the rim of the battery
- Remove the battery

To reassemble your device, follow these instructions in reverse order.