



Dell Inspiron 11-3164 Speaker Assembly Replacement

This guide will allow you to replace the speaker assembly in your Dell Inspiron 11-3164 laptop.

Written By: Michael Kendziora



 **TOOLS:**


- Phillips #1 Screwdriver (1)
 - Metal Spudger (1)
-

Step 1 — Speaker Assembly





- Remove the eight 6mm back panel screws with your PH1 Phillips head screw driver bit.
- Use your screw driver to remove the plastic cover in the center of the laptop.
- Using a PH1 Phillips head screw driver bit remove the last 6mm screw.

Step 2

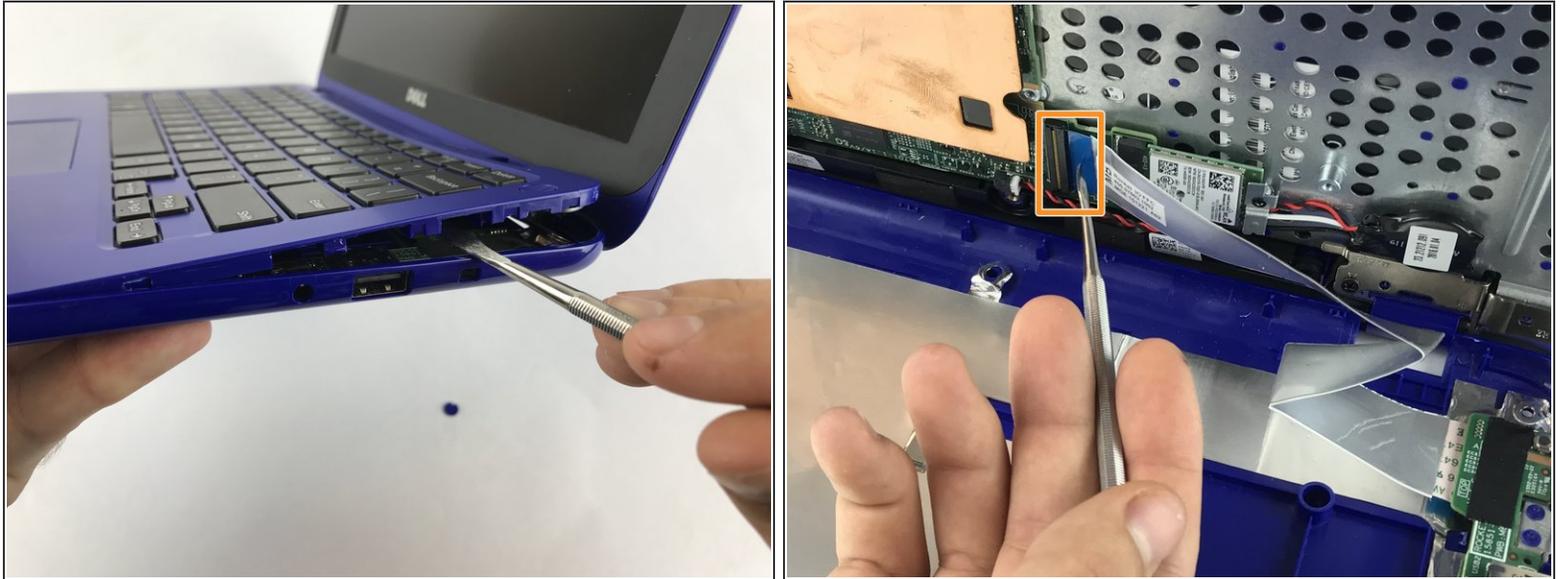

- Use your metal pry tool to pry around the laptop until the two pieces separate.
- ⚠ There will be a ribbon cable holding the two pieces together, be careful not to rip it out of its socket.
- Use your metal pry tool to release the connector.

Step 3

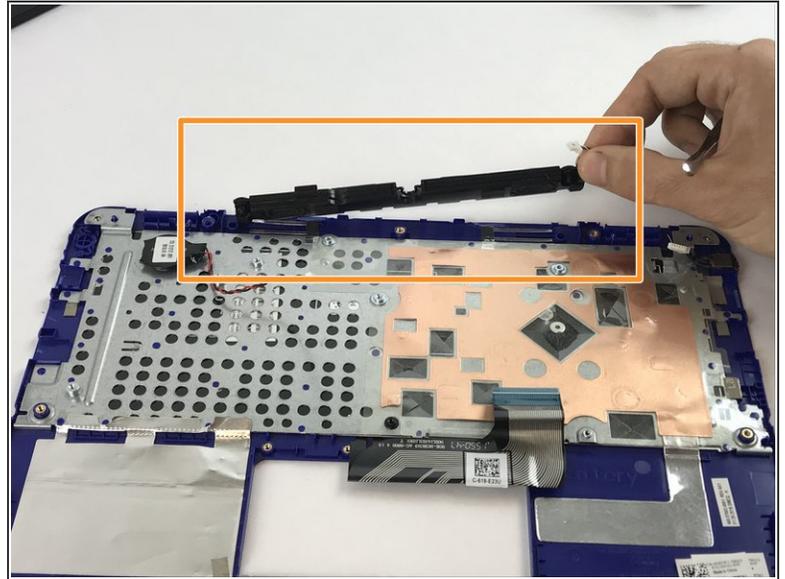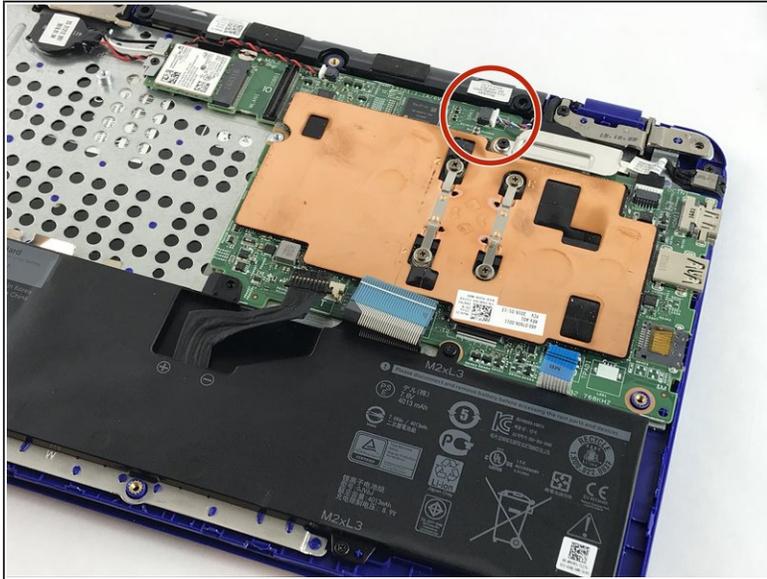

- Remove the speaker plug from its socket.
- Lift the speaker assembly from the case.

To reassemble your device, follow these instructions in reverse order.