



Acer Aspire One Cloudbook 14 AO1-431-C8G8

Back Panel Replacement

Remove and replace the back panel of your Acer Aspire One Cloudbook 14 AO1-431-C8G8. The back cover is important in doing the rest of the guides.

Written By: Joseph



INTRODUCTION

The back panel is essential to covering all of the components of the laptop. This guide will show you how to remove the back panel.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Remove the ten 7mm Phillips #0 screws from the bottom.

Step 2

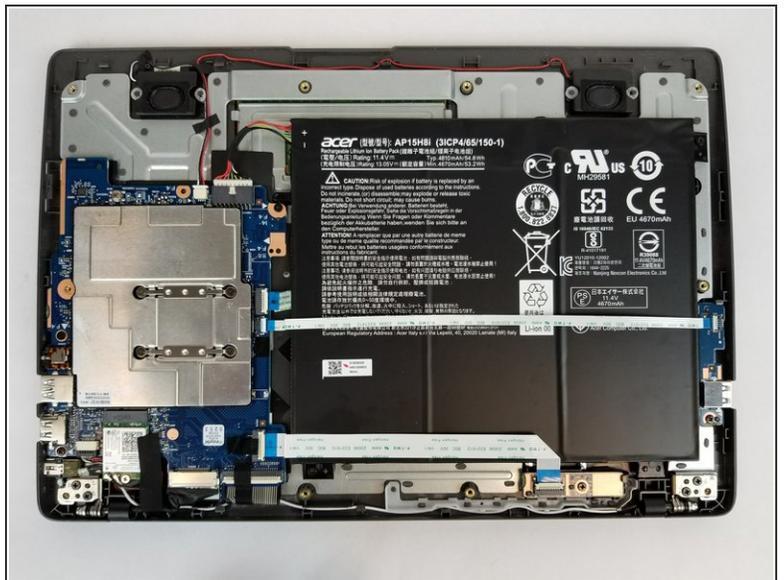

- Insert a plastic opening tool under the bottom cover and slid it around the perimeter until all of the clips release.

To reassemble your device, follow these instructions in reverse order.