




Dell Vostro A90 Battery Removal


Written By: Johnathan Hammond

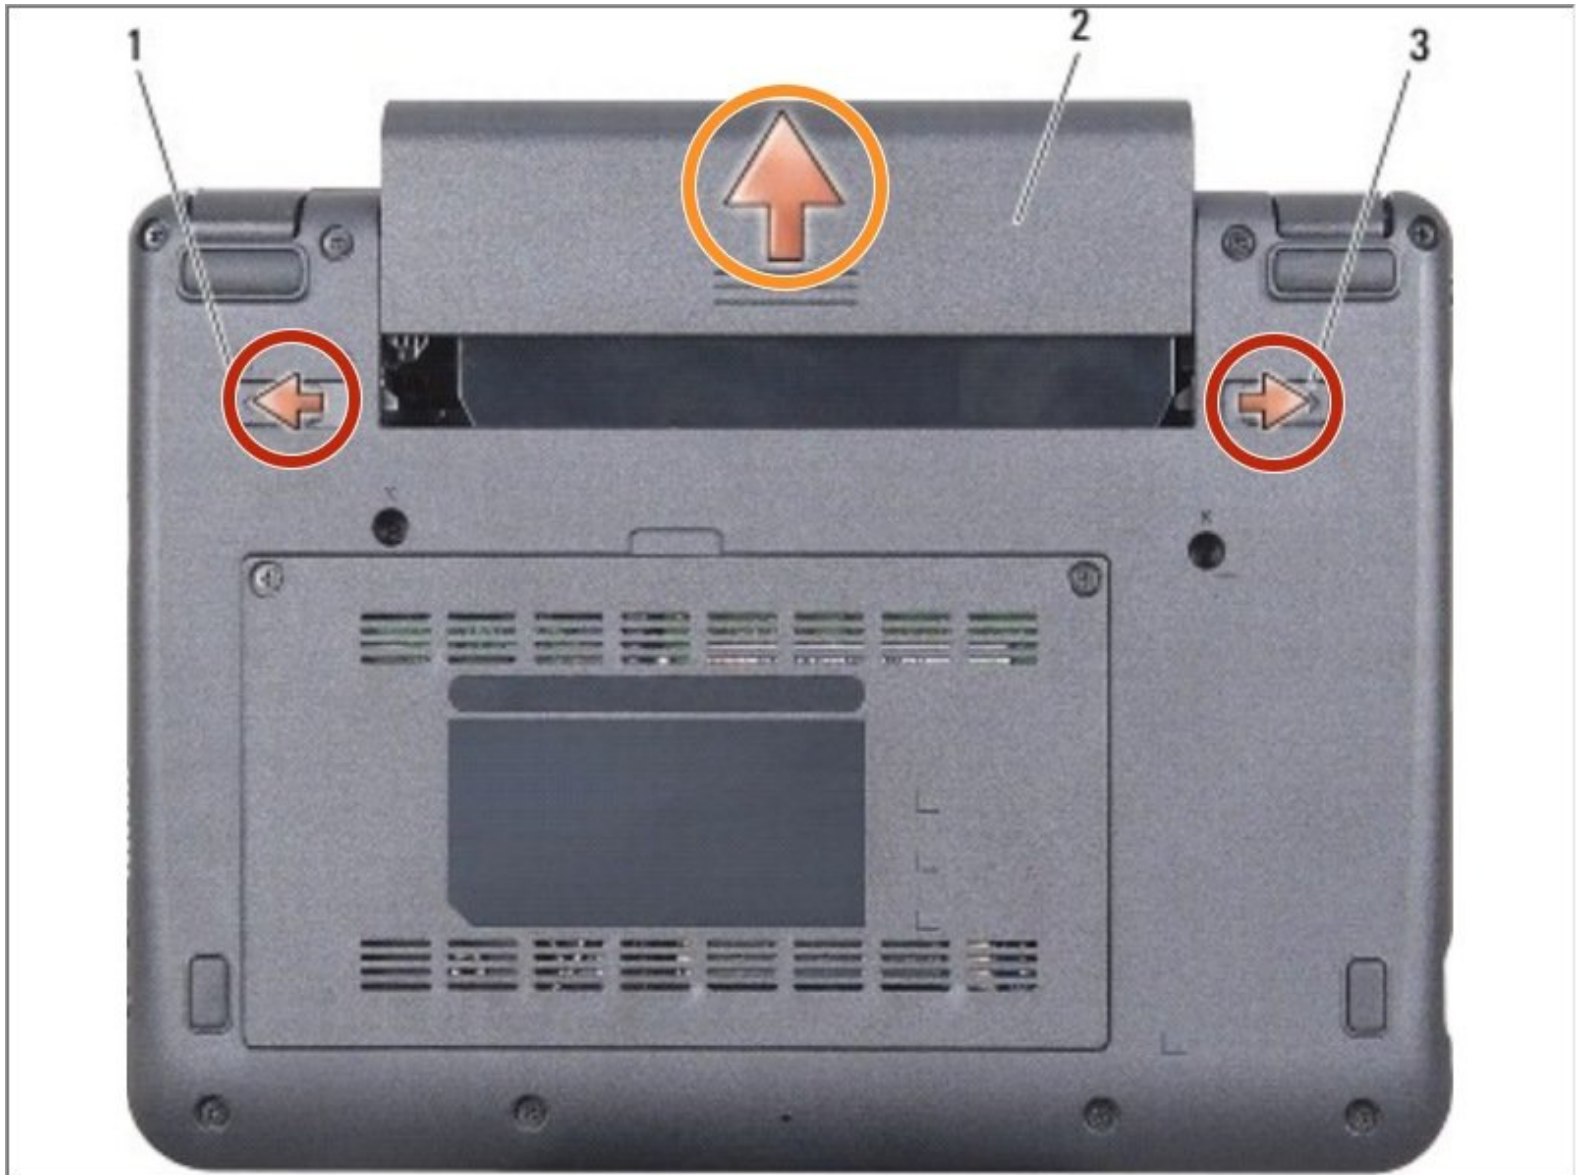

INTRODUCTION

In this guide, we will show you how to remove the Battery.

Step 1 — Removing the Battery

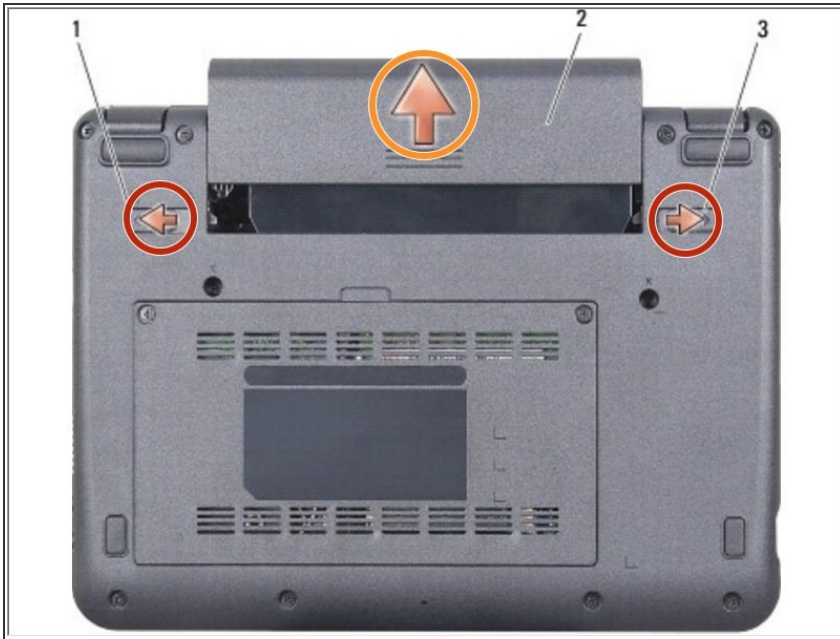

- Turn the computer over.
 - Slide the battery-bay release latch and the battery-lock latch towards the outer edges.
 - Slide the battery out of the battery bay.
 - Turn the computer top-side up, open the display, and press the power button to ground the system board.
- ★ If this is all you are doing Follow Step In Reverse if not Go to Next Step.