




Dell Vostro A840 Memory Module Replacement


Written By: Johnathan Hammond

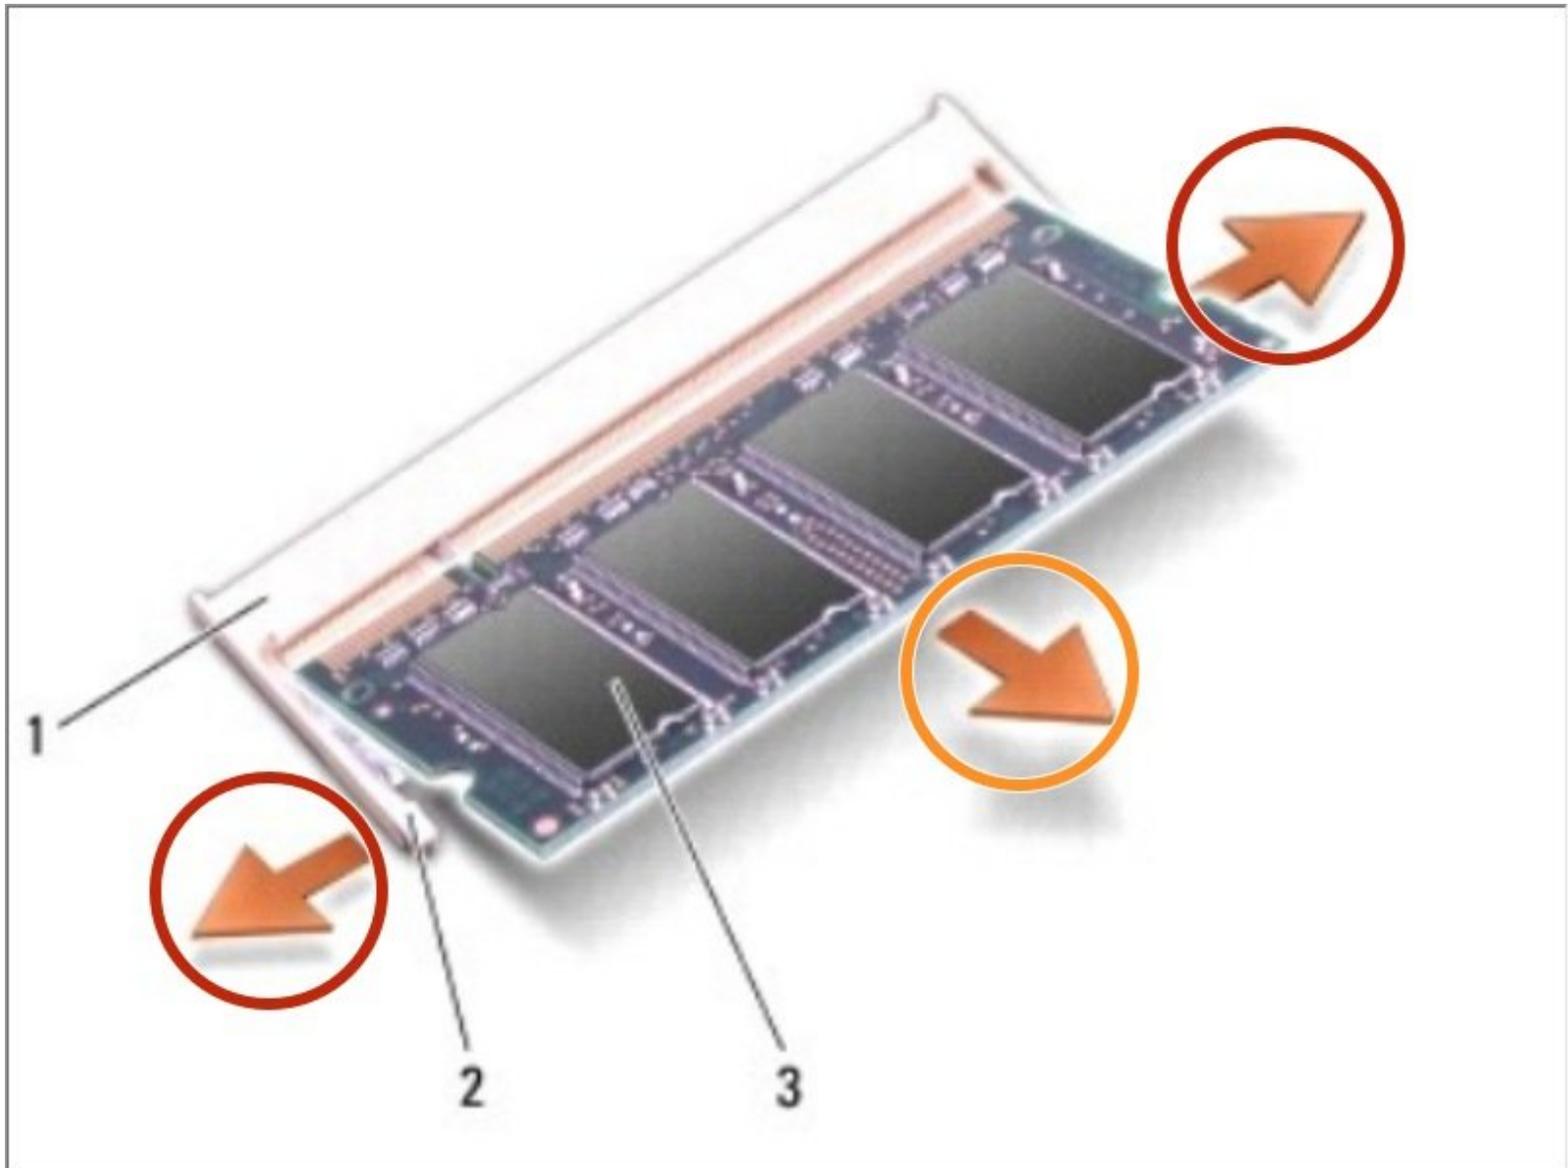

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the battery

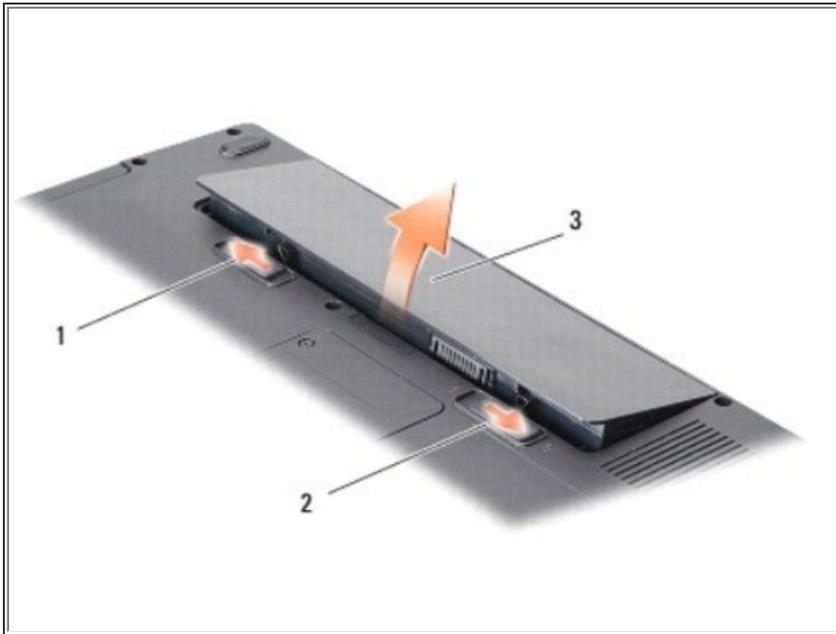


- Unlock the battery by sliding the battery-lock latch towards the outer edge.
 - Slide the battery-bay release latch and hold it.
 - Remove the battery from the battery bay.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 2 — Remove the Module Cover

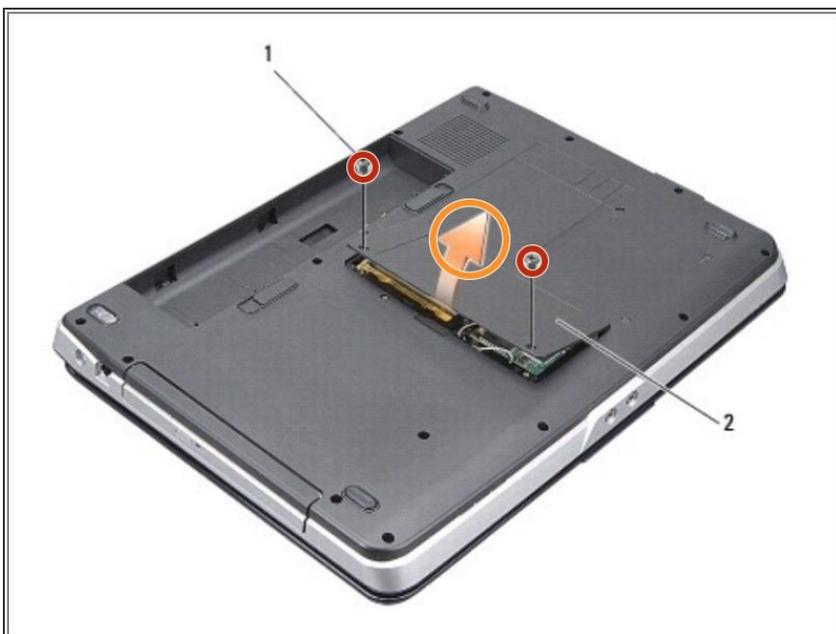

- Remove the two screws from the module cover.
 - Lift the module cover away from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 3 — Removing the Memory Module

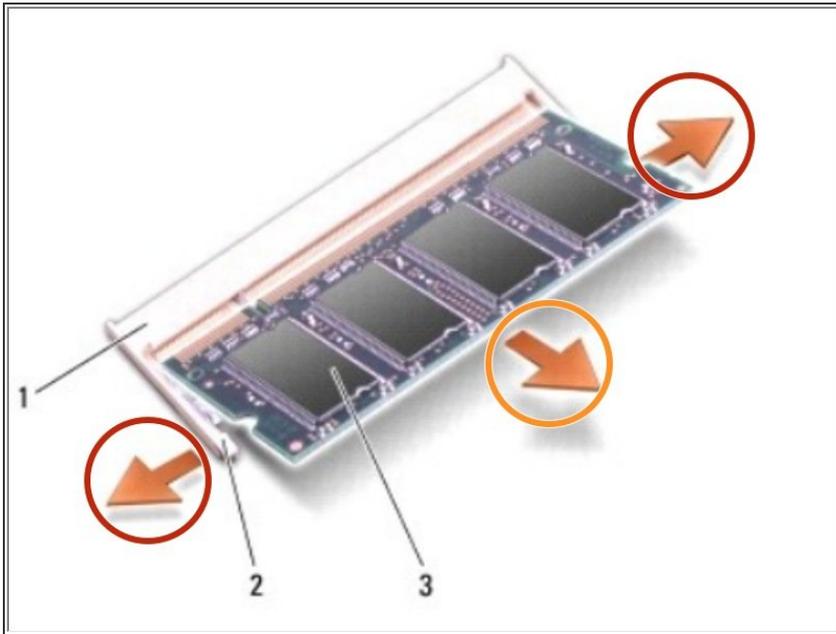

- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
 - Remove the module from the connector.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

To reassemble your device, follow these instructions in reverse order.