


# **Dell Vostro 5470 Hard Drive Replacement**


Written By: Johnathan Hammond

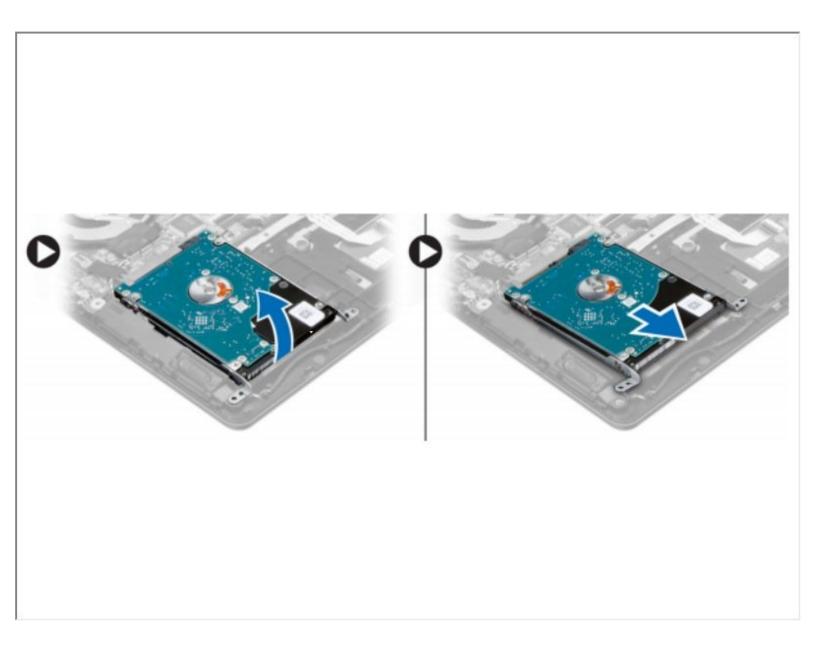

## F TOOLS:


• Phillips #0 Screwdriver (1)

## Step 1 — Remove the Screws

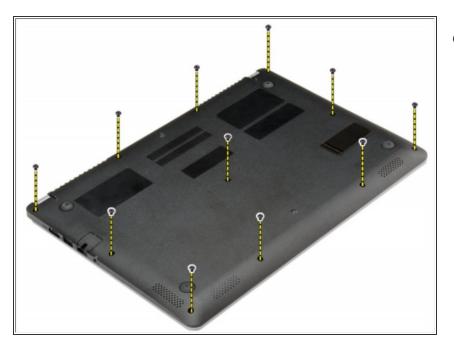

• Remove the screws that secure the base cover to the computer.

## Step 2 — Loosening the Base Cover

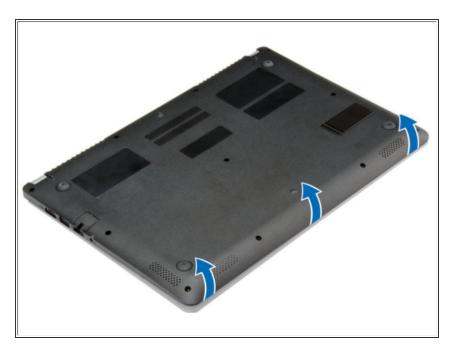


• Pry the base cover along the edges to loosen it.

### Step 3 — Removing the Base Cover




- Lift and remove the base cover from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

## Step 4 — Disconnecting the Battery Cable

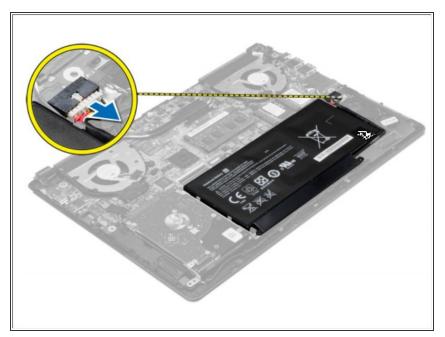


• Disconnect the battery cable from its connector on the system board.

## Step 5 — Releasing the Tabs

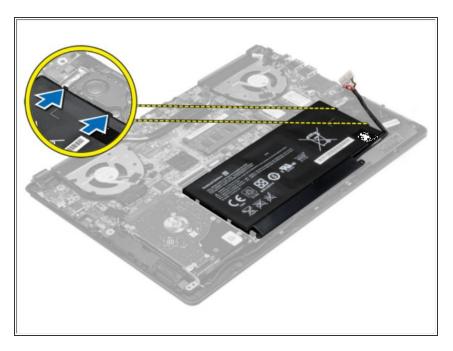


• Release the tabs that secure the battery in the battery bay.

## Step 6 — Removing the Battery

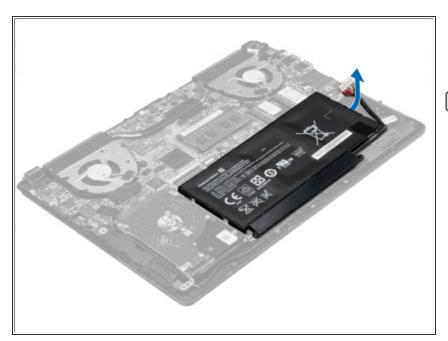


- Lift and remove the battery from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

#### Step 7 — Hard Drive

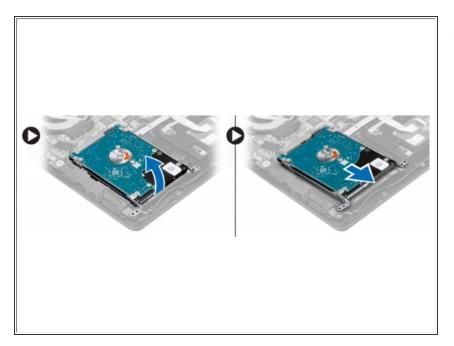

 Lift the hard drive assembly in an upward direction to release it from its compartment on the computer. Remove the hard drive from the computer.

## Step 8

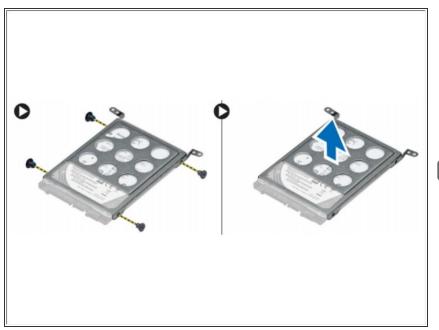

- Remove the screws that secure the hard drive to the hard drive assembly.
  - Lift and remove the hard drive from the hard drive assembly.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

To reassemble your device, follow these instructions in reverse order.