




Dell Vostro 500 Battery Replacement

How to replace the battery in the Dell Vostro 500.


Written By: Johnathan Hammond

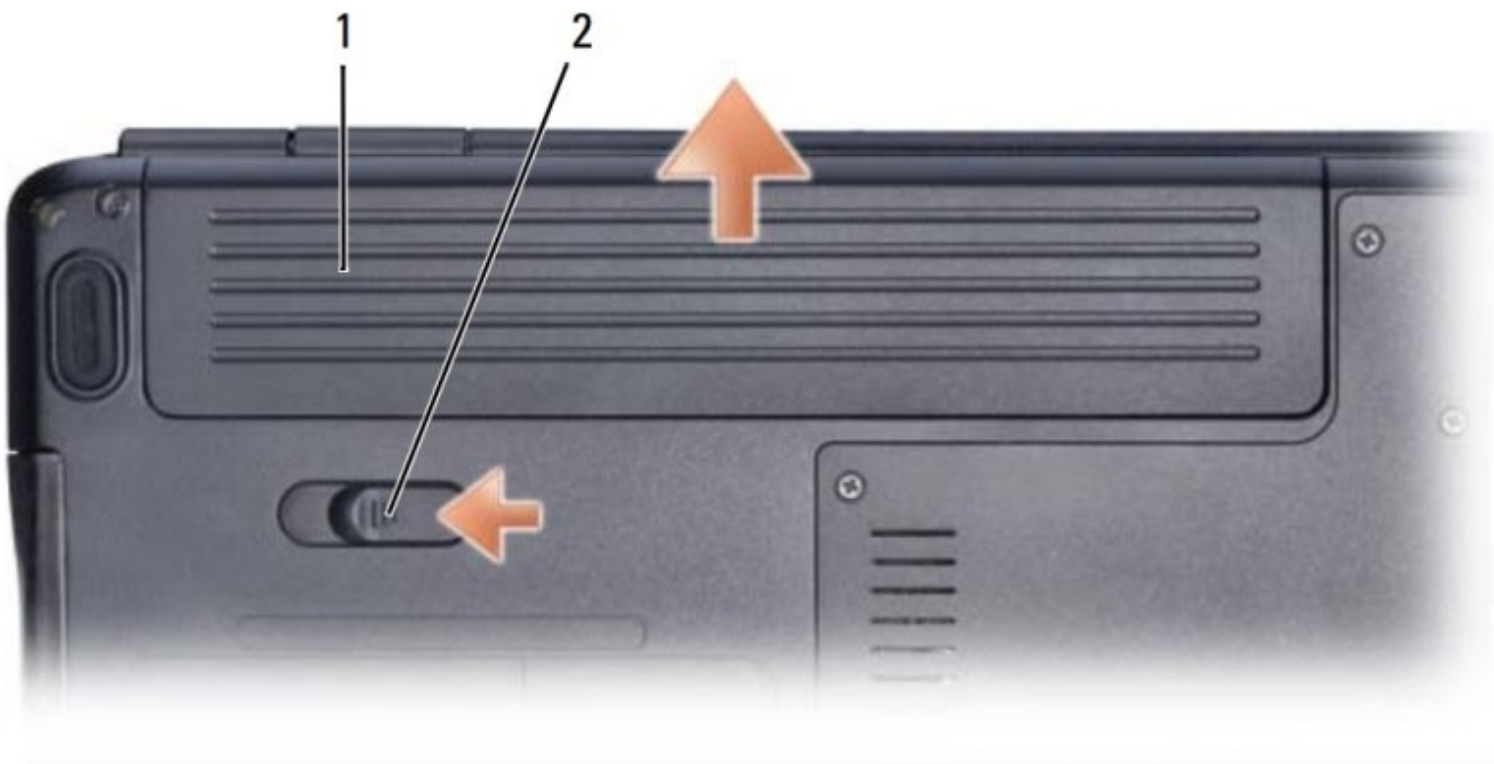

INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

Step 1 — Removing the Battery

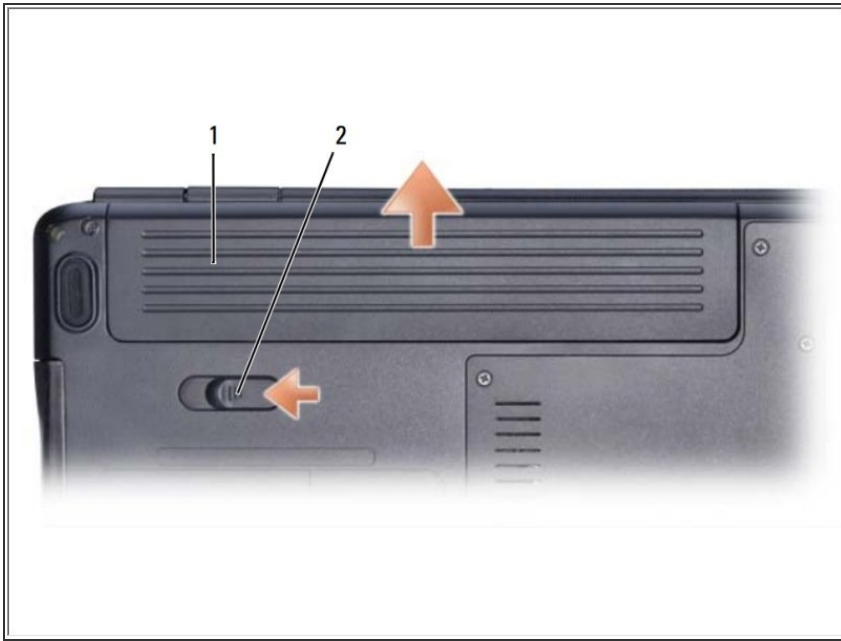

- Slide the battery release latch toward the side of the computer until it is engaged.
 - Slide the battery out of the bay.
- ★ If this is all you are doing Follow Step In Reverse if not Go to Next Step.