

Dell Vostro 3750 Battery Replacement

In this guide, we will be showing you how to...

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

PARTS:


[Dell DL-I13R Battery](#) (1)

Step 1 — Unlocking the Battery



- Slide the release latches to unlock the battery.

Step 2 — Removing the Battery

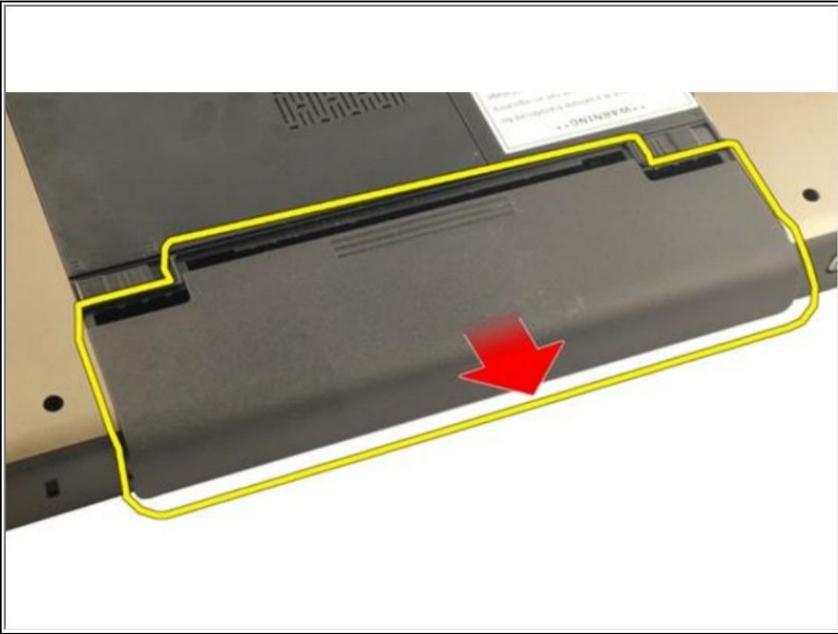

- Slide the battery out of the chassis and remove it from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.