

Dell Vostro 3561 Battery Replacement

How to replace the battery of a Dell Vostro 3561.


Written By: Johnathan Hammond



INTRODUCTION


In this guide, we will show you how to remove and replace the Battery.

Step 1 — **Sliding the Battery Release Latch**

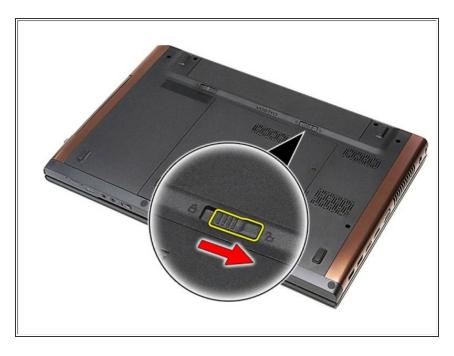


- Flip the computer over.
 - Slide the battery release latch to the unlock position.

Step 2 — Slide the Battery Release Latch

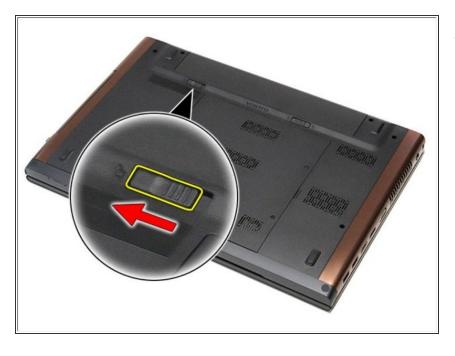

 Slide the other battery release latch to the unlock position.

Step 3 — Removing the Battery

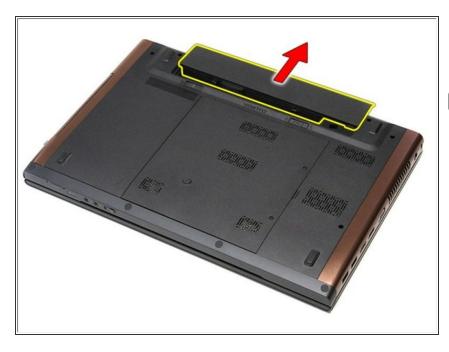

- Slide the battery and remove it from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.