


Dell Vostro 3550 Battery Replacement

In this guide, we will show you how to remove...

Written By: Johnathan Hammond

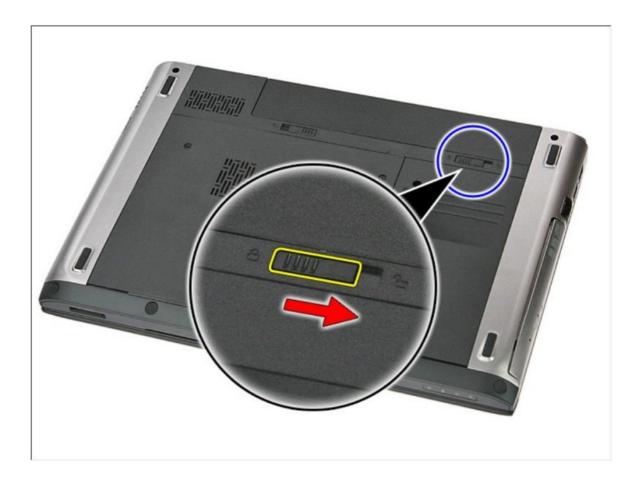

INTRODUCTION


In this guide, we will show you how to remove and replace the battery in your Dell Vostro 3550.



PARTS:


Dell DL-I13R Battery (1)

Step 1 — Unlocking the Battery

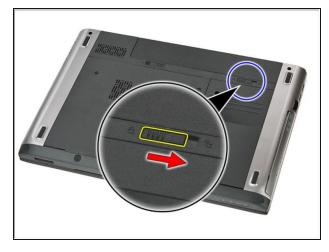

• Slide the release latches to unlock the battery.

Step 2 — Sliding the Battery

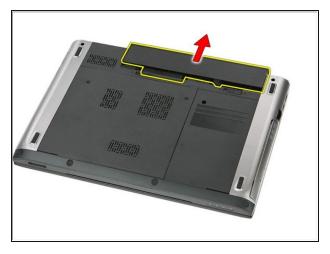

• Slide the battery and remove it from the computer.