




# Dell Vostro 3550 Memory Module Replacement

In this guide, we will show you how to remove...

Written By: Johnathan Hammond

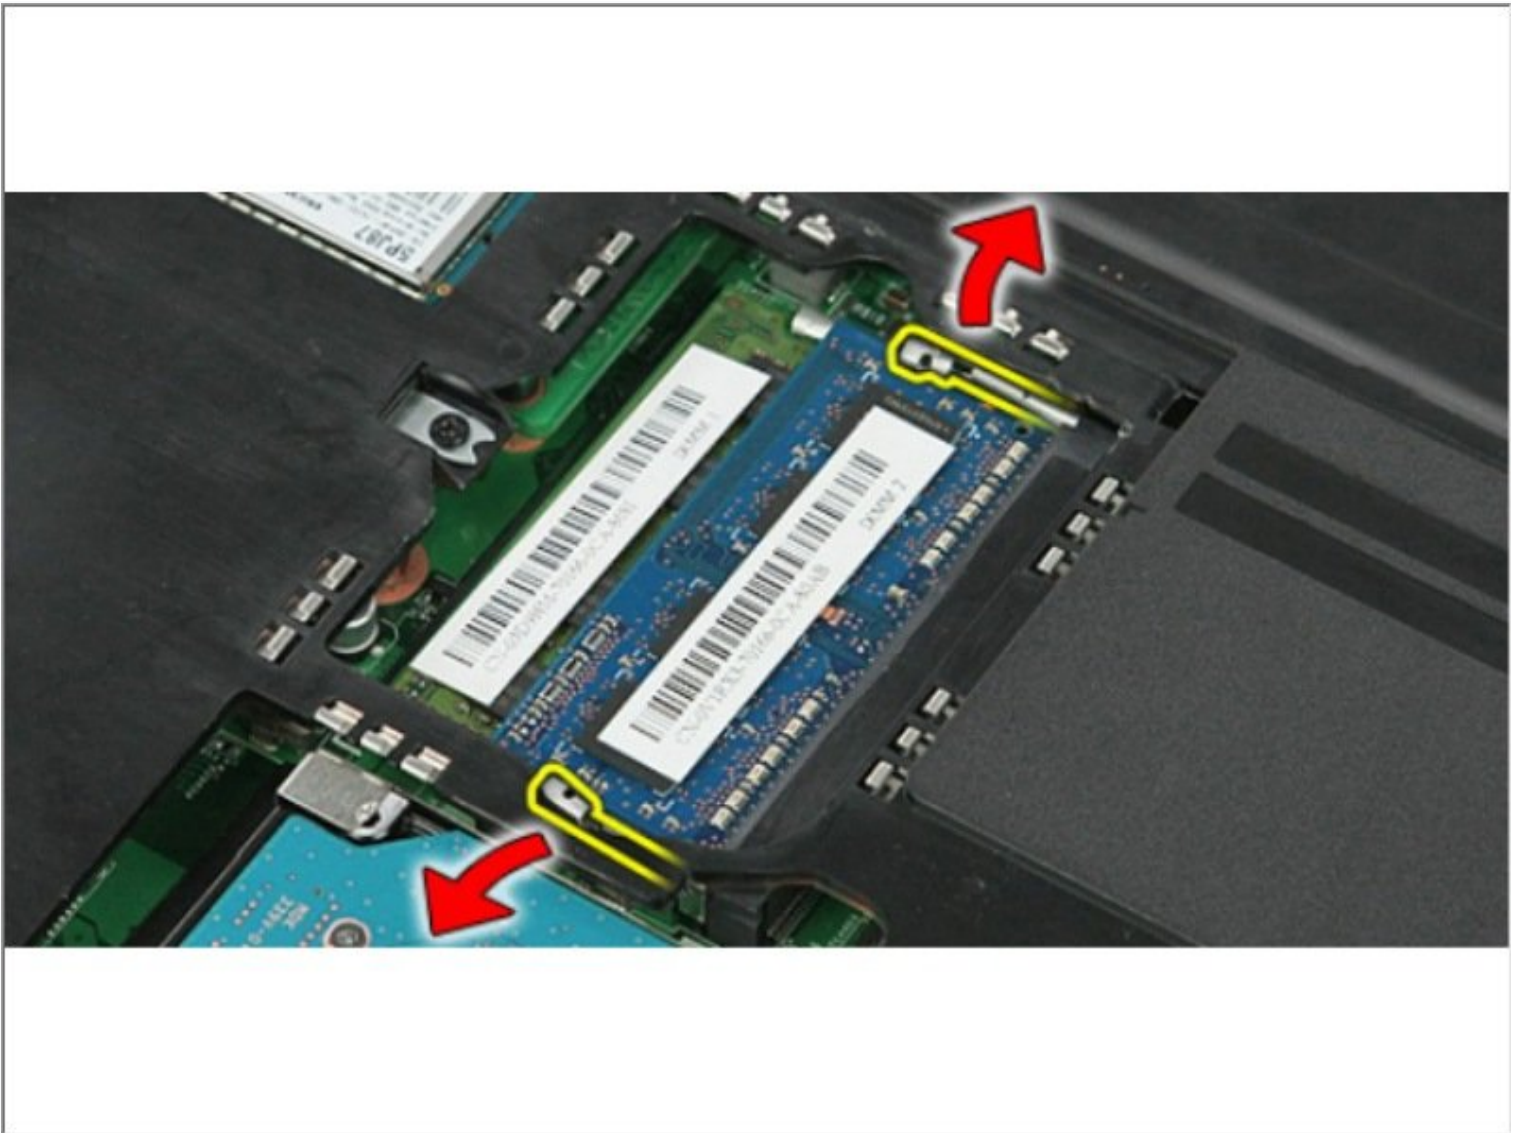

# INTRODUCTION

In this guide, we will show you how to remove and replace the Memory Module.



## TOOLS:


Phillips #0 Screwdriver (1)

### Step 1 — Unlocking the Battery



- Slide the release latches to unlock the battery.

## Step 2 — Sliding the Battery

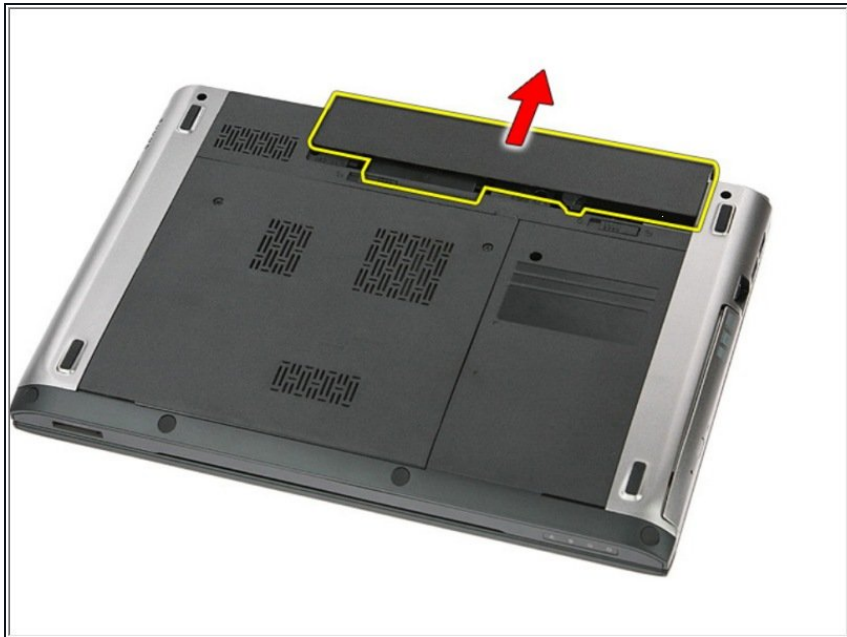


- Slide the battery and remove it from the computer.

## Step 3 — Remove the Screws




- Remove the three 7mm Phillips #0 screws that secure the access panel to the base of the computer.

## Step 4 — Lifting the Access Panel

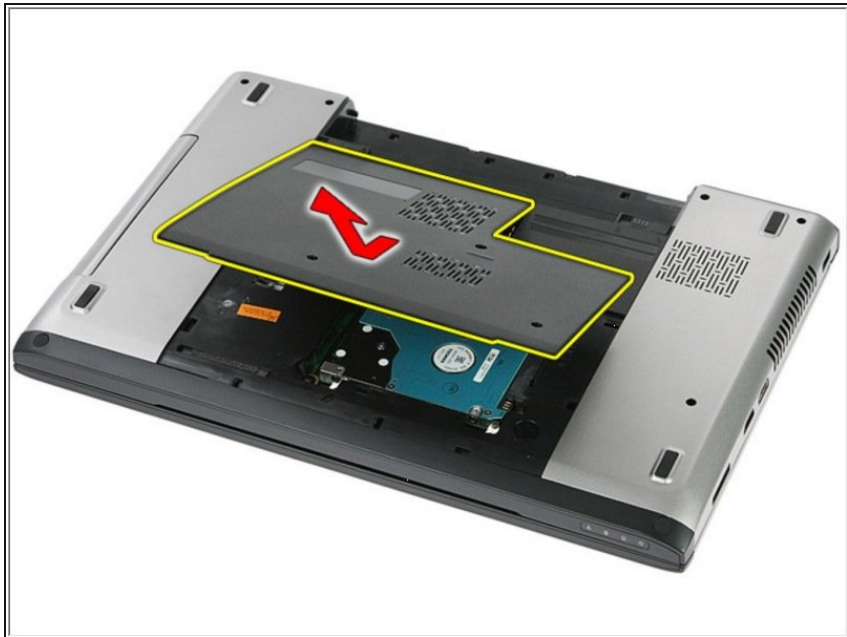


- Lift the access panel up at an angle and remove it from the computer.

## Step 5 — Memory Module

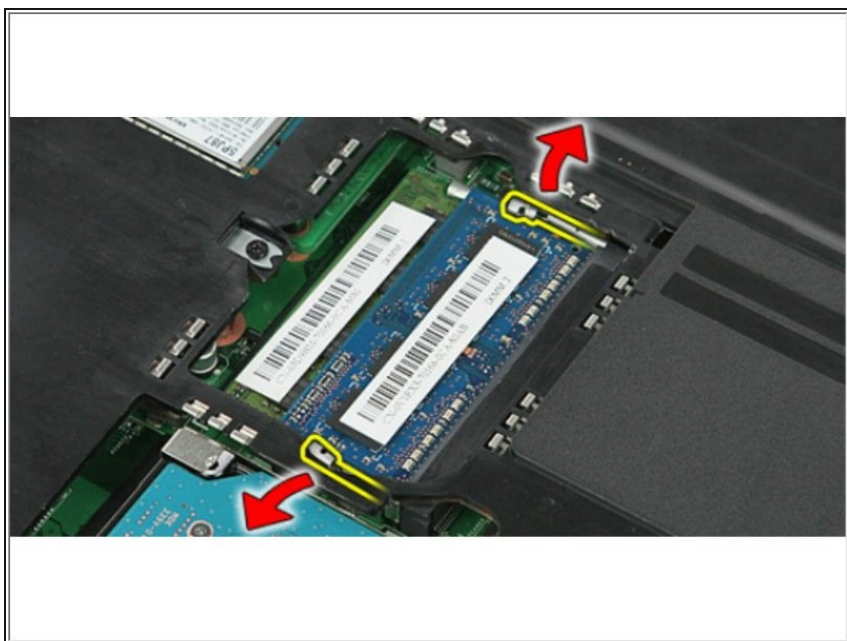

- Pry the retention clips away from the memory module until it pops up.

## Step 6 — Remove the Memory Module

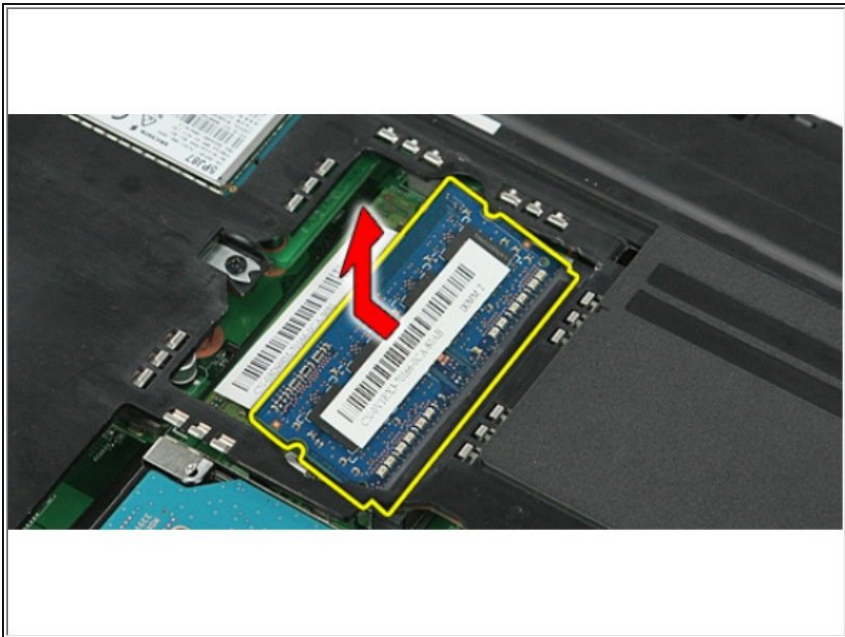

- Remove the memory module from its connector on the system board.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.