

INTRODUCTION

A guide on how to replace the fan on your Toshiba Satellite C55-B5200 laptop.


TOOLS:

Phillips #0 Screwdriver (1)

Tweezers (1)

Spudger (1)

Step 1 — Battery

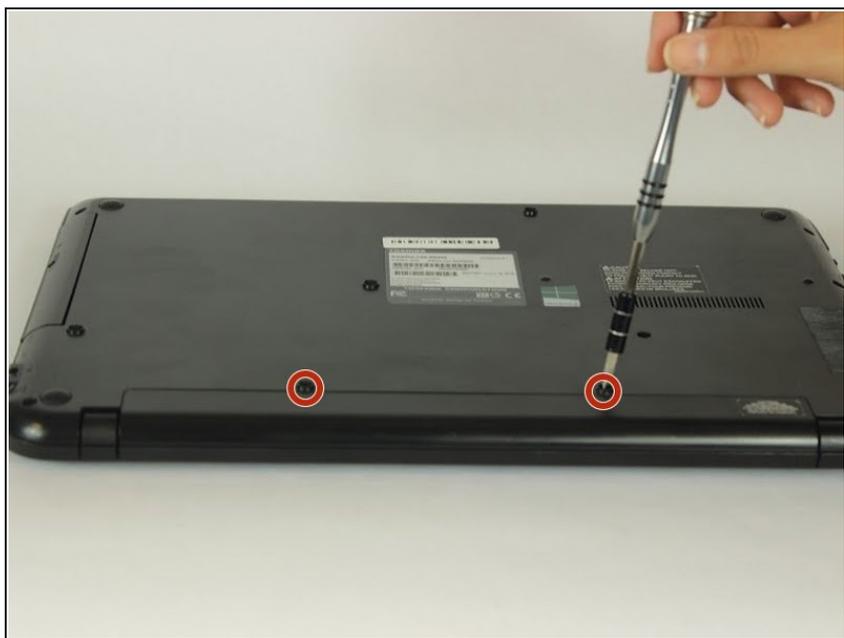



- Turn the laptop off and remove all sources of power.
- Flip the laptop over so that way the bottom is facing towards you.
- Remove the two 6.6mm Phillips #0 screws from the battery.

Step 2



- Pull the battery out of the laptop.

Step 3 — Fan

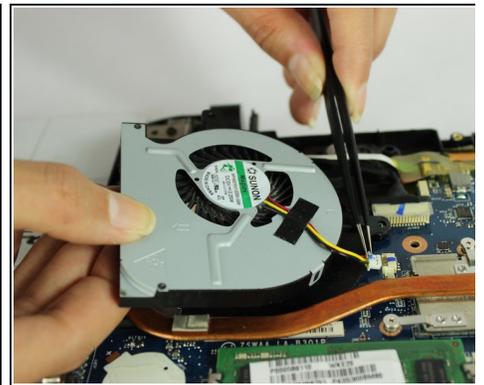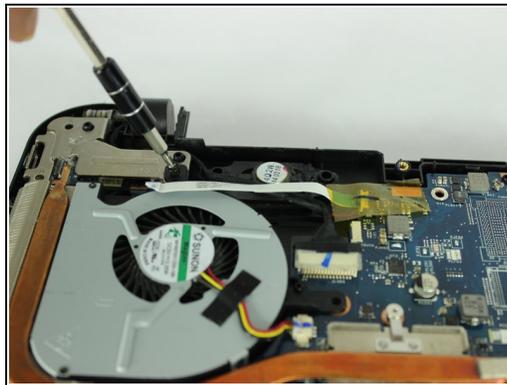

- Remove the single 4.6mm Phillips #0 screw securing the fan.
- Use a pair of tweezers to unplug the fan from the motherboard.
- Pull the fan out.

To reassemble your device, follow these instructions in reverse order.