

# **Dell Vostro 3450 Memory Door Replacement**

In this guide, we will show you how to remove...

Written By: Johnathan Hammond



#### **INTRODUCTION**

In this guide, we will show you how to remove and replace the Memory Door.



### TOOLS:

Phillips #0 Screwdriver (1)

### Step 1 — Unlocking the Battery



 Slide the left and the right battery release latches to the unlock position.

## Step 2 — Removing the Battery




 Slide the battery and remove it from the computer.

### Step 3 — Loosen the Screw



• Loosen the screw that secures the memory door.

### **Step 4** — Removing the Memory Door

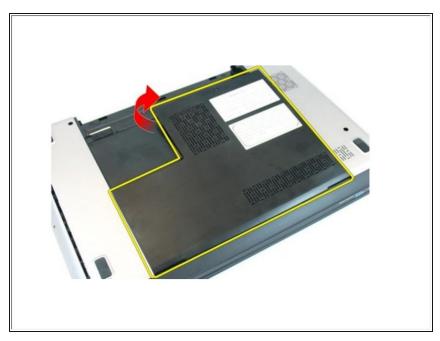

- Pry up the memory door near the screw hole, lift and remove it.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.