



Dell XPS 14Z L412Z LCD Screen Glass Replacement

The glass part of the screen protects the inside screen. This guide will show you how to replace the glass screen.

Written By: Colton Niewolny



This document was generated on 2020-11-28 06:32:12 AM (MST).

INTRODUCTION

The glass layer is important to clarity and protection of the LCD screen. However, accidents can cause the screen to crack which harms the viewing experience. This replacement is extremely difficult and requires attentive care and knowing your way around the tools. The tools required are the plastic opening tool, heat gun, and a Phillips #0 screwdriver.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Heat Gun](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-


Step 1 — LCD Screen Glass



- Using the iFixit opening tools, carefully pry up the trim around the screen.


i It is recommended to start in a corner.

Step 2

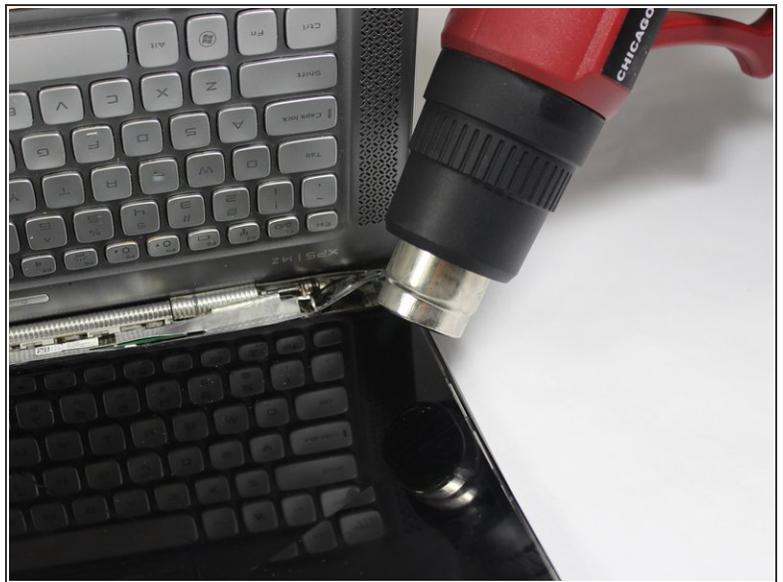

- Using a heat gun, carefully apply heat evenly across the glass.

Step 3

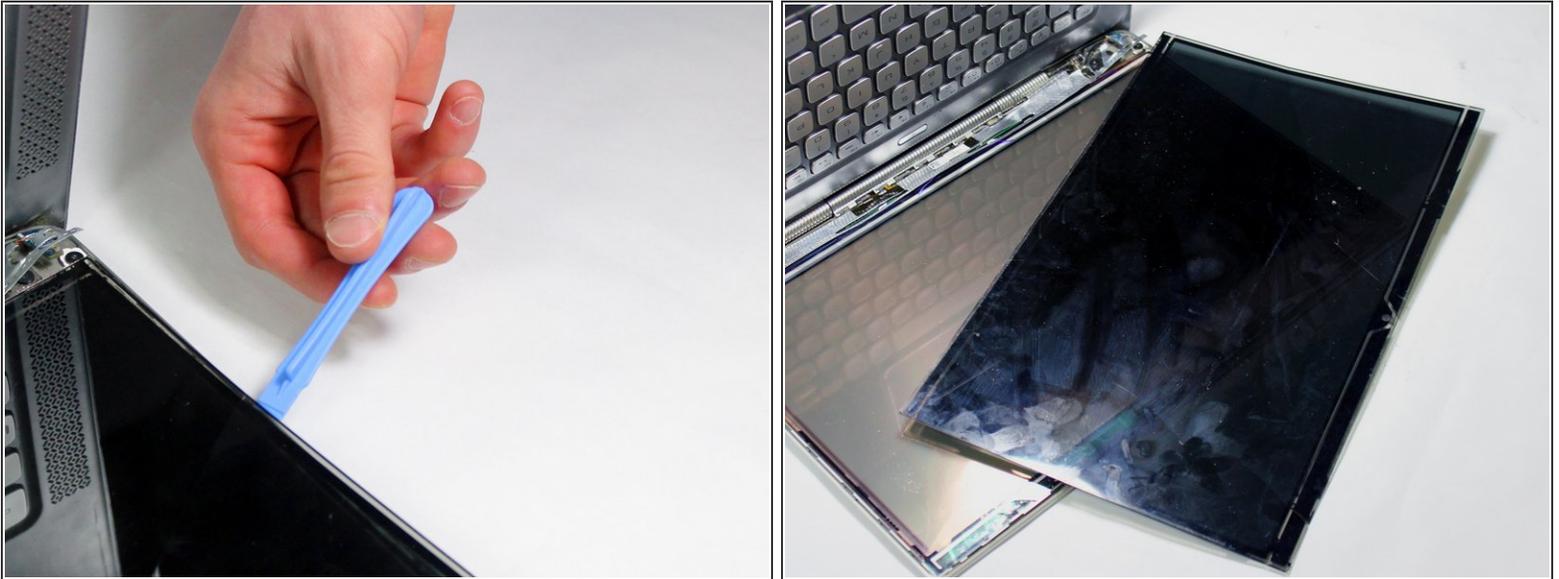

- Using the iFixit opening tools, carefully pry the glass off the screen.

 This is glass and will shatter if too much force is used.

To reassemble your device, follow these instructions in reverse order.