



SiriusXM Onyx Plus Buttons Replacement

In this guide we will be replacing the buttons on a SiriusXM Onyx Plus radio.

Written By: Angel Rivera



INTRODUCTION

Buttons might tear and get worn out so it is important to replace the buttons.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [JIS #00 Screwdriver](#) (1)
-

Step 1 — Case



- Wedge a plastic opening tool in between the case.

Step 2





- Starting with the bottom left corner, press down on the plastic opening tool to unhook the latches on the inside of the device.
- ❗ You have to start with the bottom left and right corners, and then flip the device to over and do the top of the device.

Step 3




- Once unclipped, separate the back casing from the device.

Step 4 — Buttons

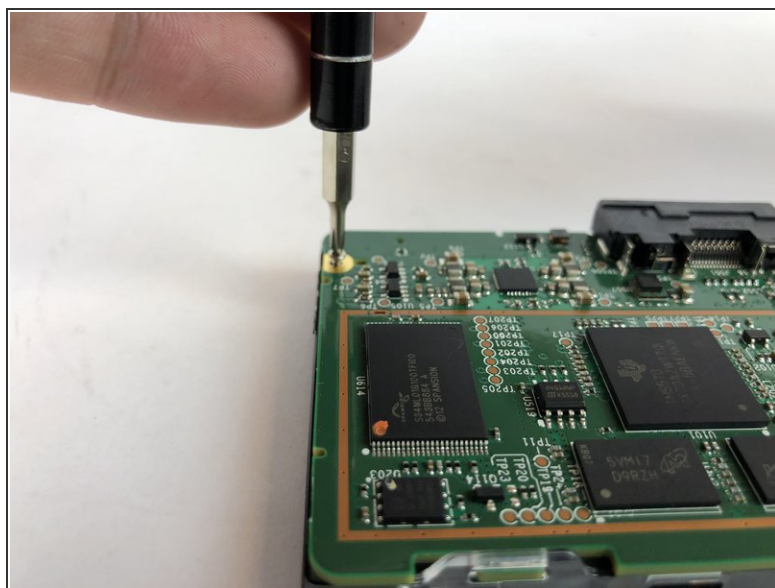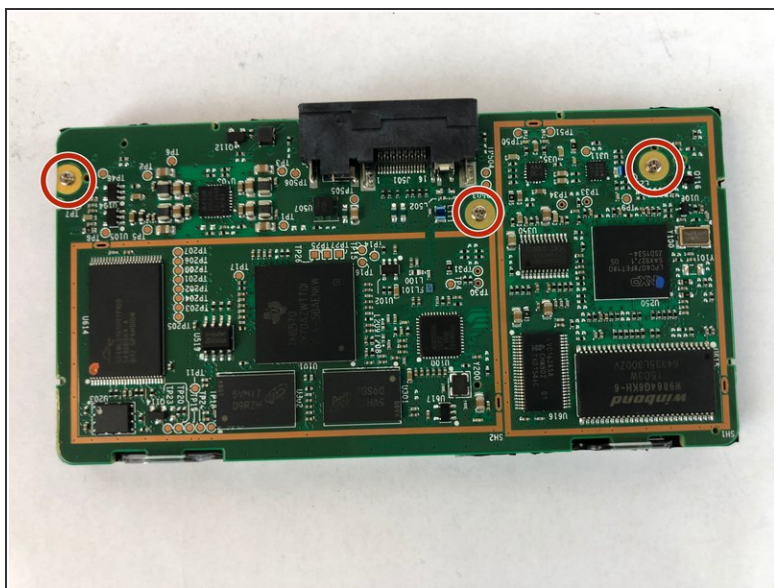


- Remove the three 5mm JIS #00 screws from the motherboard.

Step 5

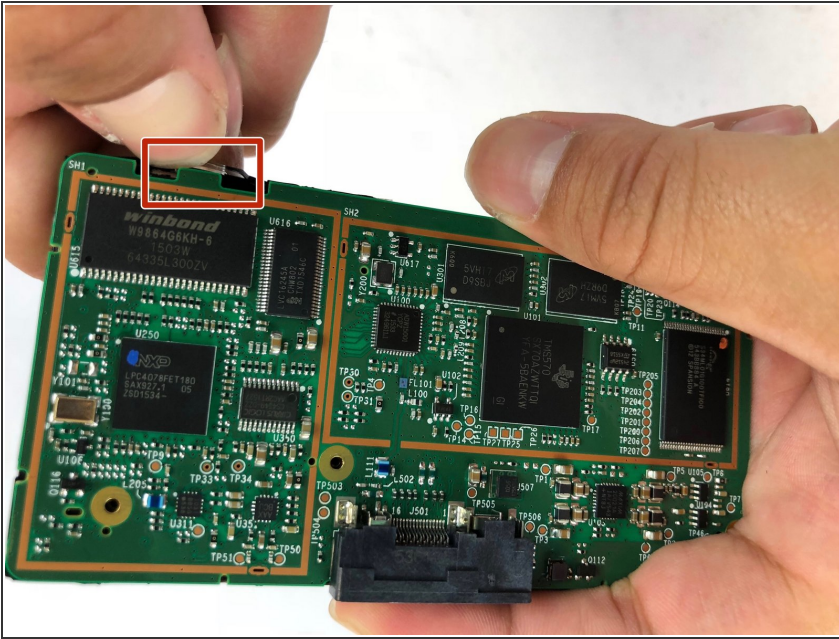

- Unlatch the two clips that hold the motherboard in place.

Step 6

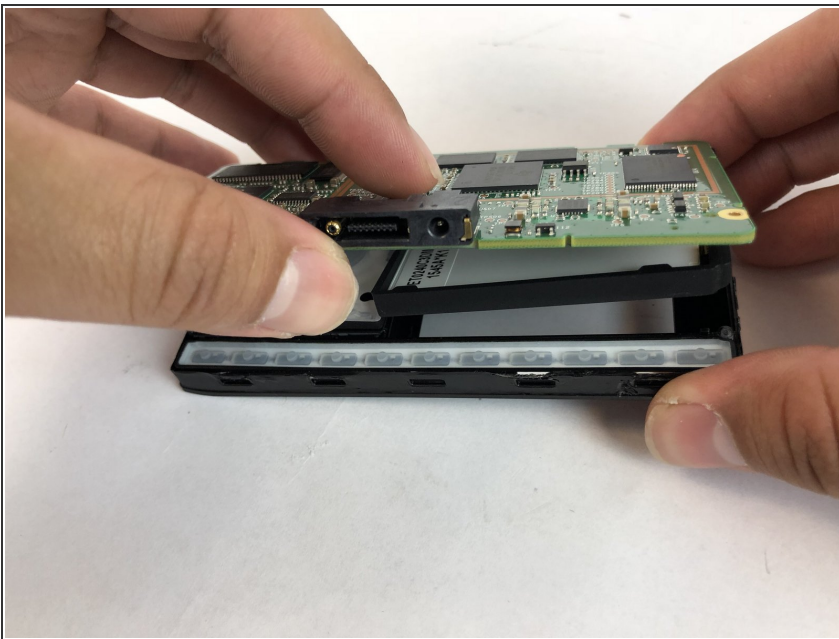

- Lift the motherboard up and out of the frame.

Step 7



- Holding the front casing in your hand, push the button panels out of the casing.

***i** There are two buttons panels: Navigation panel and the Channel Number panel*

To reassemble your device, follow these instructions in reverse order.