



# Zoom H6 Handy Recorder Knob Replacement

Replace worn or broken knobs on the Zoom H6 Handy Recorder.

Written By: William D'Arrigo



---

## INTRODUCTION

This replacement guide does not require any special preparation. Simply have the tools, new knob, and device ready before starting the guide. Knobs should be replaced when numbers are no longer readable.

---

### TOOLS:



- [iFixit Opening Tools](#) (1)
-

## Step 1 — Input Volume Knob



- Place device on table with the display facing up.

## Step 2

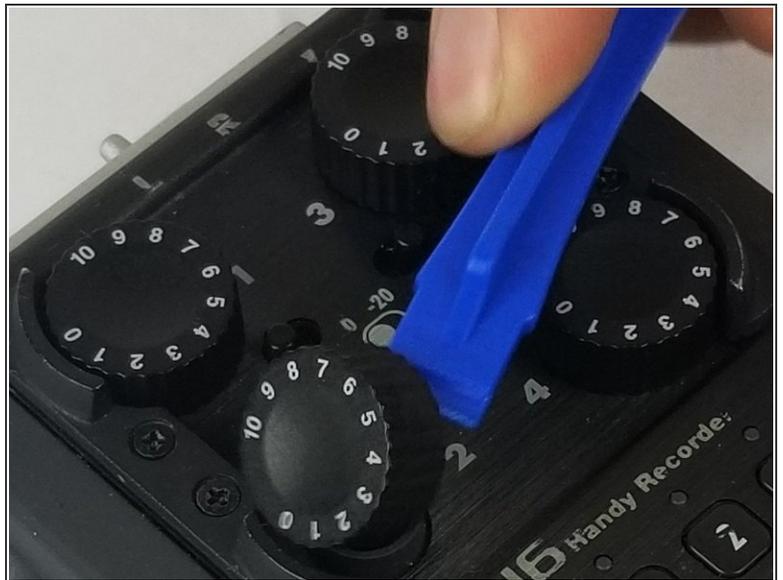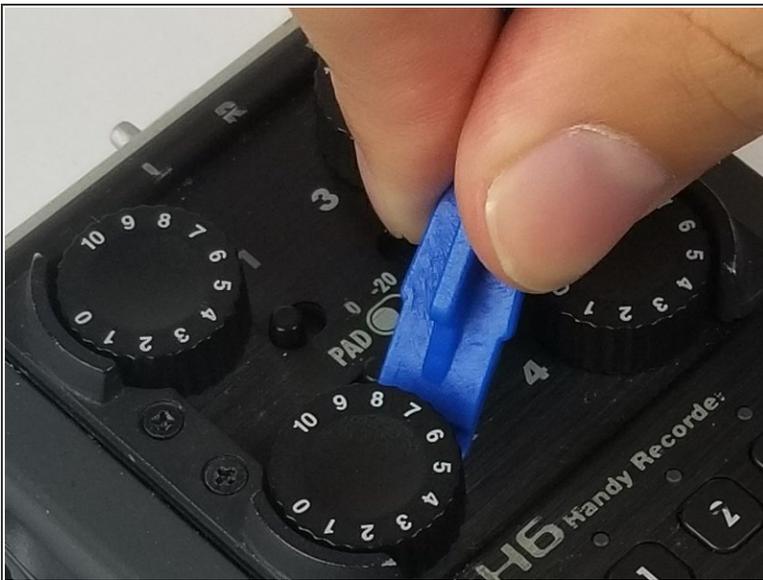

- With a plastic opening tool, place the flat end under the knob and gently pry it off.

**i** You may need to stabilize the device with the other hand.

### Step 3



- Take the new knob and align it to the correct orientation of the device.
- Press firmly until it seats fully on the device.