

Vostro 1720 Access Panel Replacement

Written By: Johnathan Hammond






Phillips #0 Screwdriver (1)

Step 1 — Sliding the Latches



 Slide the battery lock latches into the unlocked position.

Step 2 — Slide the Battery

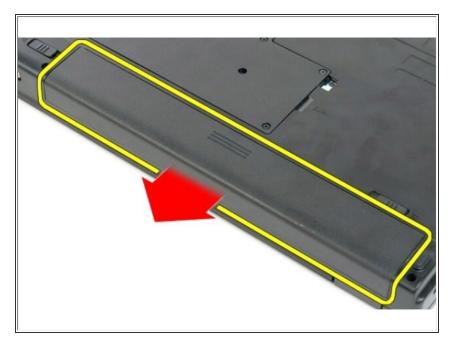


 Slide the battery toward the back of the computer to remove.

Step 3 — Remove the Screws




 Remove the eight screws from the access panel.

Step 4 — Lifting the Access Panel

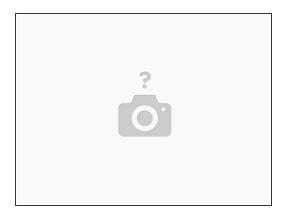

• Lift the edge of the access panel that is closest to the center of the computer.

Step 5 — Remove the Access Panel

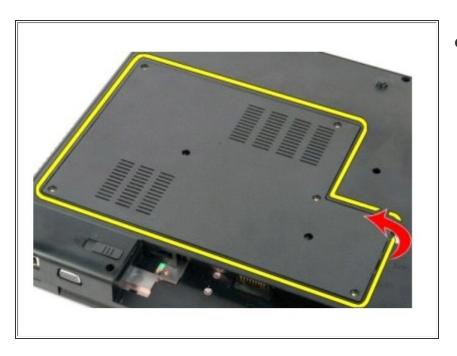

Remove the access panel.

To reassemble your device, follow these instructions in reverse order.