




# Dell Vostro 1700 Hinge Cover Replacement

Written By: Johnathan Hammond

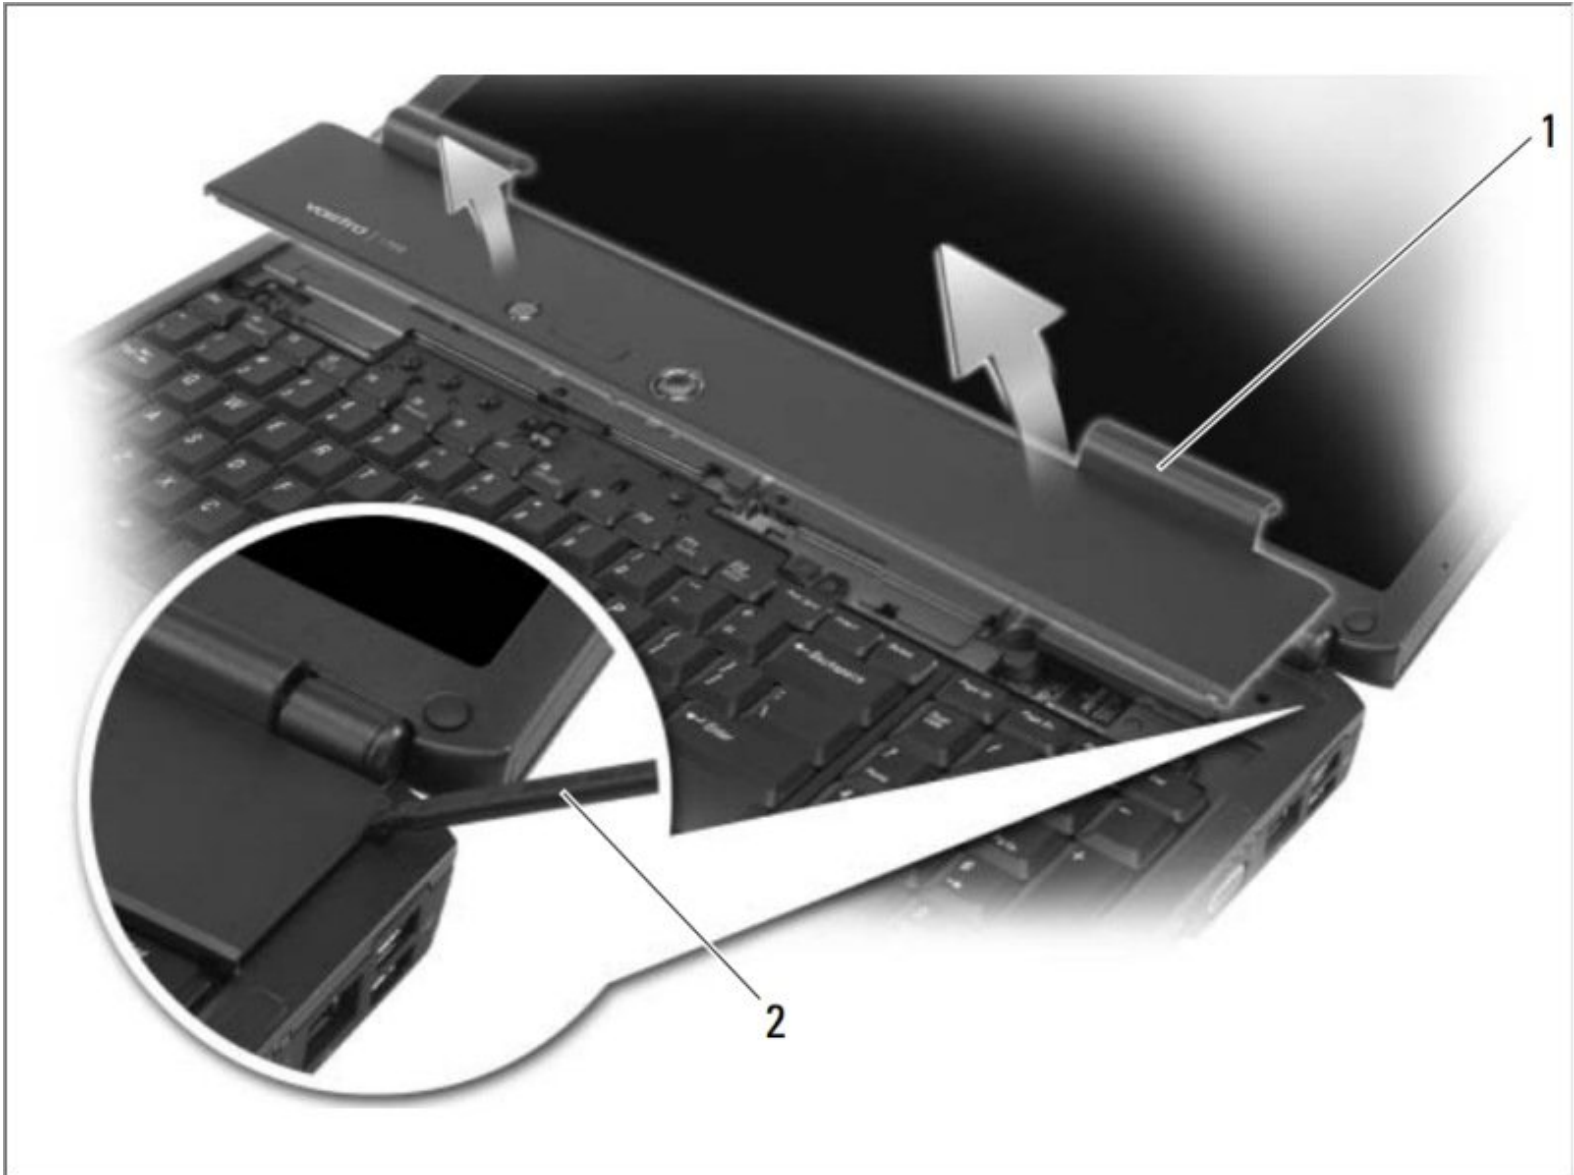

---

## INTRODUCTION


In this guide, we will show you how to remove and replace the Hinge Cover.



### TOOLS:


- [Spudger](#) (1)
-

## Step 1 — Removing the Battery

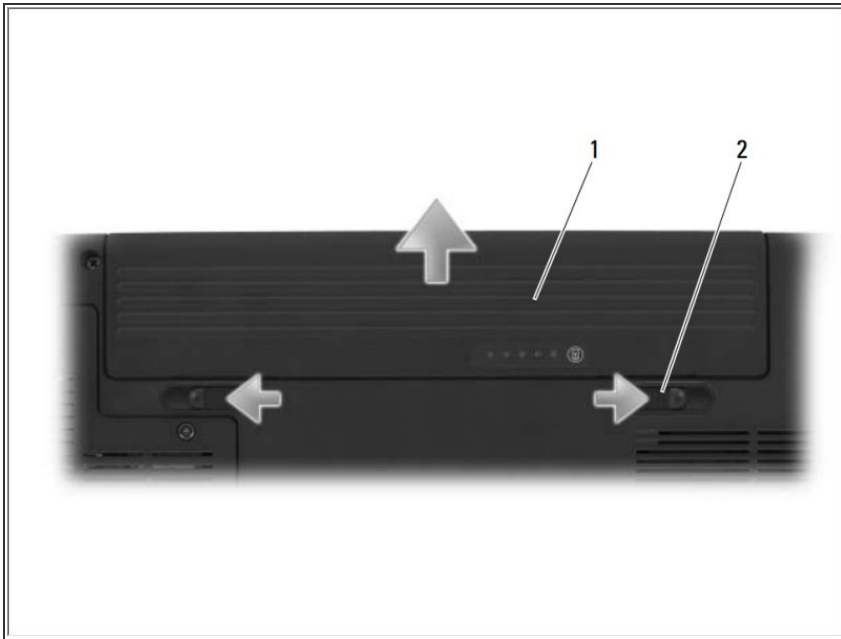

- Slide and click the battery release latches to keep them open.
- Slide the battery out of the bay.

## Step 2 — Removing the Hinge Cover

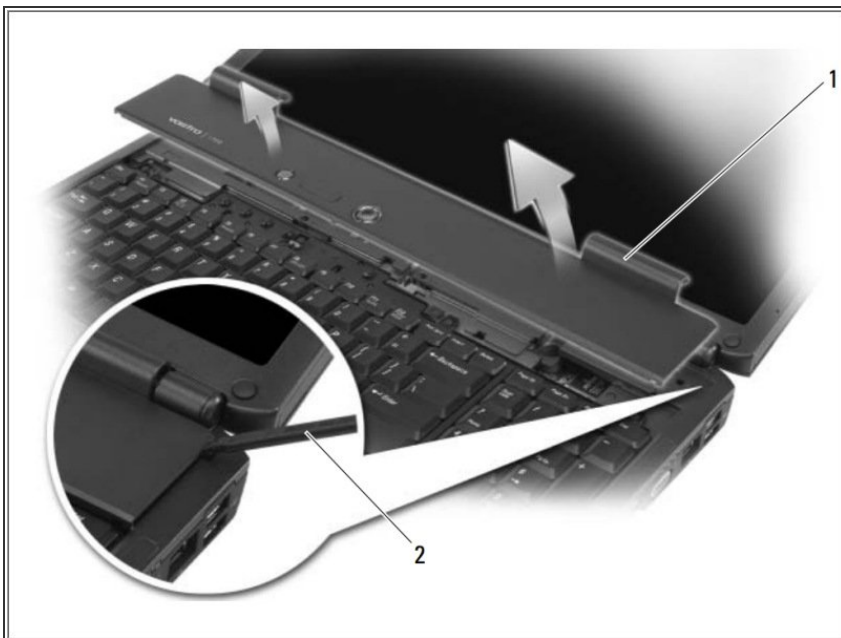

- Insert a plastic scribe into the indent to lift the hinge cover on the right side.
- Ease the hinge cover up, moving from right to left, and remove it.