



Zoom H6 Handy Recorder Case Replacement

This guide will enable the user to access the internal components for repair or replacement.

Written By: Rachel Calder




INTRODUCTION

The requirements for this guide are the right tools and the device itself. The casing should be removed when trying to access the internal components of the recorder.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Case

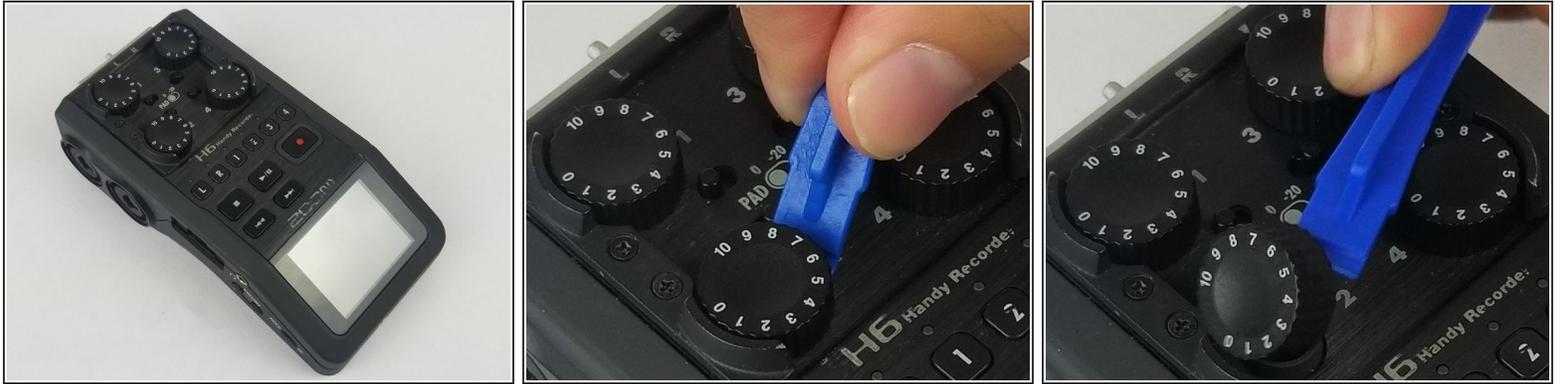

- Place device face up and pry off the four knobs using the flat end of the plastic opening tool.
- ⓘ You may need to stabilize the device with the other hand.

Step 2



- With device facedown, lift the four rubber feet from the device using tweezers or fingernails.

Step 3



- With device still facedown, unscrew six (PH #1), 9mm screws; two located in center of back side of device right above the battery cover, and four under the rubber feet.
- ⓘ An electronics screwdriver small enough to fit in hole (4mm diameter), but long enough to reach the screws (at least 2cm) will be required to unscrew the screws.

Step 4



- With the bottom of the device on a table, lift the top of the device and gently place it aside.

To reassemble your device, follow these instructions in reverse order.