




Asus ROG G53SW-XT1 Keyboard Replacement

ASUS ROG G53SW-XT1 keyboard replacement

Written By: Bailey Herring

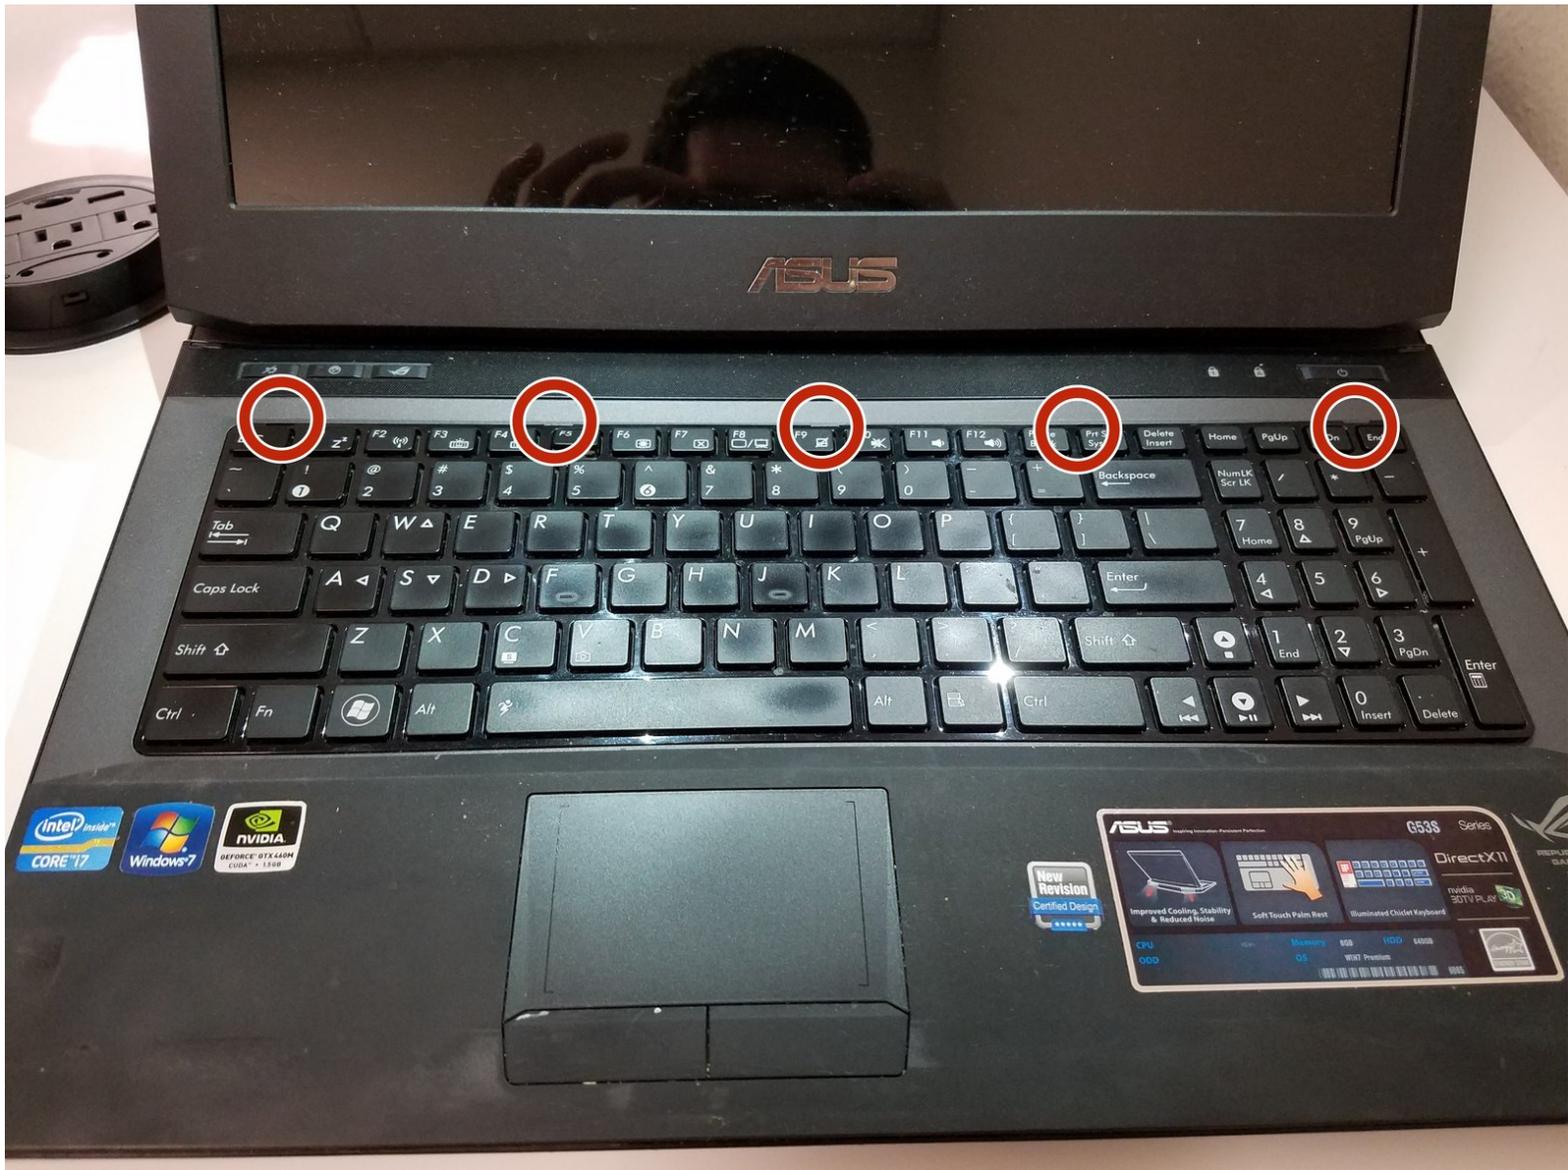

INTRODUCTION

This guide will show you how to replace the keyboard on the ASUS ROG G53SW-XT1.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Keyboard



- Insert a spudger, or plastic opening tool, into these five slots and pry upwards to pop up the keyboard.

Step 2



- Disconnect the keyboard ribbon cables from the motherboard.

To reassemble your device, follow these instructions in reverse order.