


Dell Vostro 15 Memory Module Replacement


Written By: Johnathan Hammond

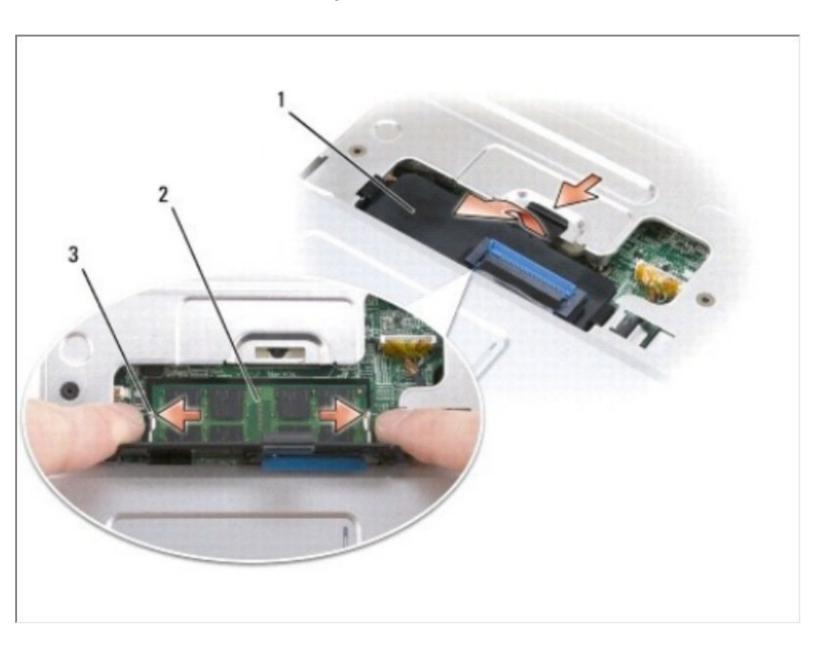




- Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery

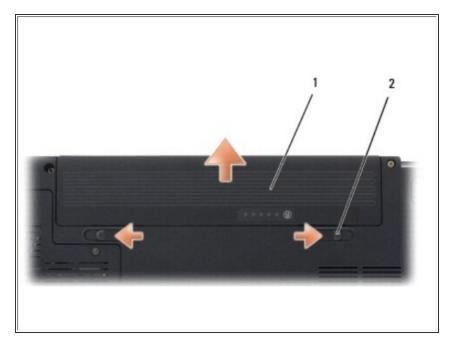


- Slide the battery release latches until they click into place.
 - Slide the battery out of the battery bay.

Step 2 — Hinge Cover

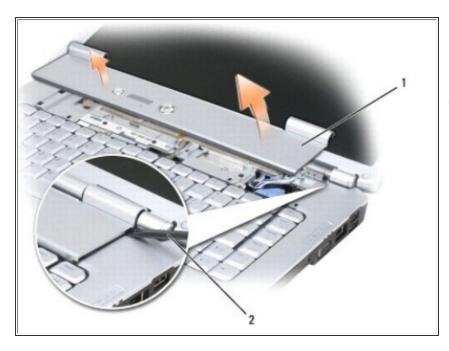


- Open the display all the way so that it rests flat on your work surface.
- NOTICE: To avoid damage to the hinge cover, do not lift the cover on both sides simultaneously.
 - Insert a plastic scribe into the indent to lift the hinge cover on the right side.
 - Moving from right to left, ease the hinge cover up, then remove it and set it aside.

Step 3 — KeyBoard

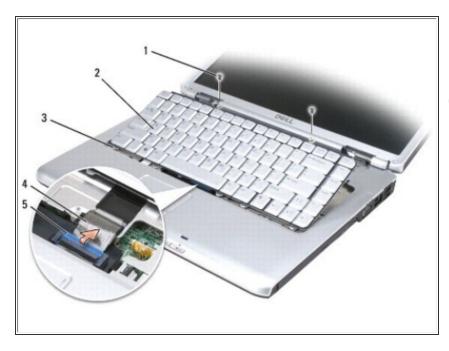

- Remove the two M2.5 x 5-mm screws at the top of the keyboard.
- NOTICE: The key caps on the keyboard are fragile, easily dislodged, and time-consuming to replace. Exercise care when removing and handling the keyboard.
- Lift the keyboard and hold it up and slightly forward to access to the keyboard connector.
 - Rotate the keyboard connector latch upward to release the keyboard cable.
 - Slide the keyboard cable out of the keyboard connector.

Step 4 — **Memory Module**

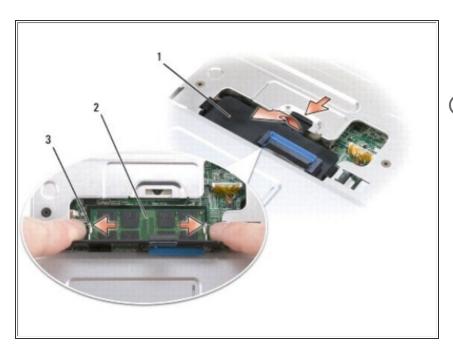

- Lift the memory module cover But
 Do Not Remove It.
- NOTICE: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.
- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
 - Remove the module from the connector.

To reassemble your device, follow these instructions in reverse order.