



Huawei Union Camera Replacement

This guide will show you how to replace the Camera for the Huawei Union in a few short and simple steps.

Written By: Brittany Achor



INTRODUCTION

Use this guide if the Huawei Union's camera will not work properly.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery



- Wedge your thumb nail, or the flat end of a spudger, into the bottom left corner and pry off.

Step 2



- Use the flat end of a spudger, or fingernail, to lift up the battery and pull out.

Step 3 — Camera Lens Panel




- Remove the thirteen 3mm Phillips #00 screws from the back panel.

Step 4



- Use the flat end of a spudger to pry off the back panel.

Step 5 — Camera

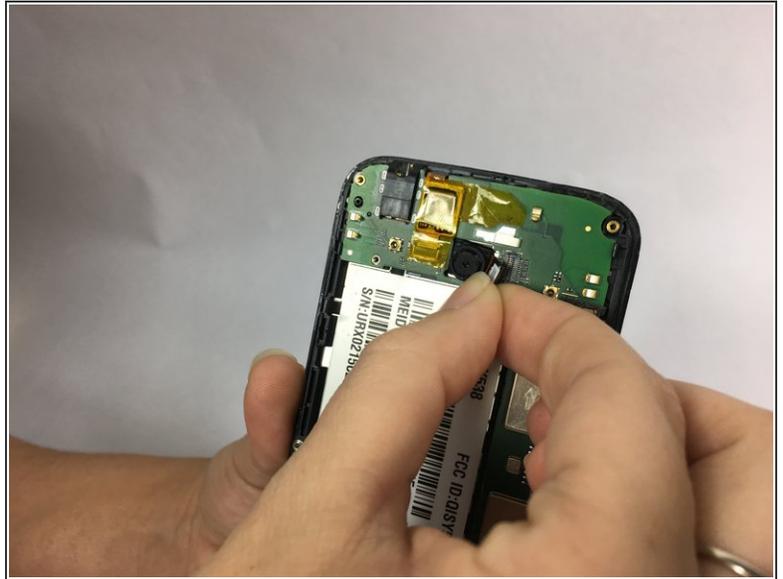

- Use the flat end of a spudger to disconnect the camera from the motherboard.
- Pull the camera out to remove.

To reassemble your device, follow these instructions in reverse order.