




# Dell Latitude E7470 RAM Replacement

Step by step guide to replace the RAM of a Dell Latitude E7470.

Written By: Hyperion

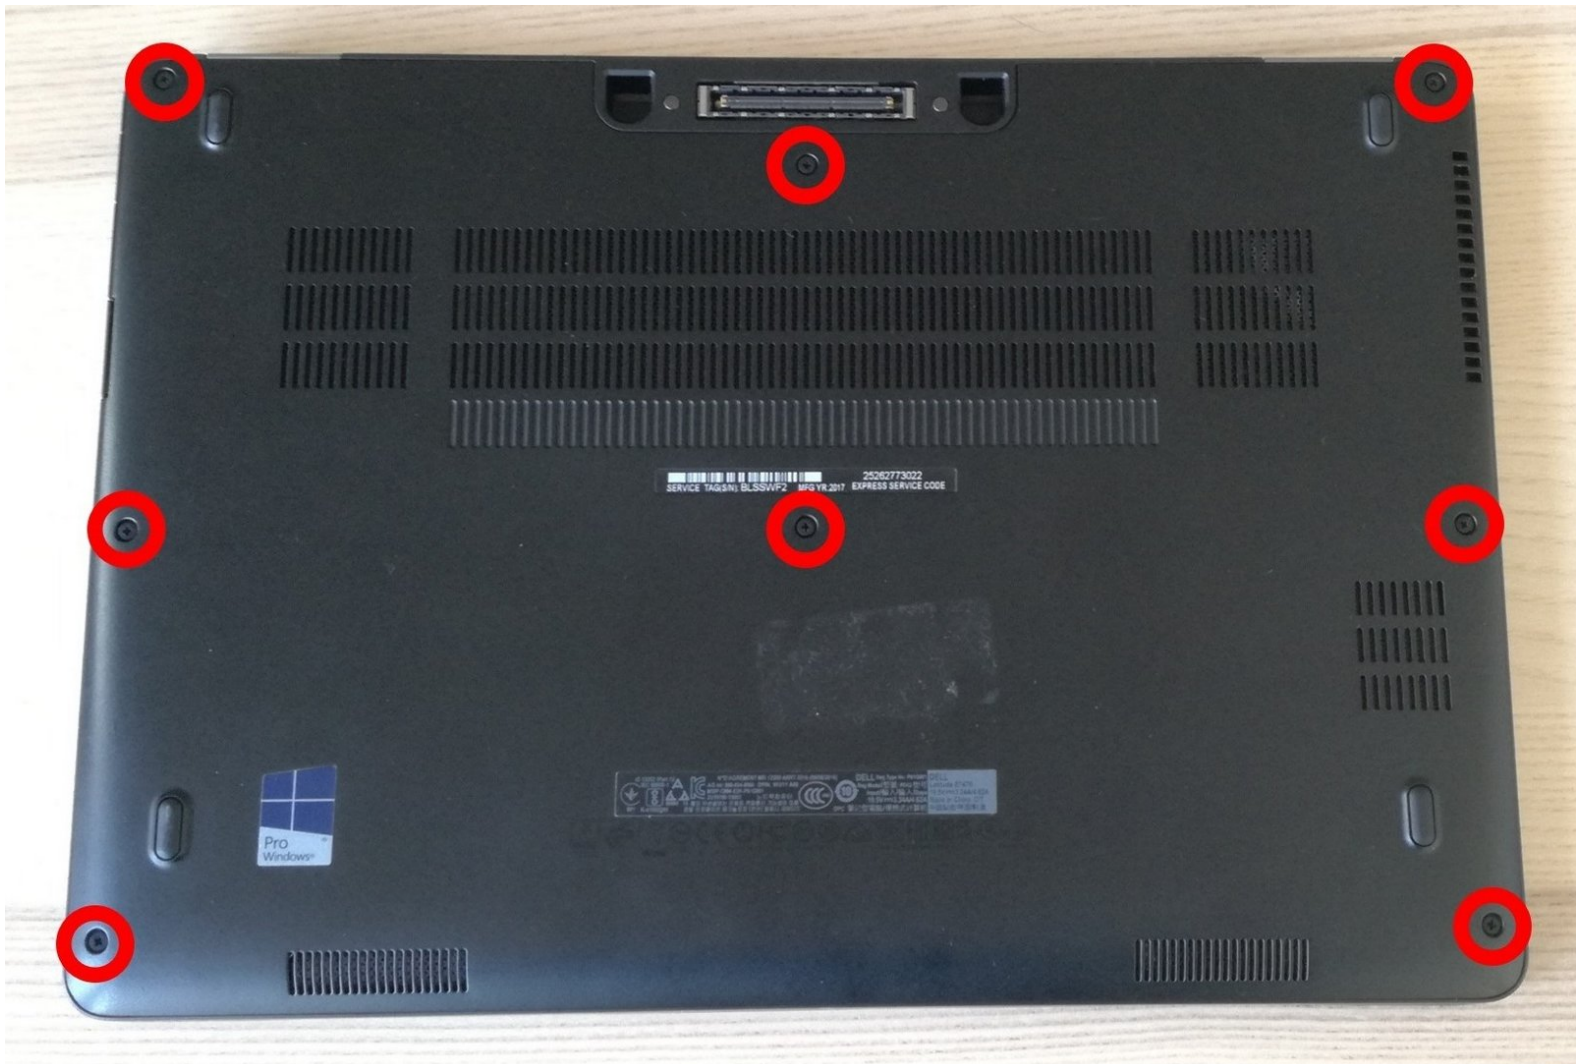



## TOOLS:

- [Phillips Size 0 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Anti-Static Wrist Strap](#) (1)



## PARTS:


- [New Item](#) (1)

## Step 1 — Remove cover




- Start by removing the 8 screws circled in red in the photo with the Philips # 0 screwdriver.
- Then, using the iFixit Opening Picks, lift up from the dock connector end. Unclip it gently.

## Step 2 — RAM replacement

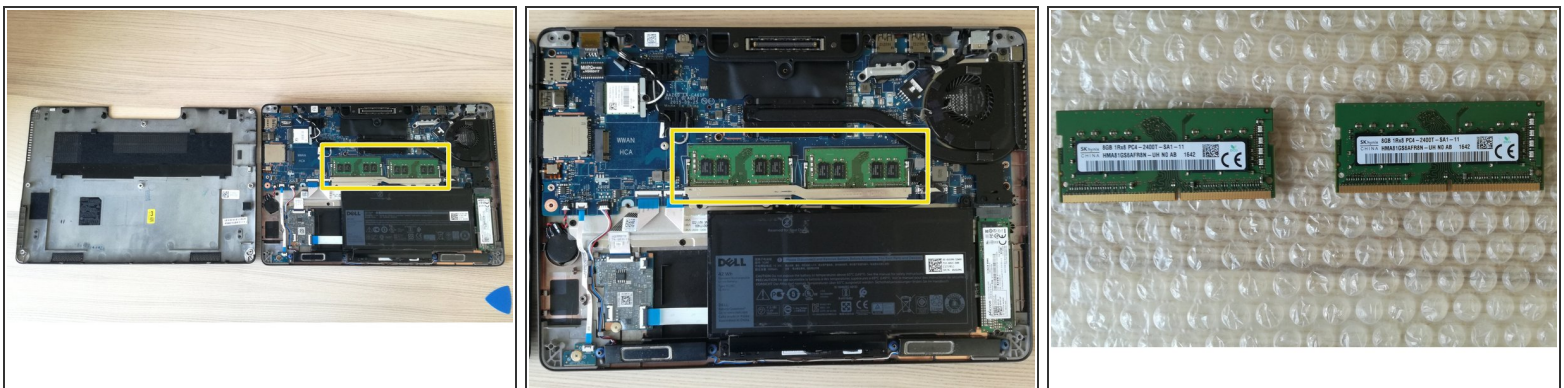

- After removing the cover, locate the slots for RAM in the computer. There are 2 of them.

 Attention, only the DDR4 memory in portable format is compatible with the motherboard of this PC!

To reassemble your device, follow the instructions in reverse order.