


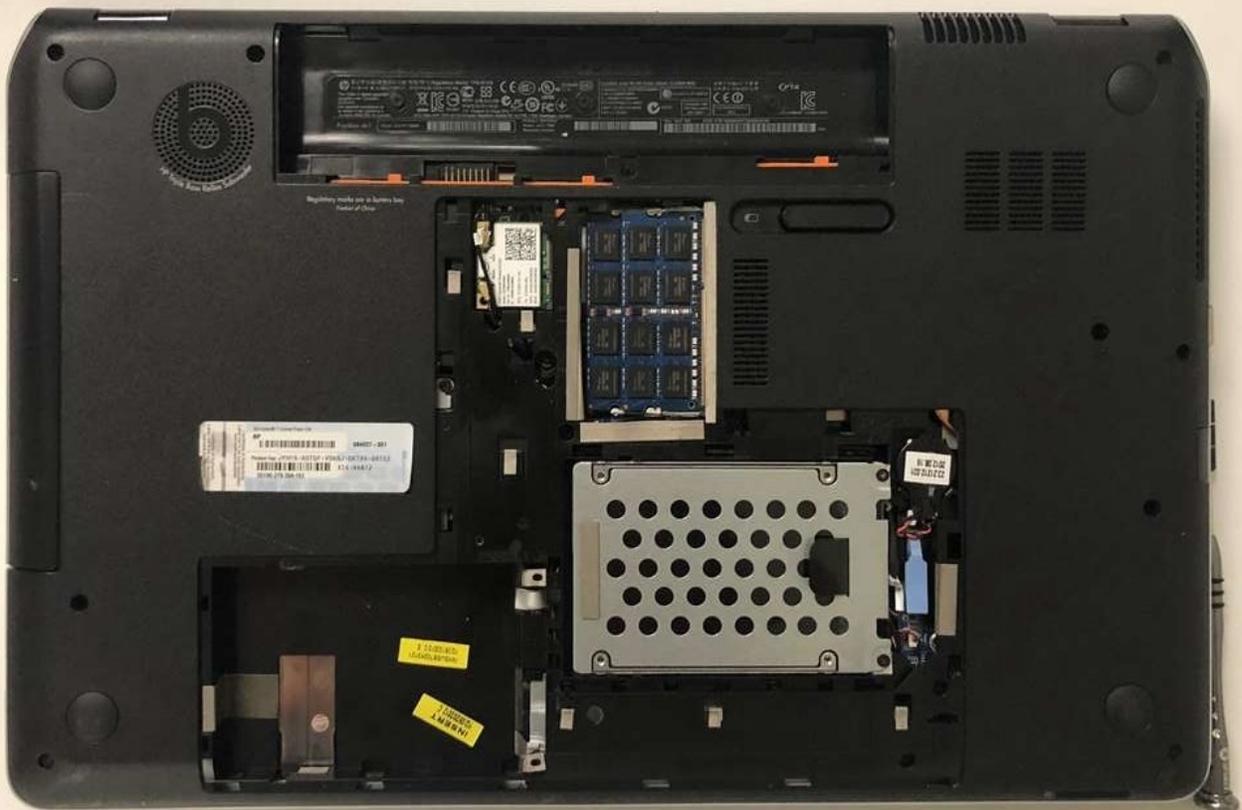

HP Pavilion dv7t-7000 RAM Replacement

This is a RAM replacement for HP Pavilion dv7t-7000

Written By: Afnan



INTRODUCTION

This is a RAM replacement for HP Pavilion dv7t-7000.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- Turn the computer off and disconnect it from all power sources.

Step 2

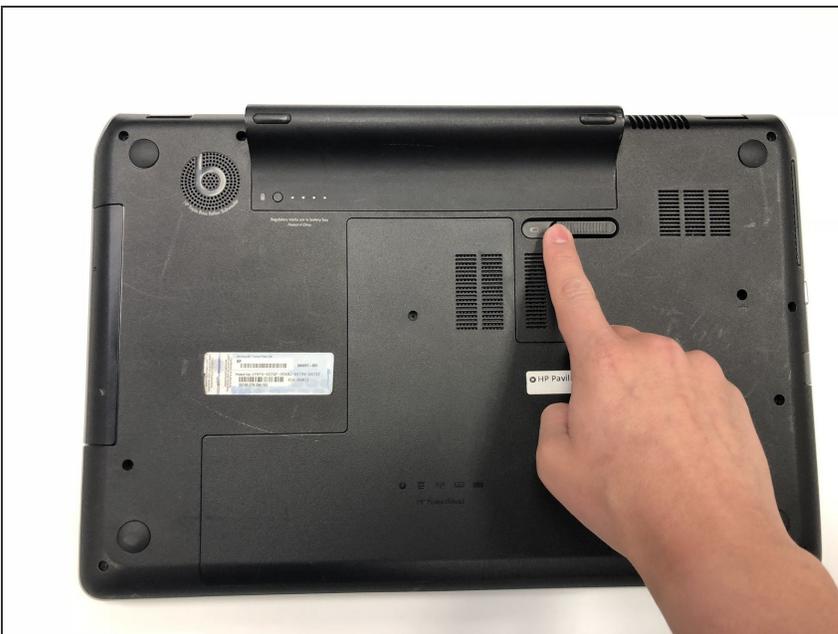

- Slide the battery release switch to the left.

Step 3

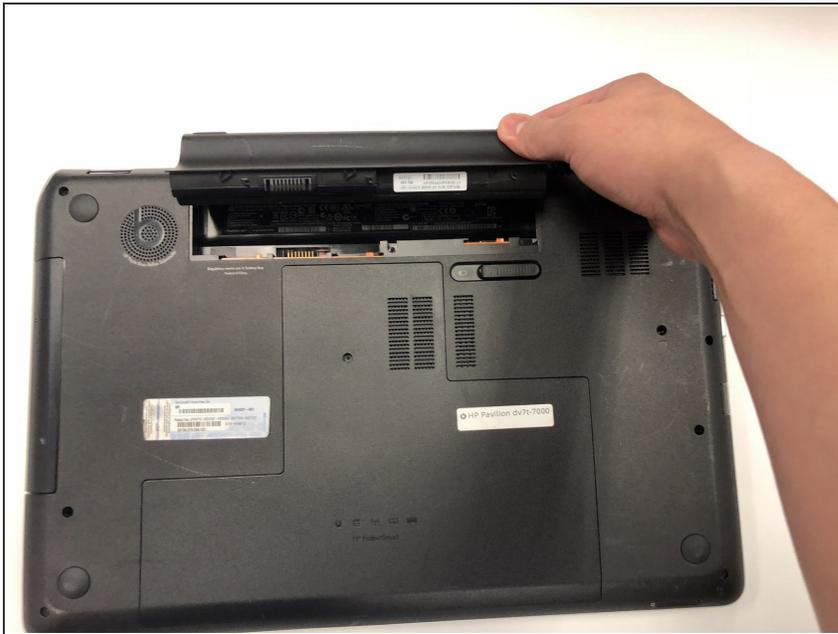


- Hold the release switch all of the way to the left and your other hand to pull the battery out.

Step 4 — Back Panel





- Unscrew the single Phillips #00 screw.
- ⓘ Screw will not come out, it is connected to the panel

Step 5

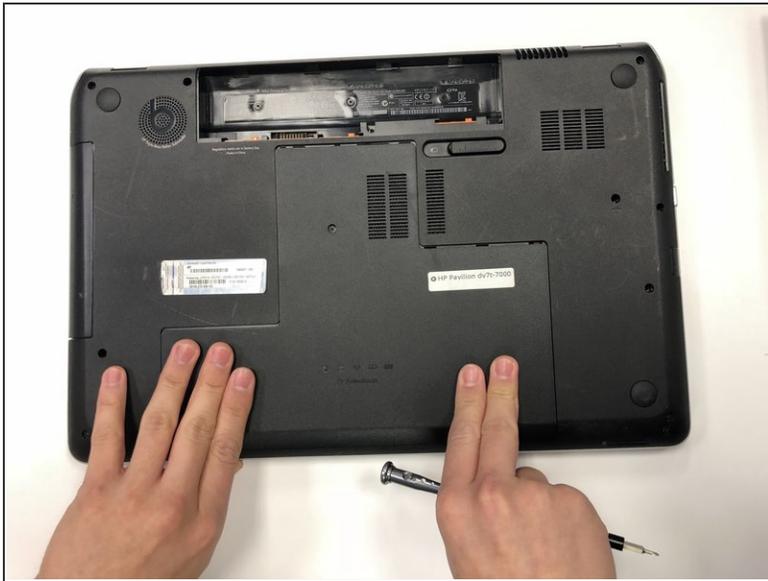

- Remove service hatch by sliding away from the computer and lifting up.

Step 6 — RAM

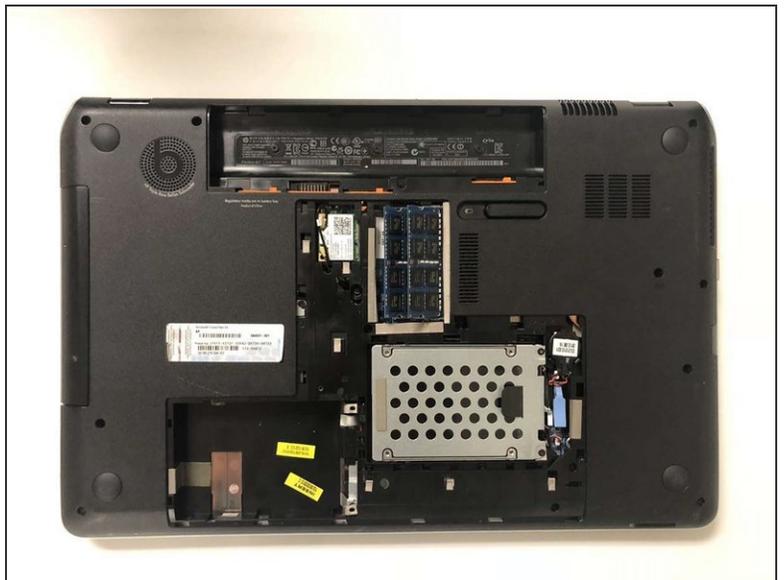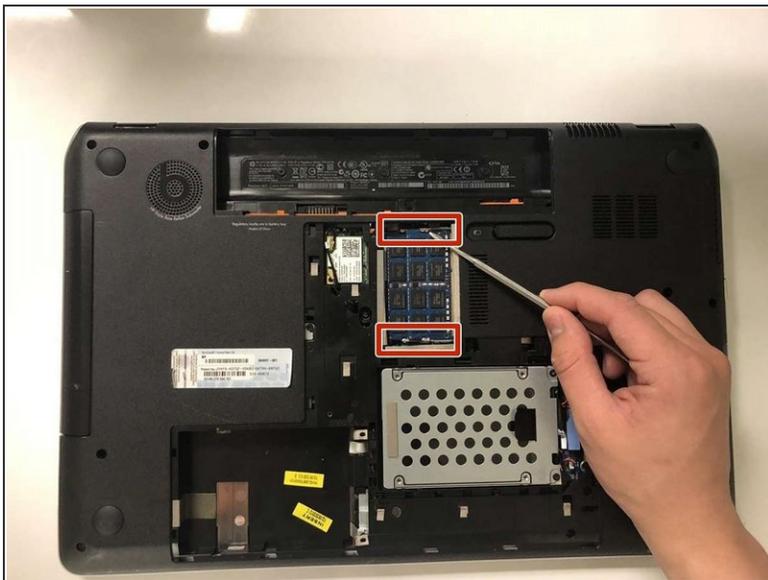

- Push the retraining springs away from the RAM at the same time to unlock the RAM.

Step 7



- Pull the RAM out.
- Follow the same procedure for the additional RAM.

To reassemble your device, follow these instructions in reverse order.