



Tt Esports Poseidon Z RGB KB-PZR-KLBRUS-06 Motherboard Replacement

This guide will show you how to replace the motherboard.

Written By: Marta Darmanyman



INTRODUCTION

The motherboard is the central processing unit for the keyboard. This guide will help you replace the motherboard in your keyboard. You will need plastic opening tools, and a screw driver with a J1 bit.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [iFixit screwdriver with a J1 bit](#) (1)
-

Step 1 — Panel




- Flip the keyboard over.

Step 2




- Remove the three JIS #1 screws from the back cover.

Step 3

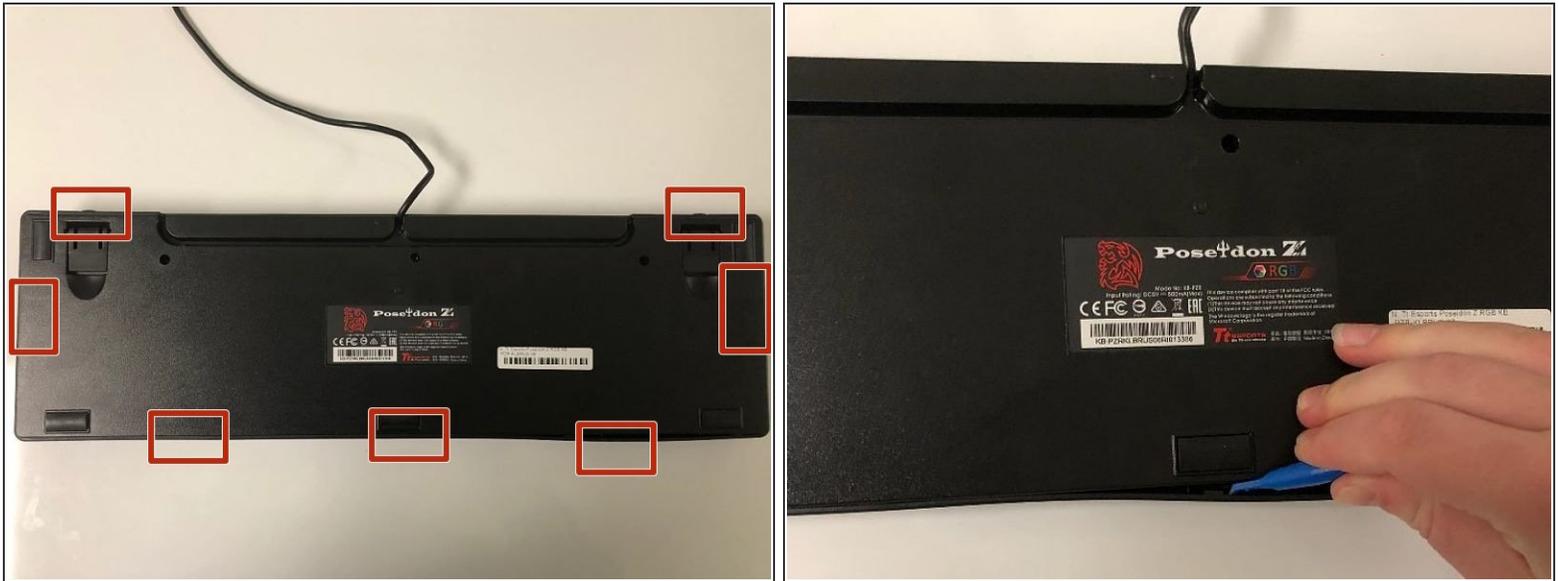


- Pry at these points with a plastic opening tool to unclip the two halves of the keyboard case.

Step 4

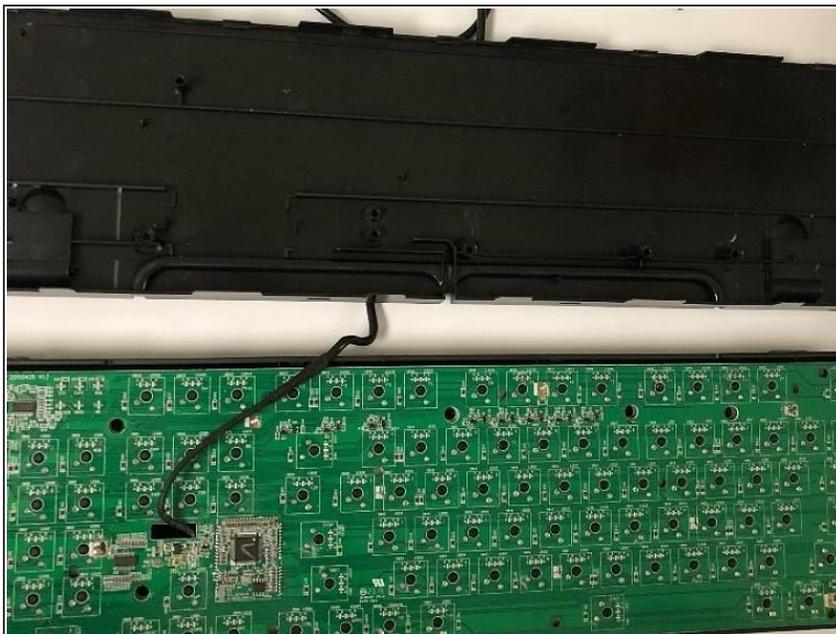

- Pull apart the two parts of the panel to expose the motherboard and keys.

Step 5 — Keys

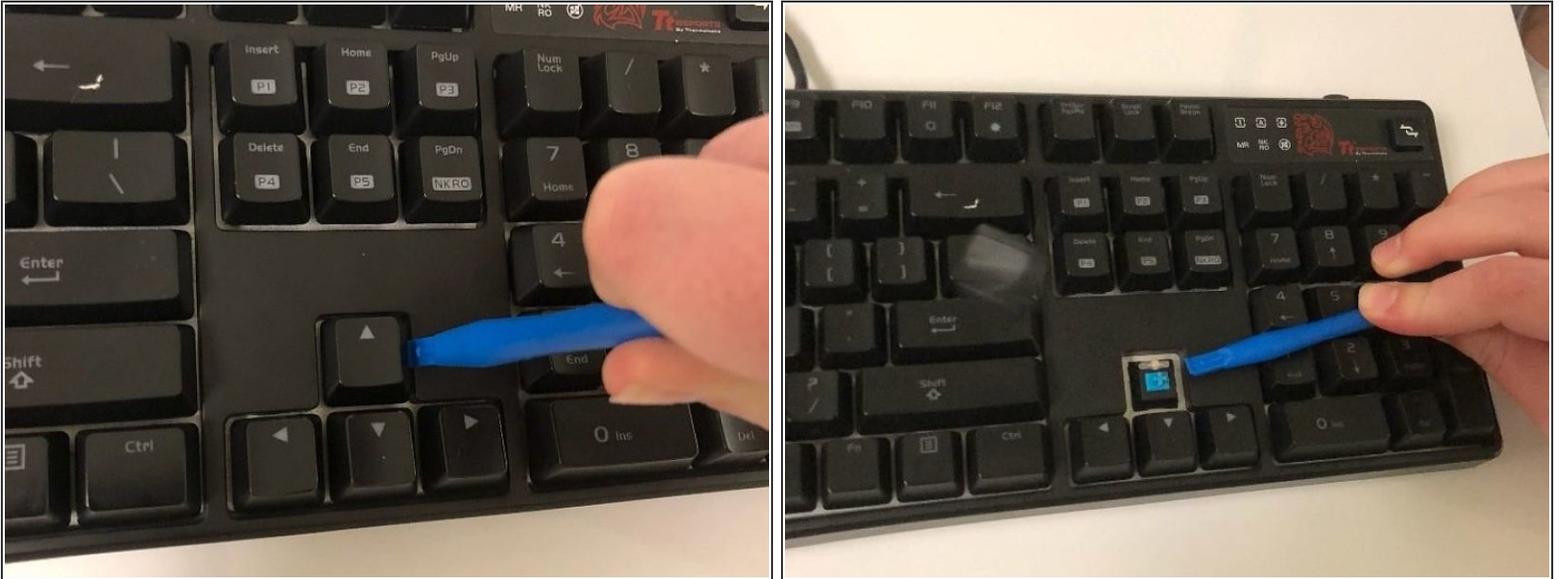

- Use a plastic opening tool to pry off every key.

Step 6



- The space, +, enter, shift, insert, and backspace keys all have metal parts which might make it a little harder to remove.

i Pull these keys to the side and up.

Step 7 — Motherboard



- Now that the motherboard has been removed from the keyboard, you can put a new motherboard in place of your broken one.

To reassemble your device, follow these instructions in reverse order.