

Dell Inspiron 17-5748 Keyboard Replacement

This guide will show how to access and replace...

Written By: Justine Vaca



INTRODUCTION

This guide will show how to access and replace the keyboard in this laptop. Simple tools are required. Be gentle when removing parts with ribbon cables.



TOOLS:

Metal Spudger (1)



PARTS:

Dell Inspiron Keyboard - V9F14 (1) Dell Inspiron Keyboard - K8X85 (1)

Step 1 — Battery



- Flip the laptop upside down.
- Locate the battery lock latches.

Step 2



 Slide both lock latches to the unlocked position.

Step 3



 Lift the battery up and out of the laptop battery socket.

Step 4 — Keyboard



 Open the laptop and locate the keyboard.

Step 5





- Locate the 5 keyboard tabs at the side of the keyboard closest to the screen.
- Using a metal spudger, gently pry the keyboard tabs inwards until they loosened. You should hear a click.


Step 6






- 1 Do not remove the keyboard completely. The ribbon cable underneath, attaching it to the motherboard, must still be detached.
 - Lift the keyboard partially and flip it over.

Step 7

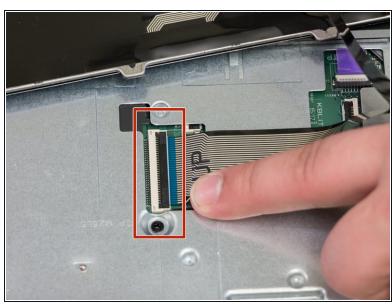

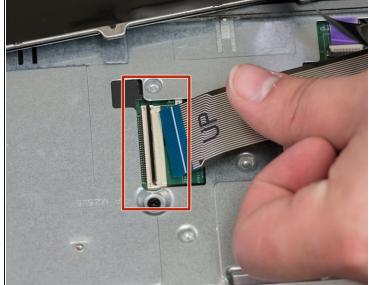

- Detach the ribbon cable from the motherboard by tilting up the black clip, releasing the cable.
- Gently detach the cable and the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.